

vtech[®]

User's Manual

Zoo Jamz Guitar[™]



© 2016 VTech
All rights reserved
Printed in China
91-003181-003 US

Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.

Preschool Learning™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning™**, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,


Your friends at VTech®

To learn more about VTech® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Zoo Jamz Guitar™**!

The **Zoo Jamz Guitar™** is an endlessly entertaining musical toy that your child will love! Join the animal band by playing the giraffe guitar and switch between acoustic, electric or distortion styles. Add fun sounds to the music or create your own melody by pressing the light-up buttons and plucking the strings!

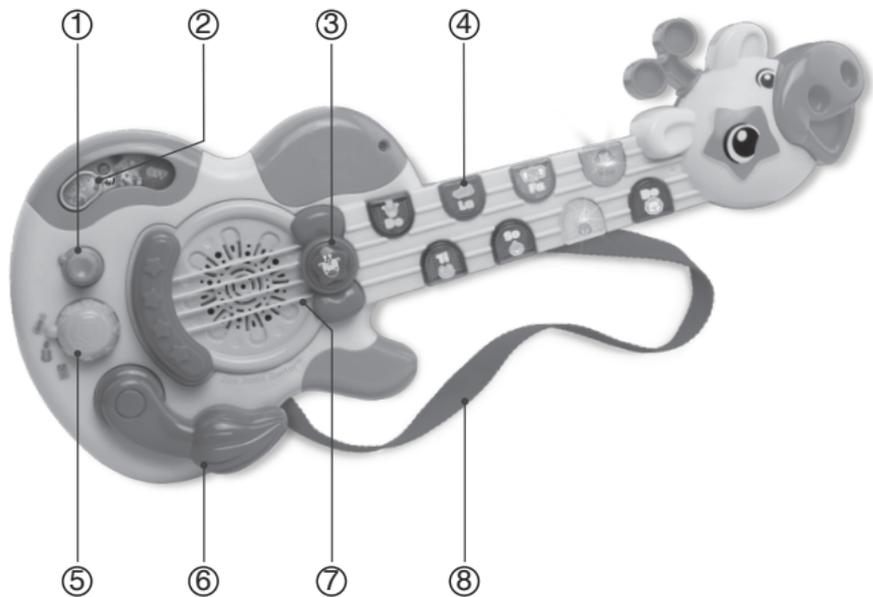

- | | |
|-------------------------|----------------------|
| ① VOLUME CONTROL SWITCH | ② MODE/OFF SWITCH |
| ③ ANIMAL BAND BUTTON | ④ 8 LIGHT-UP BUTTONS |
| ⑤ GUITAR STYLE SWITCH | ⑥ WHAMMY BAR |
| ⑦ STRINGS | ⑧ GUITAR STRAP |

INCLUDED IN THIS PACKAGE

- One VTech® Zoo Jamz Guitar™
- One guitar strap
- User's manual

WARNING:


All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this user's manual as it contains important information.

ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

Unlock the packaging locks:

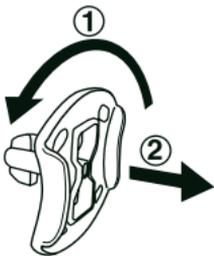


- ① Rotate the packaging locks counterclockwise 90 degrees.
- ② Pull out the packaging locks.

ASSEMBLY INSTRUCTIONS

With the VTech® Zoo Jamz Guitar™, safety comes first. To ensure your child's safety, adult assembly is required.

Add the strap by attaching each end to the posts located on the back of the guitar.

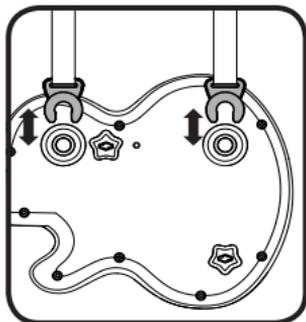

WARNING:

While the included guitar strap meets all safety requirements for the age grade of this product, we recommend children only use the strap over their shoulder rather than around their neck. Close supervision is suggested while your child is using the guitar with the strap attached. If you are unable to monitor your child, remove the guitar strap.


ATTENTION :

Bien que la sangle de guitare incluse respecte tous les impératifs de sécurité des jouets de cette tranche d'âge, nous recommandons de ne l'utiliser qu'en bandoulière et non autour du cou. Si le jouet n'est pas utilisé sous la surveillance directe d'un adulte, nous vous suggérons de retirer la sangle.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the top of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new "AA" (LR6/AM-3) batteries into the main unit following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

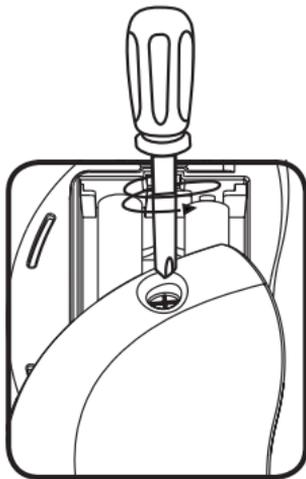

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES


1. MODE/OFF SWITCH

Slide the **MODE/OFF SWITCH** to enter a mode. Slide the switch to **OFF** to turn the unit off.




2. 8 LIGHT-UP BUTTONS

Press the **8 LIGHT-UP BUTTONS** to hear music, animal sounds and specific chords. Lights will flash with the music.

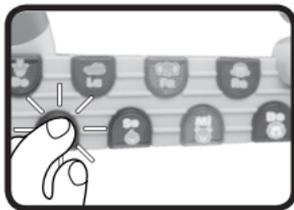


3. ANIMAL BAND BUTTON

Press the **ANIMAL BAND BUTTON** to hear the giraffe sing with the lion from the **Zoo Jamz Microphone™** and the zebra from the **Zoo Jamz Piano™** (each sold separately).

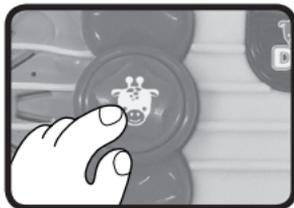

4. STRINGS

Pluck the **STRINGS** to hear different sound effects and add them to the songs or melodies.

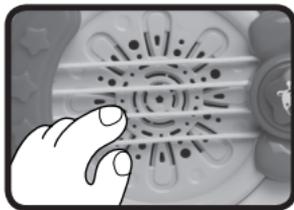

5. WHAMMY BAR

Move the **WHAMMY BAR** to hear special guitar sound effects.



6. GUITAR STYLE SWITCH

Turn the **GUITAR STYLE SWITCH** to hear three different guitar styles: acoustic, electric and distortion.



ACTIVITIES

Mode 1: Music Mode



Slide the **MODE/OFF SWITCH** to **Music Mode** to enter this activity. Press any **LIGHT-UP BUTTON** to play a sung song. Press the **LIGHT-UP BUTTONS** to add fun animal sounds or pluck the **STRINGS** to add musical sounds to the melody. When the song is over, press the button again to sing along to the melody without the lyrics.

Mode 2: Silly Song Mode



Slide the **MODE/OFF SWITCH** to **Silly Song Mode** to enter this activity. Press any **LIGHT-UP BUTTON** to choose a melody. While the melody is playing, press the **LIGHT-UP BUTTONS** to add silly “La” sounds to the music. When the song is over, press the button again to hear the same melody. While the melody is playing, press the **LIGHT-UP BUTTONS** to add fun animal sounds.

Mode 3: Composer Mode



Slide the **MODE/OFF SWITCH** to **Composer Mode** to enter this activity. Press the **LIGHT-UP BUTTONS**, pluck the **STRINGS**, move the **WHAMMY BAR** or use the **GUITAR STYLE SWITCH** to compose your own melody.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by going to our web site at www.vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.