

Dear Parent:

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Smart Start**® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally - play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Smart Start**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

Your Friends at VTech®


*To learn more about **Smart Start**® and other VTech® toys, visit*

www.vtech.com

INTRODUCTION

Thank you for purchasing the **VTech® Touch & Turn Tunes™** learning toy!

The **VTech® Touch & Turn Tunes™** is an interactive floor toy for toddlers 9 months and up. By pushing, pulling, pressing and turning the manipulative features, toddlers can direct the play by changing the responses from the four animal characters while strengthening fine motor skills. Press down on the four animals for fun phrases, sounds and music.

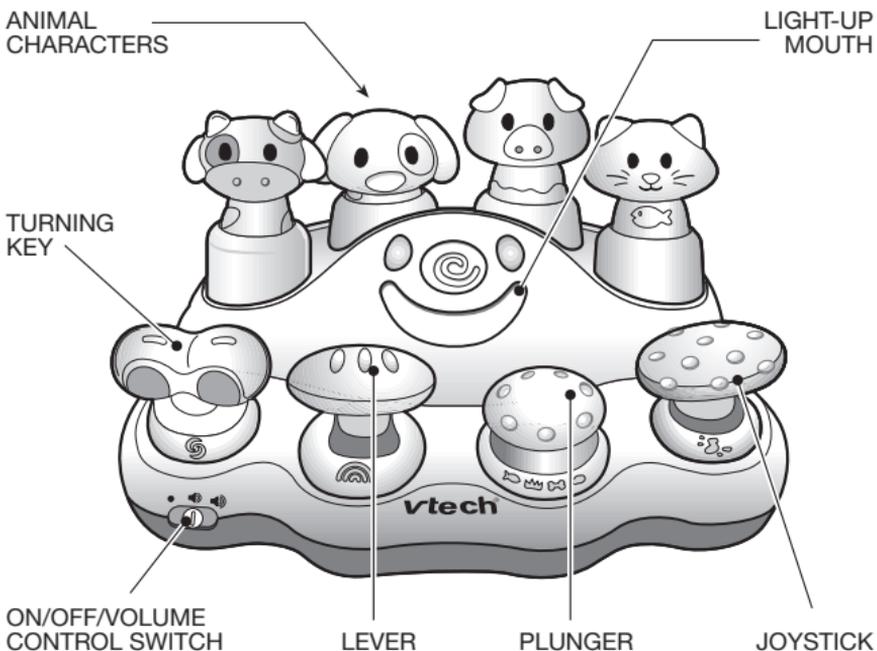

INCLUDED IN THIS PACKAGE


- One VTech® Touch & Turn Tunes™ learning toy
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new "AA" (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

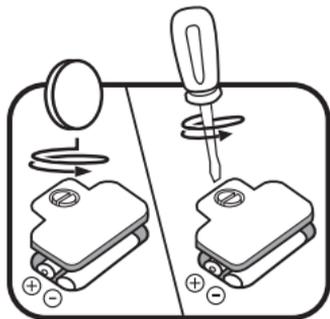

BATTERY NOTICE


- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or the **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** (●) position.

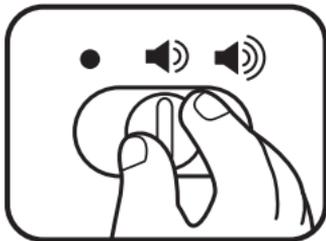


2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Touch & Turn Tunes™** learning toy will automatically power-down after several minutes without input. The unit can be turned on again by pushing, pulling or turning any of the manipulative features or by pressing any of the animal characters.

3. FOUR MODES OF PLAY

The four modes of play include **Animal Names & Sounds**, **Colors**, **Associations** and **Music**. Push, pull, press and turn the four manipulative features to select the mode of play.

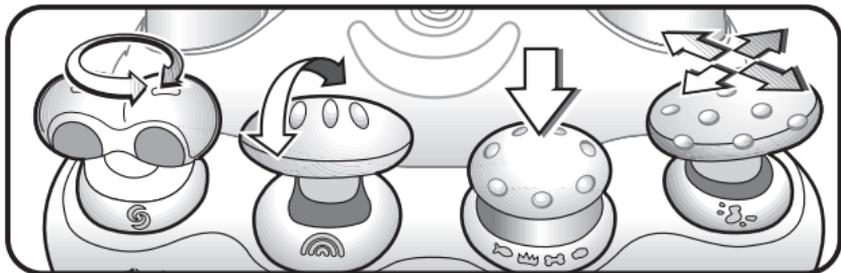

ACTIVITIES

1. When the unit is first turned on, it will automatically default to the music mode.
2. Select the mode of play by pushing, pulling, pressing or turning one of the four manipulative features. Choose from the following modes.


Turning Key - Animal Names & Sounds

Lever - Colors


Plunger - Associations

Joystick - Music

Once the mode has been selected, you will hear an introductory phrase describing the learning activity. Then press down on the animal characters to hear a response related to the selected mode. The light-up mouth will flash with all the sound.

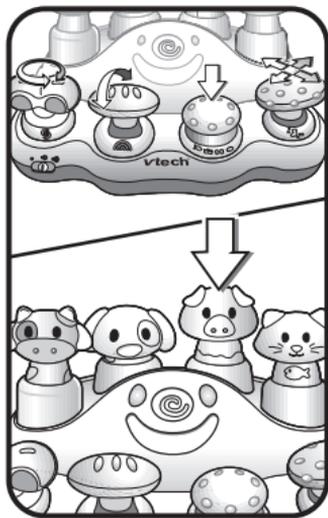


3. In the music mode, press down on the animal characters to hear melodies. Press on the animal characters while a melody is playing to hear the animal sounds added randomly to the melody.

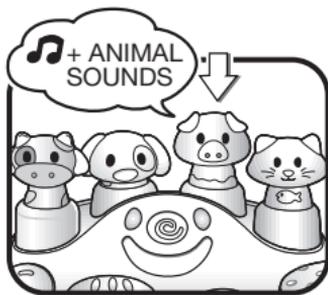

4. In the music mode, push, pull, press or turn the four manipulative features while a melody is playing to hear the following responses.

Turning Key

Turn the key clockwise to increase the pitch or turn counter-clockwise to decrease the pitch of the melodies.

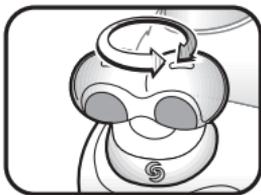


Lever

Push up to increase the tempo or press down to decrease the tempo of the melodies.




Plunger

Press the plunger to hear the melody held for a short time. If you continue to hold the plunger down, the melody will be held until the plunger is released.

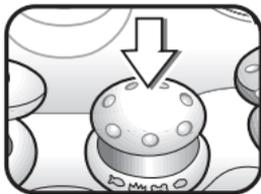

Joystick

Move the joystick to add animal sounds for a cool rapping effect.

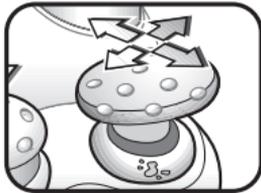

Remark: While a melody is playing, the mode cannot be changed.

MELODY LIST

1. Old MacDonald
2. Bingo
3. Three Blind Mice
4. Turkey in the Straw
5. Teddy Bears' Picnic
6. Shoo Fly Don't Bother Me
7. Skip to my Lou
8. Polly Wolly Doodle

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, and a service representative will be happy to help you.

For information on this product warranty, please call **VTech**[®] at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

IMPORTANT NOTE:

Creating and developing **Smart Start**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-800-267-7377 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna
- Relocate this product with respect to the receiver
- Move this product away from the receiver