

vtech[®]

Instruction Manual


Pop & Sing Animal Train™



INTRODUCTION

Thank you for purchasing the **Pop & Sing Animal Train™** .

All aboard! Join the animal characters on a fun journey while learning about animals and fun facts. Press the button, flip the switch and turn the gear for fun animal surprises. The train is ready to go, all aboard!

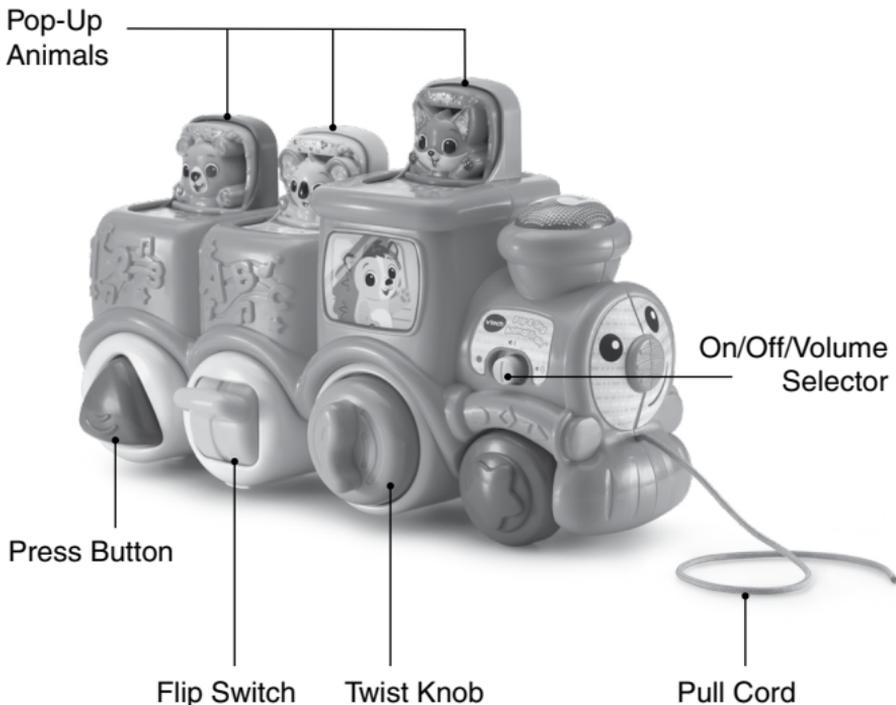

INCLUDED IN THE PACKAGE

- Pop & Sing Animal Train™
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.


ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

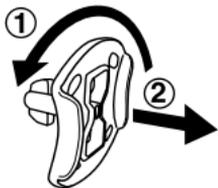


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

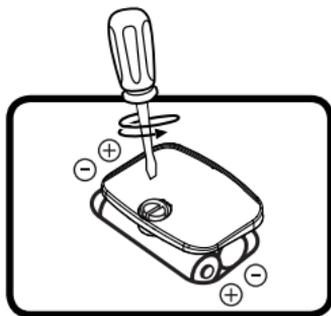

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.

- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low Volume (🔊) or the High Volume (🔊🔊). You will hear sounds, phrases and a song. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off** ● position.



2. Pull Cord

To convert the unit from a push toy to a pull toy, remove the pull cord from the storage compartment on the bottom of the train. For your child's safety, we suggest you store the pull cord in the compartment until your child is walking.



3. Automatic Shut-Off

To preserve battery life, the **Pop & Sing Animal Train™** will automatically shut off after approximately 75 seconds without input. The unit can be turned on again by pressing any button.


NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES


1. Press Button

Press the **Button** to pop up the bear. You will hear the animal name and a playful phrase as well as a fun song, sounds and tunes. Press the **Button** after the animal is already popped up to hear a cute phrase or a tune. The light will flash with the sounds.

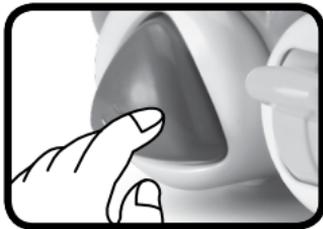

2. Flip Switch

Flip the **Switch** to pop up the koala. You will hear the animal name and a playful phrase as well as a fun song, sounds and tunes. Flip the **Switch** after the animal is already popped up to hear a cute phrase or a tune. The light will flash with the sounds.

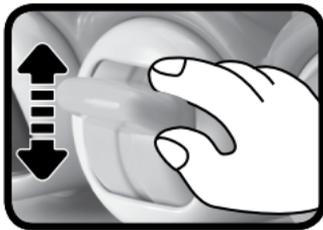

3. Twist Knob

Turn the **Knob** to pop up the fox. You will hear the animal name and a playful phrase as well as a fun song, sounds and tunes. Turn the **Knob** after the animal is already popped up to hear a cute phrase or a tune. The light will flash with the sounds.



4. **Pop-Up Animals**

Press the **Pop-Up Animals** back into the train to hear a playful phrase, a tune and fun sounds. The light will flash with the sounds.



5. **Motion Sensor**

Pull or push the train to hear fun train sounds and melodies. The light will flash with the sounds.



MELODY LIST

1. Grandfather's Clock
2. Teddy Bears' Picnic
3. Here We Go 'Round the Mulberry Bush
4. Daring Young Man on the Flying Trapeze
5. Toyland
6. Good Morning Merry Sunshine
7. London Bridge
8. Bear Went Over the Mountain
9. Humpty Dumpty
10. Do You Know the Muffin Man?
11. Pussy Cat, Pussy Cat
12. On Top of Old Smokey

13. Did You Ever See a Lassie?
14. Oh Where, Oh Where Has My Little Dog Gone?
15. While Strolling Through the Park One Day
16. Diddle, Diddle Dumpling

SONG LYRICS

Song 1

All aboard, I'm ready to go,
I blow my little whistle!
Chug-a-chug away I go!
Wave as I roll by.

Song 2

The bear on the train plays peek-a-boo, peek-a-boo, peek-a-boo.
The bear on the train plays peek-a-boo, all day long!

Song 3

Peek-a-boo, peek-a-boo, I see you koala!
I see your big ears and cute smiley face,
I'm happy to see you today!

Song 4

Oh what a surprise, there's a fox hiding inside!
Peek-a-boo little fox, I missed you.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. A service representative will be happy to help you. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5549
Product Name: Pop & Sing Animal Train™
Responsible Party: VTech Electronics North America, L.L.C
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE
D OPERATION.**

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

