



vtech[®]

Parent's Guide

 
Prance & Rock Learning Unicorn™



91-003259-025  

INTRODUCTION

Thank you for purchasing the **Prance & Rock Learning Unicorn™**. The unicorn easily transforms from a rocker to a ride-on. The two chunky handles are easy for toddlers to grasp when riding on the unicorn. Press one of the two light-up buttons and to hear playful songs and imaginative phrases. Rocking or riding on the unicorn triggers the motion sensor which responds with fun melodies and sounds.

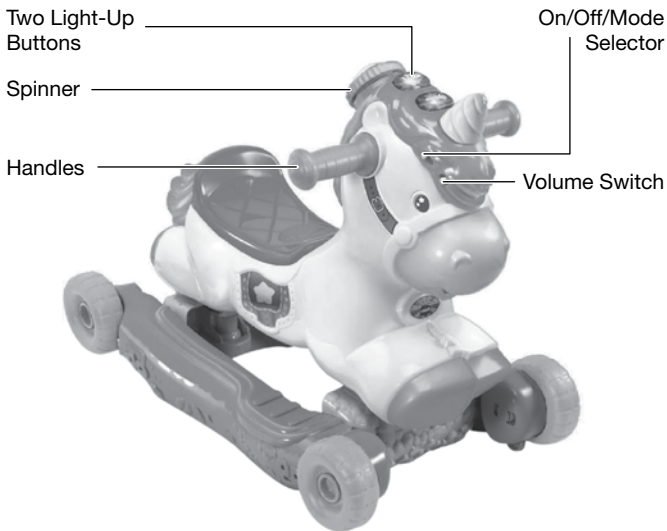

INCLUDED IN THIS PACKAGE



One **Prance & Rock Learning Unicorn™**



Four wheels



Two rockers



One front link bracket



Two handles



One back link bracket



8 small screws



Two plastic screws

- One sticker sheet
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parent's guide as it contains important information.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE :

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

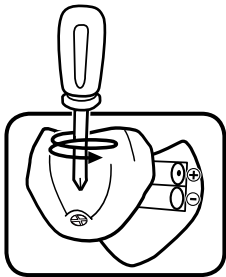

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.



WARNING!

Safety comes first with the **Prance & Rock Learning Unicorn™**: Adult assembly required. The maximum weight limit is 42 pounds. Children over this weight should not use the ride on. Not to be used by children over 36 months. Insufficient strength. This product includes electronics and is not waterproof.

This package contains eight small screws. For your child's safety, do not let your child play with the toy until it is fully assembled.

 
This toy should be used in a safe area, for example, indoors, on flat level surfaces and away from any hazards such as cars, stairs, water etc.

Not for use on sidewalks, on pavement or near traffic.

Adult supervision is advised.


Regularly check if the eight screws are securely tightened to link the brackets and rockers.

Please place the stickers on the unicorn securely as indicated below:

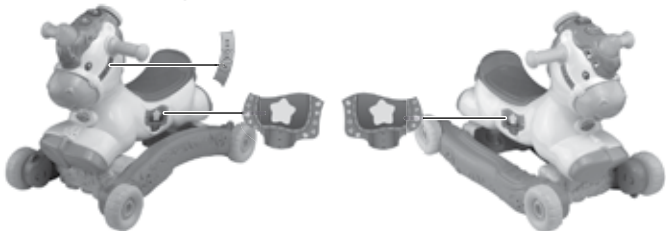


ASSEMBLY INSTRUCTIONS

 
1. Insert the four wheels into the two rockers as shown. You will hear the wheels click into place to indicate they are attached securely.

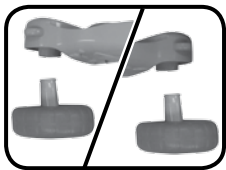

 
2. Insert the front link bracket and the back link bracket onto the inside of the rockers. Secure the brackets to the rockers with the small screws provided.

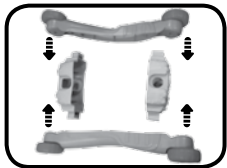

 3. Insert the **Prance & Rock Learning Unicorn™** onto the support brackets as shown.

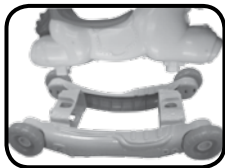

 4. Insert the two plastic screws into the holes in the front link and back link brackets. Turn the screws clockwise to secure. You will hear the locks click into place to indicate they are attached securely.

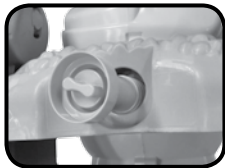


5. Insert the two handles into the sides of the unicorn's head. You will hear the handles click into place to indicate the handles are attached securely. Once the handles have been attached, they cannot be removed.



TRANSFORM FROM ROCKER TO RIDE-ON MODE

 
1. To change the unicorn from rocker mode to ride-on mode, press and hold the lock next to the plastic screws and turn the screws counterclockwise. Remove the rocker panel and turn it over so the wheels are on the ground. Reinsert the two plastic screws into the holes in the front link and back link brackets. Turn the screws clockwise to secure.

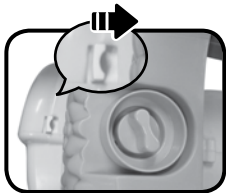

PRODUCT FEATURES


1. On/Off/Mode Selector

 To turn the unit **On**, slide the **On/Off/Mode** selector to the Learning & Music mode 🎵 or the Adventure mode 🔍 position. You will hear a playful song and a friendly phrase. To turn the unit **Off**, slide the **On/Off/Mode** selector to the **Off** ● position.

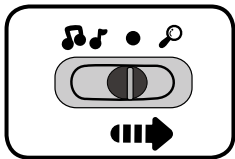

2. Volume Switch

 To adjust the volume, slide the **Volume** switch to the **Low Volume** 🗣️) or the **High Volume** 🗣️)) position.

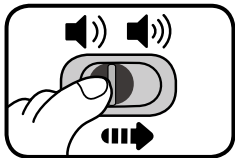

3. Automatic Shut Off

 
To preserve battery life, the **Prance & Rock Learning Unicorn™** will automatically power down after approximately 45 seconds without input. The unit can be turned on again by pressing any button, or by turning the spinner on the unicorn's head.

NOTE: If the unit powers down during play, we suggest changing the batteries.

ACTIVITIES

1. Light-Up Buttons

Press the **Light-Up** buttons to learn about colors and to hear fun songs and music in Learning & Music mode. In Adventure mode you will hear playful phrases, sounds and songs. When a melody is playing, press the **Light-Up** buttons to play the melody one note at a time. The lights and horn will flash with the sounds.

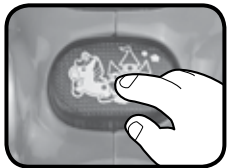

2. Spinner

Turn the **Spinner** to hear fun sounds and short tunes in both Learning & Music mode and Adventure mode. The lights and horn will flash with the sounds.



3. Motion Sensor

Rock or ride the unicorn to activate the **Motion Sensor**. In Learning & Music mode you will hear playful melodies. In Adventure mode you will hear a variety of fun sounds. The lights and horn will flash with the sounds. The faster you ride, the faster the lights will flash.

SONG LYRICS

Song 1

I'm a pretty little unicorn.

I prance and rock, dream and sing.

Hop onto my back and we will go on a fantastic adventure.

Song 2

What an amazing journey that was,

Flying through the sky and over the rainbow.

Where should we go on our next adventure?

Song 3

What an amazing journey that was,

Exploring castles and visiting a princess.

Playing pretend is so much fun!

MELODY LIST

1. Bicycle Built for Two
2. A-Tisket, A-Tasket
3. Little Miss Muffet
4. Roses Are Red
5. Beautiful Dreamer
6. All The Pretty Little Horses
7. Little Robin Redbreast
8. Riddle Song
9. White Coral Bells
10. Ring Around the Rosie

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program or activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, replace with an entire new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

Trade Name:	VTech®
Model:	1923
Product Name:	Prance & Rock Learning Unicorn™
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty

