



# User's Manual

## *Princess Learning Pad*



**3-6  
Years**

**vtech<sup>®</sup>**

© Disney

Visit the Disney website at [DisneyPrincess.com](http://DisneyPrincess.com)

© 2011 VTech Printed in China 91-002593-000 (美)

Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.

**Preschool Learning™** features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning™**, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,


Your friends at VTech®

To learn more about **Preschool Learning™** series and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Princess Learning Pad!**

Join Belle, Cinderella, Snow White, Aurora, Ariel, and Tiana on a learning journey full of magic! The Princess Learning Pad is a touch-sensitive toy that features a beautiful palace and ten double-sided activity cards. Your child can play without the activity cards to explore the alphabet, phonics and words or they can insert the cards into the castle to learn about numbers, music, animals, manners and more. Lights and sounds will further engage your child as they play and learn.

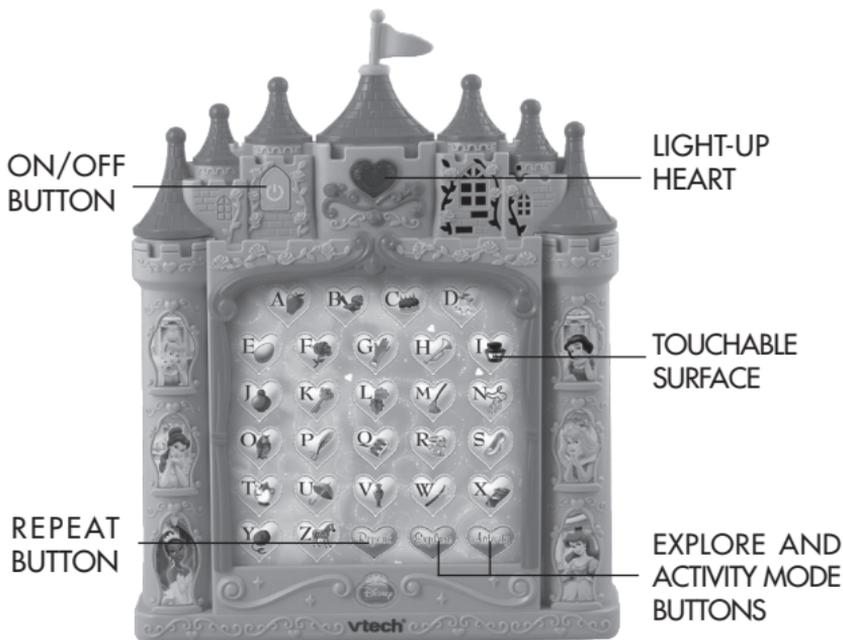

TEN ILLUSTRATED  
DOUBLE-SIDED  
ACTIVITY CARDS



VOLUME  
CONTROL  
SWITCH


# INCLUDED IN THIS PACKAGE

- One VTech® Princess Learning Pad
- One User's Manual

**WARNING:** All packing materials, such as tape, plastic sheets, packing locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep instruction manual as it contains important information.

**Unlock the packing lockers:**

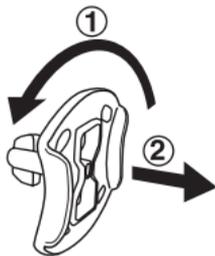


- ① Rotate the packing locker counter-clockwise 90 degrees.
- ② Pull out the packing locker.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit.
3. Install 3 new "AA" size (LR6/AM3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover.

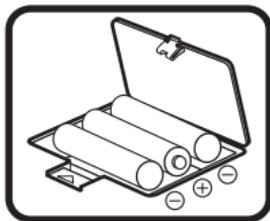


## BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

## PRODUCT FEATURES

### 1. ON/OFF BUTTON

Turn the unit **ON** by pressing the **ON/OFF BUTTON**. Press it again to turn the unit **OFF**.

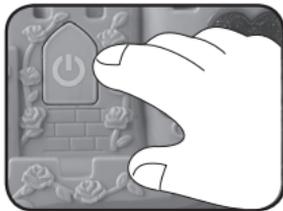

## 2. LIGHT-UP HEART

The **LIGHT-UP HEART** flashes if the player turns the Princess Learning Pad on, inserts a card, selects a mode or answers a question correctly.



## 3. TOUCHABLE SURFACE

The **TOUCHABLE SURFACE** contains touch-sensitive hotspots. Touch each hotspot to explore and learn.



## 4. MODE BUTTONS

Touch the **MODE BUTTONS** to enter the **EXPLORE** or **ACTIVITY** mode.



## 5. REPEAT BUTTON

Touch the **REPEAT BUTTON** to repeat a question or the previous phrase.




## 6. VOLUME SWITCH

Move the **VOLUME SWITCH** located on the bottom of the unit to choose high, medium or low volume.



## 7. TEN ACTIVITY CARDS

Insert a card into the slot of the learning pad to play.

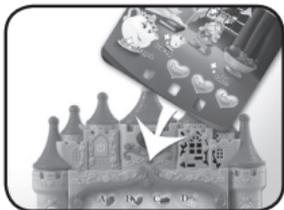

## 8. CARD STORAGE

All ten activity cards can be conveniently stored in the special compartment located on the bottom of the Princess Learning Pad.



## 9. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech®** Princess Learning Pad will automatically turn off after several minutes without input. It can be turned on again by pressing the **ON/OFF BUTTON**.

# MODES OF PLAY

## Mode 1: EXPLORE

1. When you turn on the Princess Learning Pad, it begins in **EXPLORE** mode. To access **EXPLORE** mode again, just touch the **EXPLORE** button.
2. Touch the **TOUCHABLE SURFACE** to learn about letters, phonics and words.
3. Insert a card and touch any star to learn about objects, numbers, animals, colors, shapes and more. Touch the star next to a princess to learn a little more about her.

## Mode 2: ACTIVITY

1. Touch the **ACTIVITY** button to play a game.
2. When no card is inserted, you will be asked to find a letter or an object. Press a hotspot on the **TOUCHABLE SURFACE** to answer.
3. When a card is inserted, you will be asked to answer a question about the pictures and words on the card. Touch the stars to answer.

**Note:** Please make sure that the card is fully inserted. If the activity is not working properly, please remove the card and re-insert it.

# ACTIVITY CARDS

**Dining Room:** Learn words, beginning letters and manners.

**Musical Birds:** Learn colors, music and manners.

**Wonderful Evening:** Learn words, beginning letters and manners.

**Forest Friends:** Learn animals, animal facts, beginning letters and manners.

**Seven Dwarfs:** Learn characters, beginning letters, memory skills and manners.

**Counting Animals:** Learn animals, numbers 1 - 5, counting and manners.

**Chores:** Learn words, beginning letters, memory skills and manners.

**Magic Wishes:** Learn words, beginning letters and manners.

**Glass Slipper:** Learn words, beginning letters and manners.

**In the Ocean:** Learn animals, numbers 6 - 10, counting and manners.

**Music for Ariel:** Learn animals, beginning letters, music and manners.

**Ocean Friends:** Learn animals, animal facts, beginning letters and manners.

**Aurora's Friends:** Learn words, beginning letters and manners.

**Hidden Shapes:** Learn shapes, beginning letters and manners.

**Dressing Table:** Learn words, beginning letters and manners.

**In the Kitchen:** Learn food and beginning letters.

**Stars at Night:** Learn counting, size comparison and manners.

**A Jazz Concert:** Learn musical instruments, beginning letters and manners.

**The Princesses:** Learn characters and colors.

**Dancing:** Learn characters and music.

## **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product warranty, please call **VTech**<sup>®</sup> at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

## IMPORTANT NOTE

Creating and developing **Preschool Learning**<sup>™</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

**Caution:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.