

vtech®

# User's Manual



## Classic Stories



THE LEARNING TABLET

# InnoTAB®

*Dear Parent,*

At **VTech**®, we know how much you enjoy staying on top of the hottest trends and having the most high-tech gadgets around. We also know that your kids feel the same way. With that in mind, we developed **InnoTab**®, a multi-function tablet just for kids that brings all the magic of Mom and Dad's tablets into a fun-filled learning experience that fits their active lifestyles.

**InnoTab**® is the next generation of learning toys for children that has a rich library of cartridges and software with interactive animated e-Books, learning games, creative activities along with a wide variety of additional apps. It features a brilliant color LCD touch screen, a tilt-sensor for game control, as well as a USB port for downloads, SD card slot for memory expansion and a headphone jack, all housed in a sleek, durable and compact design for easy portability.

When playing with **InnoTab**®, kids can look, listen, touch and tilt their way through activities to discover a world of fun whenever they want and wherever they go. Through interactive play, your child will develop skills in reading, math, social studies, science, music, creativity, and more—which we know is important to you.

At **VTech**®, we are dedicated to helping your children uncover their talents. We thank you for your trust in our products that encourage active minds through imaginative play.

*Sincerely,*

Your friends at **VTech**®

To learn more about **VTech**® toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION

The Frog Prince, Pinocchio and The Three Little Pigs are three classic and timeless stories. Children delight in the unique tales and parents appreciate the positive messages they convey. In this InnoTab® cartridge, each story includes three different reading levels. Your child can progress through the different levels while building reading skills. Three fun learning games feature characters from the stories. A record feature allows parents or children to record themselves reading the story.

## INCLUDED IN THIS PACKAGE

1 InnoTab® cartridge – Classic Stories

1 InnoTab® cartridge user's manual

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**ATTENTION:** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**Note:** Please keep the user's manual as it contains important information.

## GETTING STARTED

### STEP 1: Insert the InnoTab® Cartridge

Make sure the unit is turned off. Insert the InnoTab® cartridge firmly down into the cartridge slot located on the back of the unit and push until it clicks into place as shown in the below image.



## STEP 2: Select the Cartridge Icon

Touch the cartridge icon on the **InnoTab®** desktop.

**Note:** Your **InnoTab®** desktop may look slightly different from the image on the right, depending on which version of **InnoTab®** you own.



## STEP 3: Choose How You Want to Play

There are six ways to play. Touch an icon to choose one.

**Pinocchio:** Read or listen to the interactive e-Book and answer questions about the story.

**The Frog Prince:** Read or listen to the interactive e-Book and answer questions about the story.

**The Three Little Pigs:** Read or listen to the interactive e-Book and answer questions about the story.

**Write with Pinocchio:** Learn and write letters in the classroom with Pinocchio.

**Help the Princess:** Use phonics to help the princess and the frog get the items they need.

**Rhyme Builder:** Lend a hand to the third little pig as he uses rhymes to build his brick house.



# THE HARD KEYS



## HOME

Exit the current activity and return to the InnoTab® desktop.



## HELP BUTTON

Replay instructions, or ask for a hint.

# SETTINGS

## Music On/Off

To turn the background music on or off, touch the **Music On/Off** icon on the cartridge menu.



Music On/Off icon

## Levels

Each story has three reading levels. When the cartridge is launched, you will be prompted to choose a reading level. Once set, the reading level can be changed in the e-Book settings for each story. Each game also has three levels of difficulty. Select a level when the game is launched. Note that the reading level and game level are set separately and are not related.



# ACTIVITIES

## E-Book

### Menu Page

The main menu has three story icons: Pinocchio, The Frog Prince, and The Three Little Pigs. After selecting a story, you will see a menu page.

**Touch:**

- The **Read the Story** icon to go to the e-Book's index page.
- The **What Happened?** icon to answer questions about the story and reinforce the learning.
- The **Story Dictionary** icon to view key vocabulary words from the story.
- The **Record** icon to record your own story.
- The **Settings** icon to adjust e-Book settings. You can turn the e-Book's vocabulary word highlights on or off, turn the background music on or off and change the reading level. The recorded voice data for that story can also be reset from here.



## Index Page

After touching the **Read the Story** icon, you'll arrive at the index page. You can start the story from the beginning or choose any page to begin. Touch the **Whole Story** icon to read the story from beginning to end. Adjust the storyteller by touching one of the icons below **Choose a Storyteller**.



## Story Page

On each story page, touch anywhere on the screen to stop the story narration and enter **Free Play** mode. When the story narration has finished, you will enter **Free Play** mode automatically.

In **Free Play**, you can touch the words one-by-one to read the story at your own pace, touch highlighted vocabulary words to hear their definitions, or touch images in the art to hear fun voices and sounds. If you don't touch the screen for a while, the story narration will continue automatically to the next page.

Click the screen left or right or press the left or right arrows to play the previous or next page.

To listen to the story narration again, touch the **Replay** icon  on the screen.

To go back to the index page, touch the **Index** icon  on the screen.



## Story Dictionary

After touching the **Story Dictionary** icon, you will see a selection page. Touch the vocabulary words to read and hear their definitions. As you switch to different reading levels, the vocabulary words will change to match the level.



## What Happened?

Listen carefully to a question about the story. Then touch a word or picture to answer the question.

## Record

In recording mode, you can record your own version of the story. Your recorded version will be available in all three reading levels. You can reset the recording from the story's **Settings** page.

## Learning Games

### Write with Pinocchio

Pinocchio is learning handwriting in school. Follow along and learn the letters with him.

**Curriculum:** Handwriting

### Help the Princess

The princess needs the frog's help to recover objects from the water. Use phonics to help direct the frog to the correct objects.


**Curriculum:** Phonics



## Rhyme Builder

Use rhyming words to help the third little pig choose the right bricks to build his house.

**Curriculum:** Rhyming

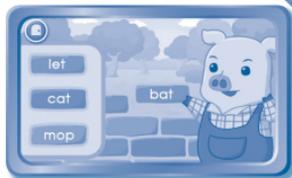

## ONLINE FEATURES

Register online to keep track of your child's learning journey with personalized recommendations. You can also connect to our **Learning Lodge™** to download great apps, games, e-Books and more!

If you have not already installed the **InnoTab®** version of the **Learning Lodge™** software on your computer, go to [www.vtechkids.com/download](http://www.vtechkids.com/download) to download and install it.

## CARE & MAINTENANCE

1. Keep this **InnoTab®** cartridge clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Avoid dropping it. **NEVER** try to dismantle it.
4. Always keep this **InnoTab®** cartridge away from water.

## WARNING

A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colors or patterns. While **InnoTab® The Learning Tablet** does not contribute to any additional risks, we do recommend that parents supervise their children while they play video games. If your child experiences dizziness, altered vision, disorientation or convulsions, discontinue use immediately and consult your physician. Please note that focusing on an LCD screen at close range and handling touch screen or g.sensor controls for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.

## TROUBLESHOOTING

Please note that if you try to insert or remove an **InnoTab®** cartridge without first turning the unit **OFF**, you may experience a malfunction. If this happens, and the unit does not respond to pressing the **ON/OFF** button, disconnect the AC adaptor from the main unit or remove the batteries. Then, reconnect the adaptor, or reinstall the batteries.

## TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: [www.vtechkids.com](http://www.vtechkids.com)

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

## COPYRIGHT NOTICES

2014 VTech. All Rights Reserved. **VTech®**, the **VTech®** logo and **InnoTab®** are registered trademarks of VTech. **Learning Lodge™** is a trademark of VTech. All other trademarks are property of their respective owners.

## IMPORTANT NOTE:

Creating and developing **InnoTab® The Learning Tablet** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information that forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## OTHER INFO

### DISCLAIMER AND LIMITATION OF LIABILITY

**VTech**® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. **VTech**® Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. **VTech**® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

COMPANY : **VTech**® Electronics North America, L.L.C.

ADDRESS : 1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004 USA

TEL NO.: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

### NOTE:

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

