



# Instruction Manual



## Play Smart Laptop



# INTRODUCTION

Thank you for purchasing the Peppa Pig Play Smart Laptop. This pretend-play laptop encourages role-play and is packed with 15 games and activities to explore with Peppa Pig, her family and friends.



# INCLUDED IN THE PACKAGE

- Peppa Pig Play Smart Laptop
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

 
## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.


### Unlock the Packaging Locks

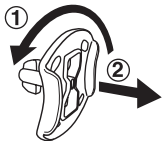

- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

## NOTE

 
The cord located on the back of the front cover is not a part of this toy. This cord should be removed and discarded for your child's safety.

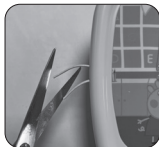

# INSTRUCTIONS

## BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

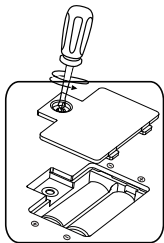

### **WARNING:**

Adult assembly required for battery installation.

Keep batteries out of reach of children.



### **ATTENTION :**

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

## PILES RECHARGEABLES :

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

# PRODUCT FEATURES

## 1. On/Off Button

Press the **On/Off Button** to turn the unit **ON** and press it again to turn the unit **OFF**.

## 2. Settings Button

Press the **Settings Button** to adjust the volume level and screen contrast. Press the left or right **Arrow Buttons** to choose which item to adjust and then press the **Enter Button** to confirm.

## 3. Help Button

Press the **Help Button** to hear the instructions or to repeat a question.

## 4. Category Selector

Slide the **Category Selector** to choose one of the five categories. Your child can explore words, phonics, numbers, puzzles, games and music.

## 5. Peppa Pig Button

Press the **Peppa Pig Button** to hear Peppa Pig speak.

## 6. Arrow Buttons

Press the left or right, up or down **Arrow Buttons** to make selections.

## 7. Enter Button

Press the **Enter Button** to confirm a selection.

## 8. Background Music On/Off Button

Press the **Background Music On/Off Button** to turn the background music off. Press this button again to turn the background music on.

## 9. Letter Buttons



Press the **Letter Buttons** to learn about letters or to answer letter-related questions.

## 10. Number Buttons



Press the **Number Buttons** to learn numbers or to answer number-related questions.

## 11. Automatic Shut-Off

To preserve battery life, the unit will automatically turn off after one minute without input. The unit can be turned on again by pressing the **On/Off Button**. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on the screen as a reminder to change the batteries.



# ACTIVITIES

## LETTERS AND WORDS **ABC**

### 1. Letter Painting Fun

Suzy Sheep is drawing with Peppa Pig. Press the **Letter Buttons** to explore each letter, letter sounds and words that begin with those letters.



### 2. Missing Letters

Help Peppa Pig find the missing letter by pressing the **Letter Buttons** or the left or right **Arrow Buttons** to select the letter and then press the **Enter Button** to confirm.



### 3. Letter Order

Peppa Pig is sorting letters into the correct order. Help her by pressing the **Letter Buttons** or the left or right **Arrow Buttons** to select the letter and then press the **Enter Button** to confirm.



### 4. Bubble Typing

Peppa Pig is blowing bubbles with letters inside of them. Press the **Letter Buttons** that match the letters you see to make the bubbles disappear.



# NUMBERS

## 1. Deliver Numbers

Press the **Number Buttons** to help Mr. Zebra get the numbered envelopes out of the van.



## 2. Number Order

Help Peppa Pig sort the numbers into the correct order by pressing the **Number Buttons** or the up or down **Arrow Buttons** and then press the **Enter Button** to confirm.



## 3. Counting Apples

Peppa Pig and George are counting apples. Press the **Number Buttons** to help them.



## 4. Carrot Quiz

Peppa Pig is eating carrots at Rebecca Rabbit's house. Press the left or right **Arrow Buttons** to help her choose between more or fewer carrots.



# PUZZLES

## 1. Fix the Wall

Mr. Bull needs the right shape to fix the wall. Press the up or down **Arrow Buttons** to select the shape and then press the **Enter Button** to confirm.



## 2. Tidy Up

Peppa Pig and George are tidying up their room. Help them choose the item that looks different. Press the left or right, up or down **Arrow Buttons** and then press the **Enter Button** to confirm.



### 3. Shopping List

Peppa Pig and her family are shopping at the supermarket. She is trying to select the right sized item. Press the left or right **Arrow Buttons** to choose between the larger and smaller items, then press the **Enter Button** to confirm.



## GAMES

### 1. On the Road

Help Daddy Pig splash through muddy puddles with the camper van by using the up or down **Arrow Buttons**.



### 2. Hide-and-Seek

 
Help Peppa Pig find out who is hiding behind the furniture and other objects in this hide-and-seek game. Press the left or right **Arrow Buttons** to choose and press the **Enter Button** to confirm.



## MUSIC

### 1. Music Party

Press the **Number Buttons** to add fun sound effects into the melodies.



### 2. Musical Instruments

Madame Gazelle would like the students to play music. Help them choose an instrument to play by pressing the left or right **Arrow Buttons**, then press the **Enter Button** to confirm.



## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the unit still does not work, install a new set of batteries.

## IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at 1-800-521-2010 in the U.S., 1-877-352-8697 in Canada, or by going to our website [vtechkids.com](http://vtechkids.com) and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Supplier's Declaration of Conformity**  
**47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5535  
Product Name: Peppa Pig Play Smart Laptop  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

CAN ICES-003(B)/NMB-003(B)

Visit our website for more  
information about our products,  
downloads, resources and more.

*vtechkids.com*

*vtechkids.ca*

Read our complete warranty policy online at

*vtechkids.com/warranty*

*vtechkids.ca/warranty*

