



LITTLE SMART

POP 'n Sing™ Apple

USER'S MANUAL



© VTECH
Printed in China
91-01316-000 (美)


Dear Parent:

At VTECH® we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. Whether it's introducing numbers and letters, identifying colors and shapes, or stimulating senses with lights and music, all VTECH® infant and toddler learning products encourage your child's natural growth and discovery skills. When it comes to providing electronic learning products that enlighten, entertain and develop minds, at VTECH® we see the potential in every child.

INTRODUCTION

Thank you for purchasing the **VTECH® LITTLE SMART Pop 'n Sing™ Apple** learning toy! This product is one of a family of high-quality **LITTLE SMART®** electronic learning products. We at **VTECH®** are committed to providing the best possible products to entertain and educate your child. Should you have any questions or concerns, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

The **LITTLE SMART Pop 'n Sing™ Apple** is a fun electronic pop-up toy designed for infants 3 months and up. Baby will enjoy the repetitive action of popping up and pushing down the cute little worm character, and singing along with the melodies. An apple a day keeps baby at play!

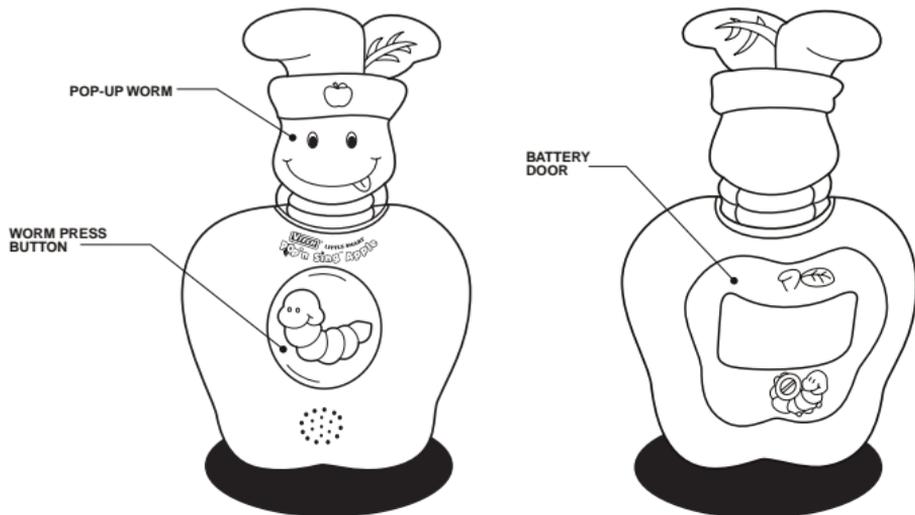


INCLUDED IN THIS PACKAGE

- One VTECH® LITTLE SMART Pop 'n Sing™ Apple learning toy.
- One instruction manual.

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

BATTERY INSTALLATION

1. Locate the battery cover on the back of the unit. Use a coin or screwdriver to loosen the screw.
2. Install 2 new "AA" (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)

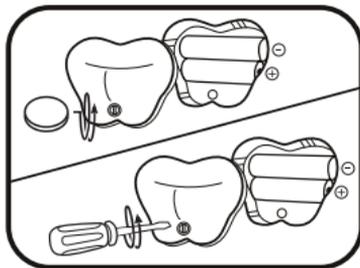

3. Replace the battery cover and tighten the screw to secure the battery cover.

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.
- Do not dispose of batteries in fire.

- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

NOTE: If for some reason the program/activity stops working, then please follow these steps:

1. Interrupt the power supply by removing the batteries.
2. Let the unit stand for a few minutes, then replace the batteries.
3. Turn the unit **ON**. The unit should now be ready to play again.


If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada and a service representative will be happy to help you.

TO BEGIN PLAY

1. Press the **WORM BUTTON** to begin play. You will hear “Yippee!” followed by the Apple Song or one of three random melodies.

RANDOM MELODIES:

- Apple Song
- Teddy Bear’s Picnic
- Little Miss Muffet
- Pop! Goes the Weasel

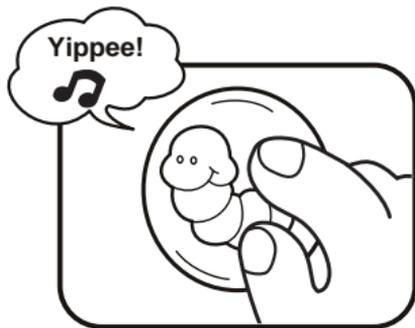

APPLE SONG LYRICS:

Are you hungry? Are you hungry?

Little One, Little One

Big and juicy apples


Make you strong and healthy

Eat them up! Eat them up!


2. Press the **WORM BUTTON** to see the worm pop-up and bounce around with the music.



3. Press down gently on the **POP-UP WORM** to push it back into the apple.

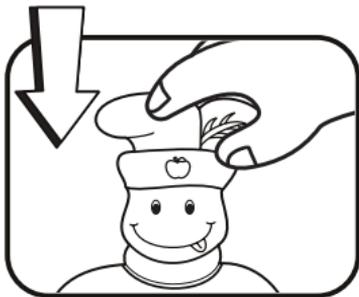

- To adjust the volume, slide the **VOLUME CONTROL SWITCH** located on the bottom of the unit to the () position for **LOW VOLUME** or to the () position for **HIGH VOLUME**.

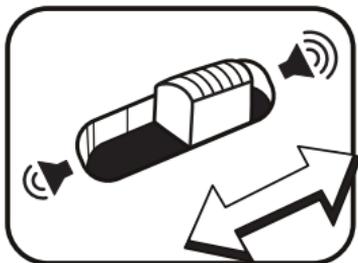

Note: After several seconds without input, the unit will go into sleeping status and can be awakened by pressing the **worm button**.

CARE AND MAINTENANCE

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit is not being used for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

IMPORTANT NOTE

Creating and developing the Infant/Toddler products is accompanied by a responsibility that we at **VTECH**® take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this product with respect to the receiver
- move this product away from the receiver