

vtech[®]

User's Manual

Tote & Trace Drawing Board™



© 2013 VTech
Printed in China
91-009630-000 (US)

Dear Parent,

At **VTech**[®], we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**[®] has developed the **Preschool Learning**[™] series of interactive toys.

Preschool Learning[™] features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**[™], learning is fun from day one!

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!


Sincerely,

Your friends at **VTech**[®]

To learn more about **Preschool Learning**[™] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Tote & Trace Drawing Board™!** Learning and drawing have never been more exciting! With the **Tote & Trace Drawing Board™**, your child will have hours of enjoyment and drawing fun. Three letter stencils teach basic writing skills, and three drawing activities promote hand/eye coordination while keeping your child engaged with fun sounds and music. One of the activities even encourages your child to draw creatively, so they can let their imagination run wild! Rewarding voices encourage your child to explore and play, adding to the learning fun. There's no end to what they can draw with the **Tote & Trace Drawing Board™**.

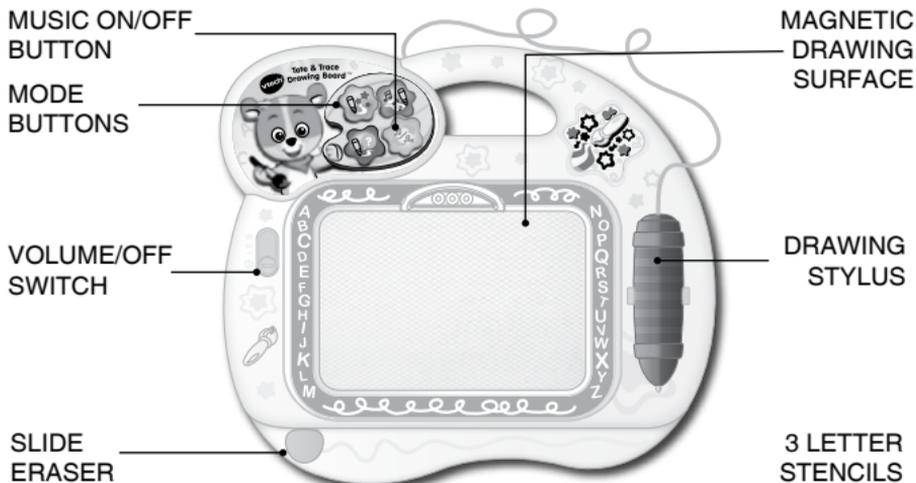


INCLUDED IN THIS PACKAGE

- One VTech® Tote & Trace Drawing Board™
- Three tracing letter stencils
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep instruction manual as it contains important information.

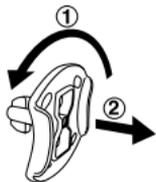


Unlock the packaging locks:

- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to open the cover.

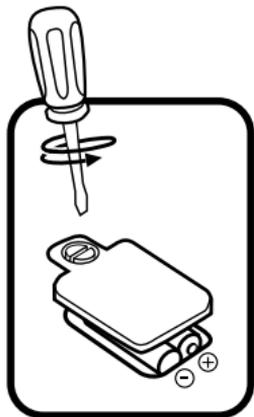

4. Install 2 new “AAA” (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten to secure.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. VOLUME/OFF BUTTON

Slide the **VOLUME/OFF BUTTON** up to the volume position to turn the unit on or adjust the volume.

2. 3 MODE BUTTONS

Press any of the **MODE BUTTONS** to choose a game to play.

3. MUSIC ON/OFF BUTTON

Press the **MUSIC ON/OFF BUTTON** to change the melody. Hold the button down to turn the music off.

4. DRAWING STYLUS

Use the **DRAWING STYLUS** for tracing and drawing fun.

5. MAGNETIC DRAWING SURFACE

Use the **DRAWING STYLUS** to draw on the **MAGNETIC DRAWING SURFACE**.



6. 3 LETTER STENCILS

Put in any of the **LETTER STENCILS** on the drawing board to practice writing letters.



7. MUSIC NOTE

On the **S-Z LETTER STENCIL** there is a **MUSIC NOTE**. Trace over the **MUSIC NOTE** to hear an ABC letter song.



8. SLIDE ERASER

Move the **SLIDE ERASER** at the bottom of the board to erase your drawing.



9. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Tote & Trace Drawing Board™** will automatically power-down after a period of time without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. FREE DRAW



Press the **FREE DRAW** button to enter this activity.

Be creative and draw anything you like! Funny sound effects will play when drawing.

2. MUSICAL DRAWING



Press the **MUSICAL DRAWING** button to enter this activity.

Music will be played when you draw, and stop when you stop drawing. The music style will be changed when drawing on different areas of the board.

3. **WHAT TO DRAW?**



Press the **WHAT TO DRAW?** button to enter this activity.

Let's draw objects in your world! Listen for the object and then try to draw it. Matching sound effects will be played as you draw.

4. **TRACING FUN**

Put in any of the **LETTER STENCILS** on the board to enter this activity. Use the stylus to trace the letters and learn the letter names and their phonics sounds.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work or the stylus does not work well, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Preschool Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information that forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.