

vtech[®]
baby

Instruction Manual


6-in-1 Tunnel of Fun™



INTRODUCTION

Thank you for purchasing the **6-in-1 Tunnel of Fun™!**

Introduce baby to a world of discovery for each stage of their growth. The interactive piano includes three play modes with three progressive levels that teach first words for animals, numbers and colors.

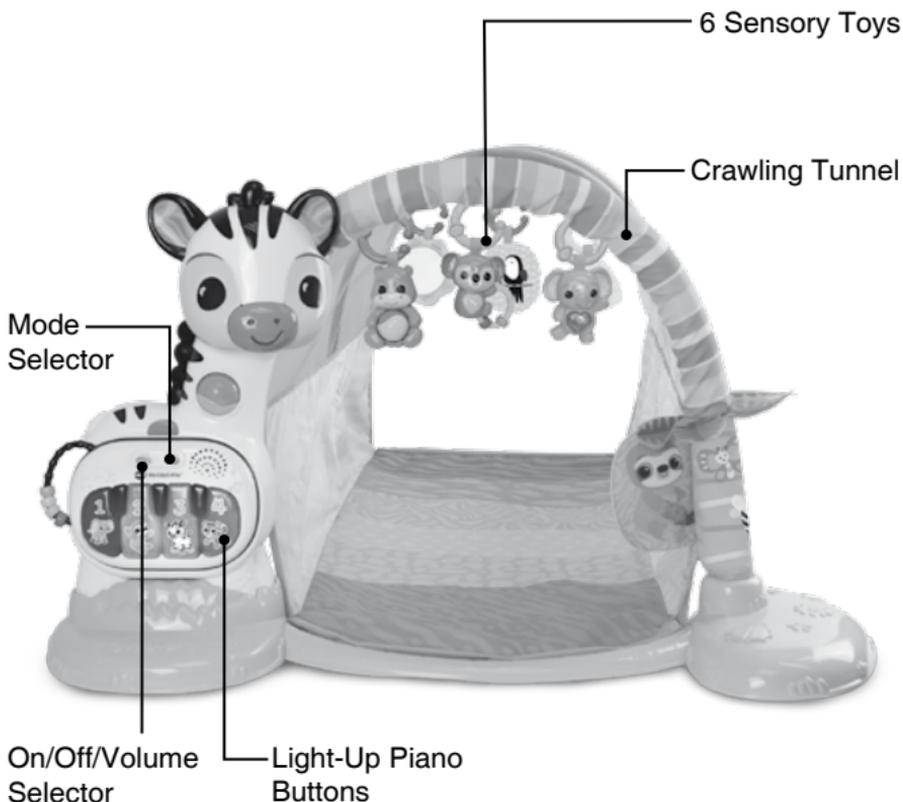

INCLUDED IN THE PACKAGE



Crawling Tunnel




Zebra Stand



Light-Up Piano



6 Long Support Poles

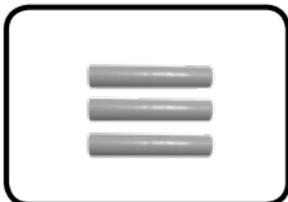

3 Links



3 Support
Stand Pieces




Hippo Roller



Elephant Rattle



Koala Bead Ring

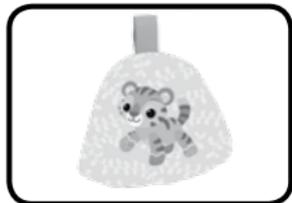


Soft Tiger



Crinkle Toucan



Sun Mirror

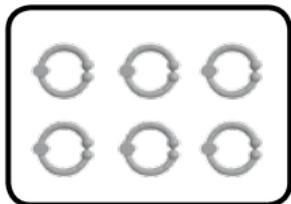

6 Activity Links



8 Screws

- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.


ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

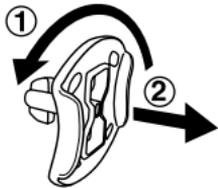


- ① Rotate the packaging locks counterclockwise 90 degrees.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the piano, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

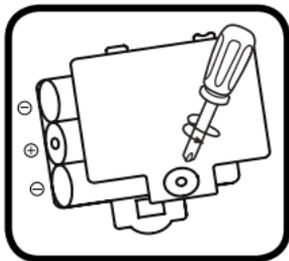

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.



CAUTION:

Adult assembly required. This package contains small parts. For your child's safety, do not let your child play with the toy until it is fully assembled.



ATTENTION !

Ce jouet contient des petites pièces. Ce jouet doit être assemblé par un adulte. Pour la sécurité de votre enfant, ne pas le laisser jouer avec le jouet tant que ce dernier n'est pas complètement assemblé par un adulte.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.




RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.




ASSEMBLY INSTRUCTIONS

With the **6-in-1 Tunnel of Fun™**, safety comes first. Adult assembly required. For your child's safety, do not let them play with this toy until it is fully assembled.


1. Attach the six **Long Support Poles (A)** to both ends of the three **Links (B)**. This will form three extended poles. Thread the three extended poles through the three openings at the beginning, middle and end of the **Crawling Tunnel** as indicated in the images to form three archways.

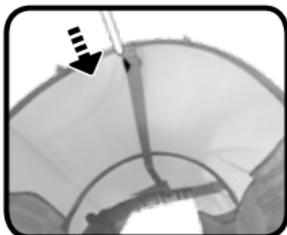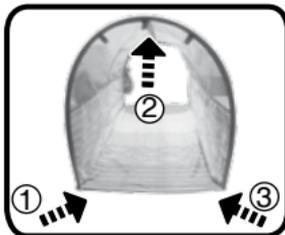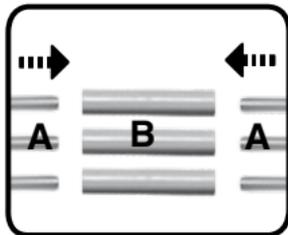




Tuck each pole end into the pocket at the end of each archway. Use a hard surface to push the pole further into the opening to make sure the pole end is covered by the pocket so the pole is not exposed. The poles are intended to fit snugly to create a sturdy crawling tunnel.

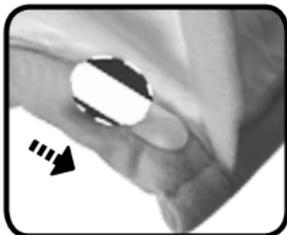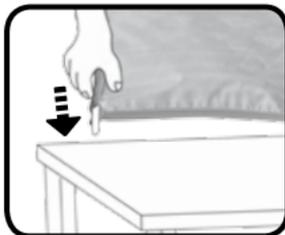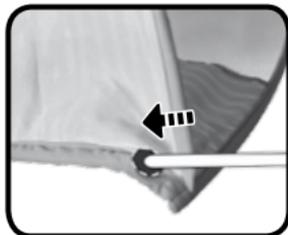


2. Connect the three **Support Stand Pieces** with the eight **Screws**.

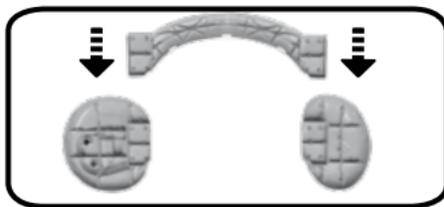


3. Attach the **Crawling Tunnel** to the **Support Stand** by inserting the attachment tabs on the **Play Mat** through the slots on the base of the **Support Stand**.

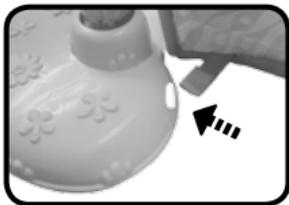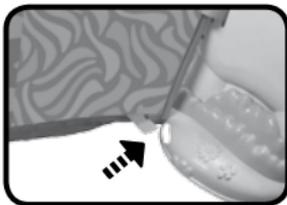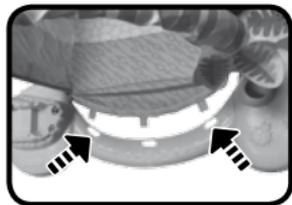

4. Attach the **Zebra Stand** to the left side of the **Support Stand** as shown. You will hear the **Zebra Stand** click into place when connected properly.

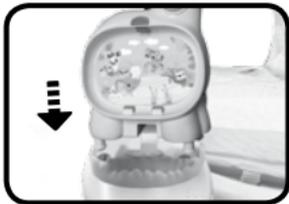


5. Attach the ends of the arch to the base of the **Support Stand** and to the top of the **Zebra Stand**. You will hear the arch click into place when connected properly.

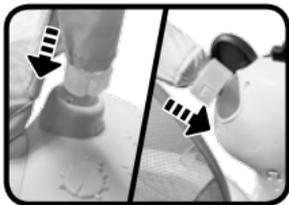


6. Attach the **Zebra Stand** to the tunnel. Hook the two fabric loops on the left side of the **Crawling Tunnel** to the tabs on the zebra's back.



7. Attach the sensory toys to the activity links, then attach the links to the fabric loops on the arches.

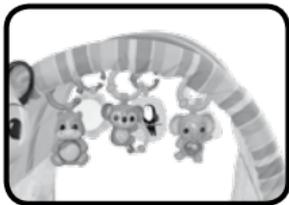


8. Attach the **Light-Up Piano** to the zebra stand. You will hear the piano click into place when connected properly.
9. To remove the **Light-Up Piano**, press the gray release tab on the zebra.

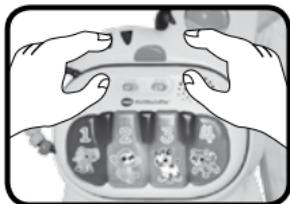

PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume (🔊) or the High volume (🔊🔊) position. You will hear a phrase, a song and a short tune. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off** (●) position.

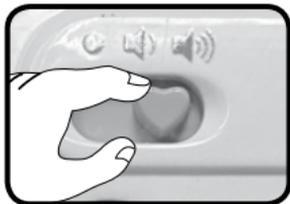

2. Mode Selector

Slide the **Mode Selector** to the Music mode (🎵), Animal mode (🐾) or Explore mode (🔍) position.



3. Automatic Shut-Off

To preserve battery life, the **6-in-1 Tunnel of Fun™** will automatically shut off after approximately 40 seconds without input. The unit can be turned on again by pressing any button.

NOTE

If the unit powers down or the light fades out during play, please install a new set of batteries.

ACTIVITIES

Light-Up Piano Buttons

Press the **Piano Buttons** to hear fun sounds and melodies in Music mode, learn about animals and their sounds in Animal mode, and learn about numbers, counting and colors in Explore mode. The lights will flash with the sounds.



MELODIES

1. Yankee Doodle
2. Good Morning, Merry Sunshine
3. Rockin' Robin
4. Aiken Drum
5. A-Tisket, A-Tasket
6. Skip to My Lou
7. Toyland
8. Teddy Bears' Picnic
9. Polly Put the Kettle On
10. On Top of Old Smokey
11. Here We Go 'Round the Mulberry Bush
12. MacNamara's Band

SONG LYRICS

Song 1

Would you like to make a song?
It'll be do-re-mi-fa-so good!

Song 2

Hey there friend, it's time to play,
Our animal friends are here, hooray!
They run, they roar, they sing, and more.
We'll have so much fun together!

Song 3

One, two, three, four, fun animals,
Love to count and learn with you!
Green, orange, yellow and also blue,
Explore the colors of the rainbow.

Song 4

Elephant has two big ears,
Elephant has two big ears,
Elephant has two big ears,
And a long, long trunk!

Song 5

Sloth is brown and furry.
Sloth likes hanging in the trees.
Sloth is slow but not lazy.
Sloth is small and happy.

Song 6

Who's that with orange fur?
Who's that with brown stripes?
Who's that with the mighty roar?
It's our friend, tiger!

Song 7

Zebra lives in the Serengeti,
Covered in black and white stripes and very mighty!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The crawling tunnel, soft tiger and crinkle toucan are surface washable only.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name:	VTech®
Model:	5627
Product Name:	6-in-1 Tunnel of Fun™
Responsible Party:	VTech Electronics North America, L.L.C.
Address:	1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

