

vtech[®]

 
Instruction Manual

Pop & Spin Mower[™]



INTRODUCTION

Maintain pretend lawns with the **Pop & Spin Mower™**! This make-believe mowing machine introduces gardening basics, lawn mower safety and colors while building motor skills.

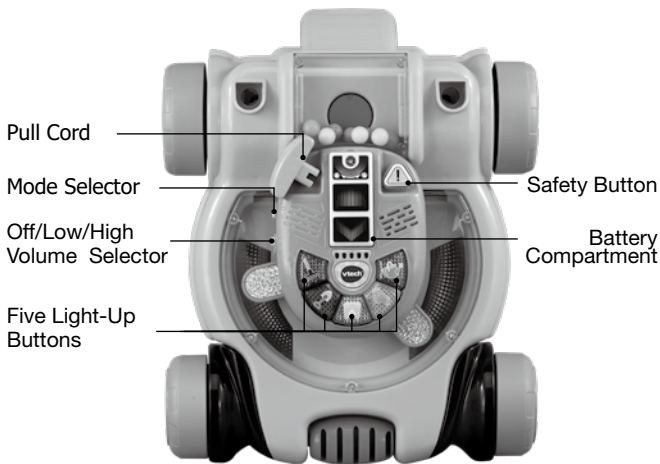


INCLUDED IN THE PACKAGE

- Pop & Spin Mower™



 - 4 screws

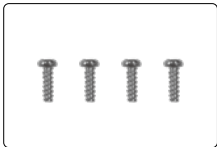


- Upper handle



- Lower handle



 - 2 wheels

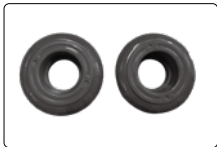

- Quick Start Guide

 
NOTE

Not water safe. Do not expose to moisture or water.

Ce jouet n'est pas destiné à être utilisé dans l'eau. Ne pas exposer le jouet à l'humidité ou à l'eau.

LABEL APPLICATION

Please securely stick the labels to the toy as indicated below:

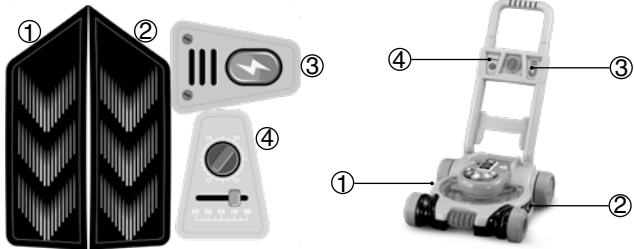

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located beside the **Safety Button**, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

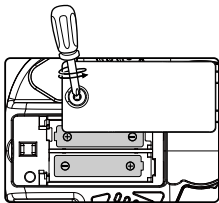

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

ASSEMBLY INSTRUCTIONS

 


CAUTION:

With the **Pop & Spin Mower™**, safety comes first. Adult assembly required. This package contains small screws. For your child's safety, do not let your child play with the toy until it is fully assembled.

Avec le **Pop & Spin Mower™**, la sécurité est une priorité. Ce jouet doit être assemblé par un adulte. Le produit contient des petites vis. Pour la sécurité de votre enfant, ne laissez pas votre enfant jouer avec le jouet avant qu'il ne soit complètement assemblé.

1. Align and connect the **Upper Handle** with the **Lower Handle**.
2. Insert two **Screws** on each side of the **Handle** and use a screwdriver secure.
3. Insert the **Wheels** on both sides of mower's body and press them in firmly.
4. Align the bottom of the **Handle** with the slots of the mower body.
5. Insert the **Handle** into the slots and press it down firmly.

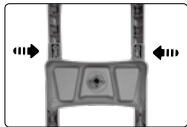

PRODUCT FEATURES

1. Off/Low/High Volume Selector

Slide the **Off/Low/High Volume Selector** to any position to turn on the unit.



2. Mode Selector

Slide the **Mode Selector** to choose a mode of play. The two modes include a Learning and Music mode.



3. Five Light-Up Buttons

Press the **Five Light-Up Buttons** to learn facts about gardening tools and colors or hear fun songs.



4. Safety Button

Press the **Safety Button** to hear helpful lawnmower safety tips and songs about mowing.



5. Pull Cord

Pull to start the mower and hear engine and fun sounds.



6. Push the Mower

Push the mower along to hear realistic mowing sounds and different fun melodies.



7. Automatic Shut-Off

To preserve battery life, the **Pop & Spin Mower™** will shut off automatically after several minutes without input. The unit can be turned on again by sliding the **Off/Low/High Volume Selector** or **Mode Selector**. The unit will also automatically turn off when the batteries are low.

ACTIVITIES

1. Learning Mode 🔍

- Press the **Five Light-Up Buttons** to learn about colors and facts about gardening tools.
- Press the **Safety Button** to learn safety rules about mowing.
- Pull the **Pull Cord** twice to hear engine sounds. The sounds will end after 10 seconds if the mower doesn't move.
- To continue the engine sounds, push the mower and keep it moving. The engine sounds will stop five seconds after the mower stops. The faster the mower moves, the faster the engine sounds.

2. Music Mode 🎵

- Press the **Five Light-Up Buttons** and **Safety Button** to hear sung songs.
- Pull the **Pull Cord** to hear sounds and push the mower to hear melodies.

MELODIES

1. Lucky Farmer
2. Happy Days Ahead
3. Countryside Happiness
4. Holiday Adventure

SONG LYRICS

Song 1

A hand rake is good for breaking up the soil
It can help make the soil smooth
Which helps make planting seeds smooth,
Rake the weeds away and wait for flowers to bloom!

Song 2

The sky is blue and the sun is bright
Perfect time to mow the lawn.
The grass is long, and ready for a trim
Let's mow until we're done!

Song 3

Did you ever see a mower, a mower, a mower?
Did you ever see a mower go this way and that?
Go this way and that way? That way and this way?
Did you ever see a mower go this way and that?

Song 4

A shovel is good for digging holes,
making room for plants and flowers
Of different colors.
Like a red rose bush!

Song 5

Let's put the grass clip clip clippings
in the yard bin.

Oh yeah in the yard bin.

Sticks and weeds can go in too

In the yard bin.

Oh yeah in the yard bin.

Song 6

Reduce, reuse, recycle.

Reduce! Throwing away grass clippings.

Reduce, reuse, recycle.

Reuse! Grass clippings to keep your soil fresh.

Reduce, reuse, recycle

Recycle! It will make a difference in your garden.

Song 7

People say a good gardener
has a green thumb.

Even though their thumb

Isn't really green.

Grass is green. Leaves are green.

Grass is green. Leaves are green.

Good gardeners have green thumbs.

Song 8

Gardening gloves
are good to wear in the garden.

Dirt is a big part of lawn work

And gardening gloves help

keep your hands clean

and protected from scratches.

Song 9

When the plants are planted
And seeds are sewn
Fill up the watering can,
Be sure to sprinkle water
Over your garden.
Some plants like a little, some like a lot
Especially when it's hot!

Song 10

One kid went to mow, went to mow a meadow.
One kid and their dog
Went to mow a meadow.
Two kids went to mow
Went to mow a meadow.
Two kids, one kid and their dog
Went to mow a meadow.

Song 11

For he's a jolly good mower,
For she's a jolly good mower,
For they're jolly good mowers!
Which nobody can deny.

Song 12

When it comes to mowing
Be safe and pick up sticks.
Watch where you're going.
Being outside mowing is so much fun,
Watch out for animals and everyone.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 552600
Product Name: Pop & Spin Mower™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003(B)/NMB-003(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

