

VTECH[®]

LITTLE SMART

groovy tunes™

USER'S MANUAL



© VTECH
Printed in China
91-01260-000 (美)

Dear Parent:


*At **VTech**[®] we know that a child has the ability to do great things.*

*That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. Whether it's introducing numbers and letters, identifying colors and shapes, or stimulating senses with lights and music, all **VTech**[®] infant and toddler learning products encourage your child's natural growth and discovery skills. When it comes to providing electronic learning products that enlighten, entertain and develop minds, at **VTech**[®] we see the potential in every child.*

INTRODUCTION

Thank you for purchasing the **VTech® LITTLE SMART Groovy Tunes™** learning toy! This product is one of a family of high-quality **LITTLE SMART®** electronic learning products. We at **VTech®** are committed to providing the best possible products to entertain and educate your child. Should you have any questions or concerns, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

The **LITTLE SMART Groovy Tunes™** learning toy is a portable, electronic radio for infants 6 months and up. A variety of built-in songs and dancing lights will delight babies as they are introduced to beginning numbers and letters. With a fun clicking antenna and a large carrying handle, the **LITTLE SMART Groovy Tunes™** learning toy is packed with on-the-go fun for your little one!

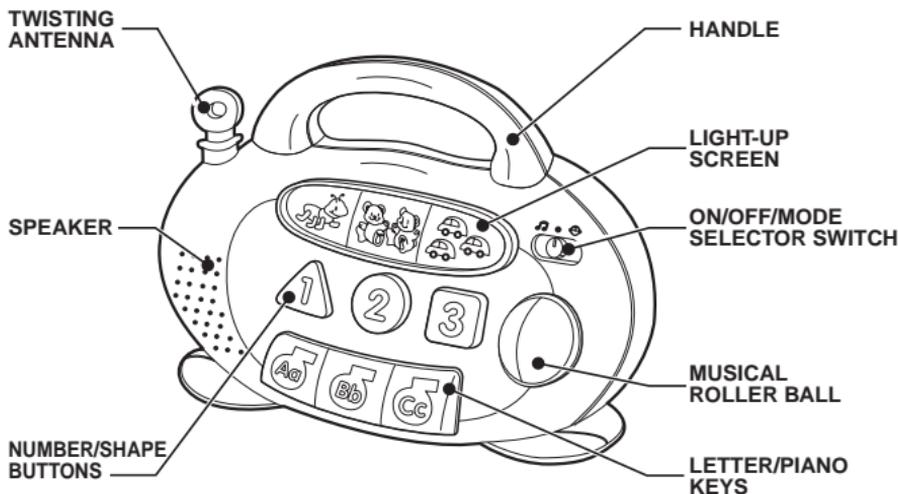


INCLUDED IN THIS PACKAGE

- One **VTECH® LITTLE SMART Groovy Tunes™** learning toy.
- One instruction manual.

WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 new “AA” (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

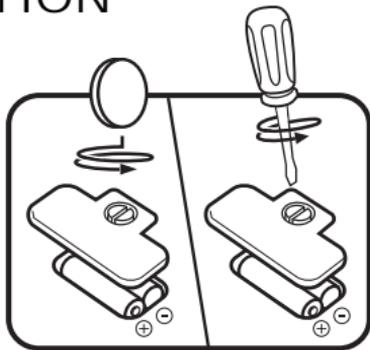

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.

- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

NOTE: If for some reason the program/activity stops working, then please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, and a service representative will be happy to help you.

TO BEGIN PLAY

1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to either the **MUSIC MODE** (🎵) or **TALKING MODE** (😊) position to turn the unit **ON**. A sound effect or talking phrase will play. Lights will flash along with the sound.




2. Press any button or spin the **Musical Roller Ball** to begin play.

Note: Without input after several minutes the unit will go into a power-down mode to conserve battery power. The unit can be restarted by pressing any button.



3. To adjust the volume, slide the **VOLUME CONTROL SWITCH** located on the back of the unit to the () position for **LOW VOLUME** or to the () position for **HIGH VOLUME**.

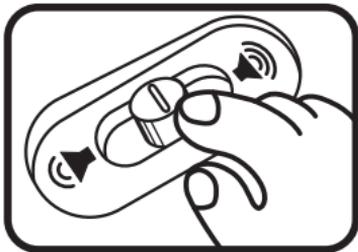

4. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** position (●) to turn the unit **OFF**.



ACTIVITIES

A. Talking Mode (😊)


1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **Talking Mode** (😊) position. A number count will be heard followed by a sound effect. Lights will flash along with the sound.




2. Press a **Number/Shape Button** to hear a friendly voice identify the number followed by a counting tune. Lights will flash along with the sound.




3. Press a **Letter/Piano Key** to hear a friendly voice identify the letter followed by a sound effect. Lights will flash along with the sound.

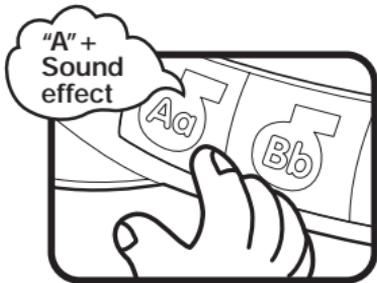

4. Spin the **Musical Roller Ball** to hear all the built-in melodies played one after another. Lights will flash along with the music.

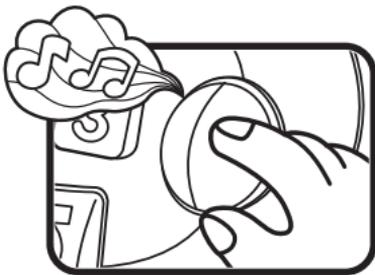

5. Twist the radio's antenna to hear a fun clicking sound.

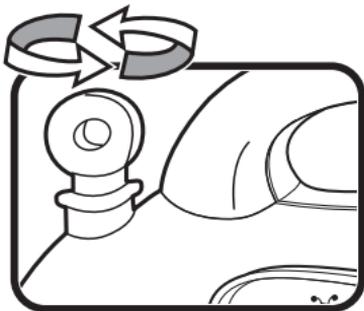

B. Music Mode (🎵)


1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **Music Mode** (🎵) position. A sound effect will play followed by a short tune. Lights will flash along with the sound.




2. Press any **Number/Shape Button** or **Letter/Piano Key** to hear a melody. Lights will flash along with the music.

SIX CHEERFUL MELODIES:


- **Polly Wolly Doodle**
- **Sailing, Sailing**
- **The Entertainer**
- **The Wheels on the Bus**
- **Camptown Races**
- **Oh Where, Oh Where Has My Little Dog Gone?**

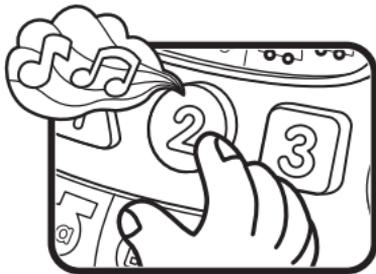

3. Spin the **Musical Roller Ball** to hear one of the built-in melodies played one note at a time. The speed at which the music is played depends on how quickly the ball is turned.

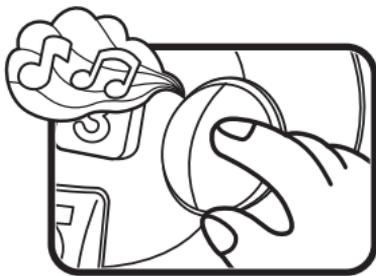

4. Twist the radio's antenna to hear a fun clicking sound.

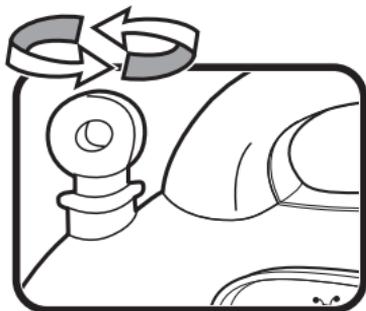

CARE AND MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

IMPORTANT NOTE

Creating and developing infant/toddler products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this product with respect to the receiver
- move this product away from the receiver