


vtech®

User's Manual

SWITCH & GO DINOS™

ATTILA THE ANKYLOSAURUS™

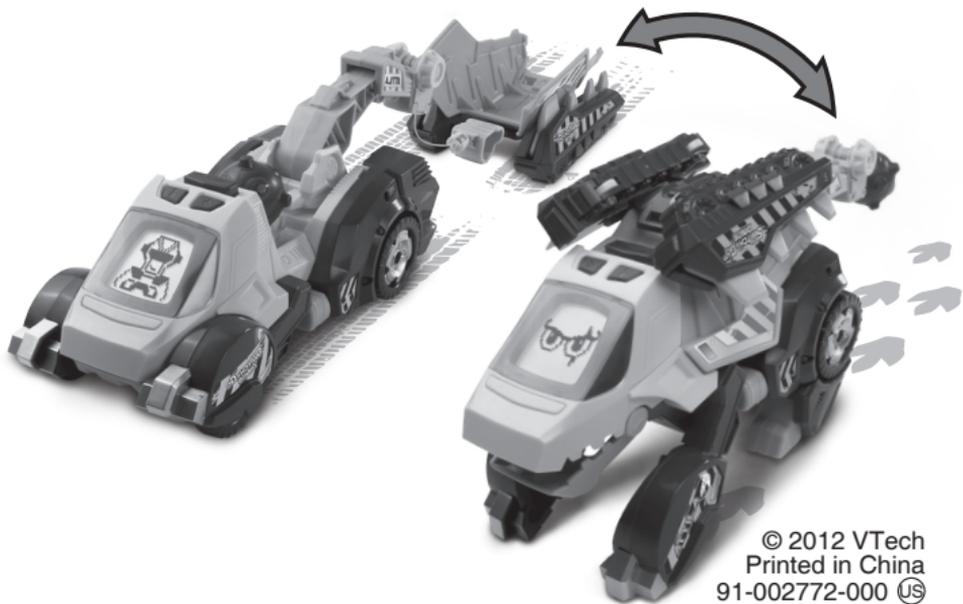

© 2012 VTech
Printed in China
91-002772-000 US



Hi Friend,

You're about to embark on a "dino-mite" adventure with me, **Attila the Ankylosaurus™**! Just so you know, I've been specially created just for you and am part of the **VTech® Switch & Go Dinos™** crew! **Switch & Go Dinos™** are a special breed of dinosaurs that transform from vehicle to dino in a few easy steps. You're going to love playing with me!

Not only can you help me do some wicked transformations, but you can help me do other cool things, too! Customize me by choosing my eyes in dino mode or picking a driver when I'm in vehicle mode! Try pushing me on the ground or pressing a button and you'll hear me make awesome sounds! Press another button to hear me talk, and I'll tell you all about my wild life as a dinosaur! Maybe you'll even learn a thing or two.

For more fun, be sure to check out the rest of the **Switch & Go Dinos™** crew (each sold separately)! And remember, with me you're in for some dino switchin', road racing fun!


Your pal,

Attila the Ankylosaurus™

INTRODUCTION

This is **Attila the Ankylosaurus™**, and I'm the toughest dinosaur of them all! Nobody can get through my hard armor, and I've got a special surprise for anybody who's dumb enough to try. One swing of my mighty tail will knock anybody out!

As a dino I may break things, but I've also got a softer side. I can turn into a heavy-duty construction truck. So when I'm done tearing something apart, I can put it back together again too!

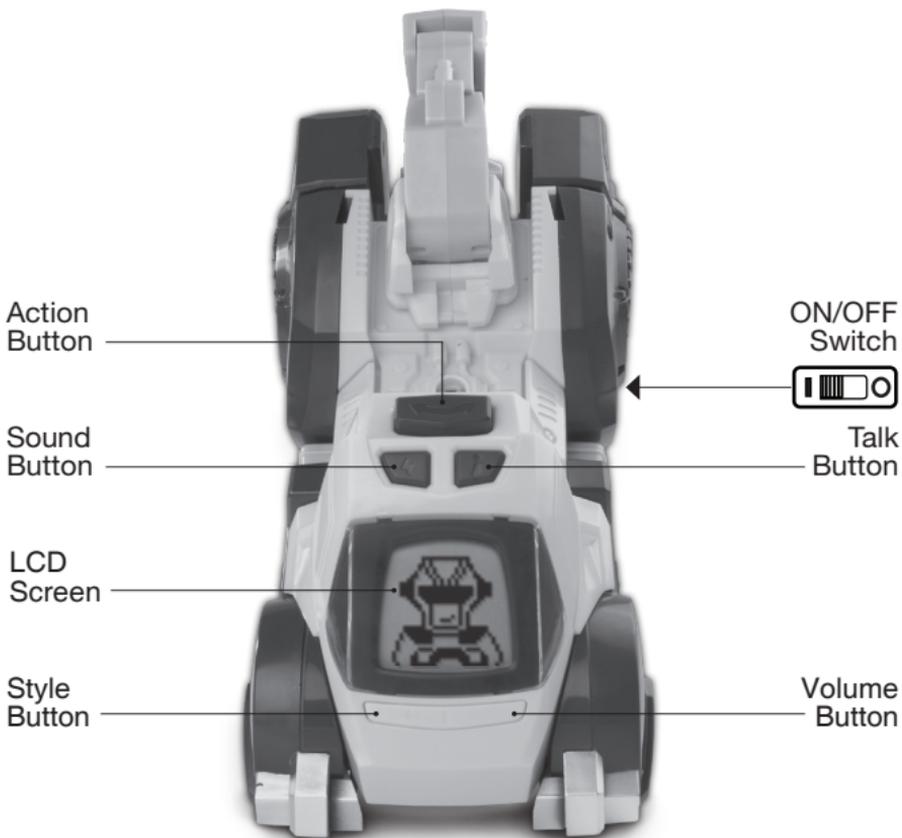

INCLUDED IN THIS PACKAGE

- One **VTech® SWITCH & GO DINOS™**: Attila the Ankylosaurus™
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.


NOTE:

Please keep the user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install new "AA" (LR6/AM-3) batteries into the main unit following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

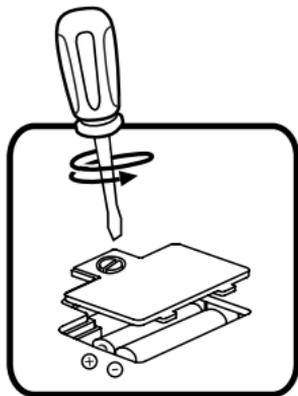

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES


1. TURNING THE UNIT ON



Slide the **ON/OFF** Switch to **ON** to turn the unit **ON**.

2. STYLE BUTTON

Press the **Style Button** to choose a driver or change the dino eyes.

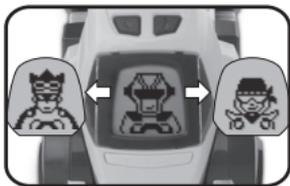

3. TALK BUTTON

Press the **Talk Button** to hear the dino or driver talk.




4. SOUND BUTTON

Press the **Sound Button** to hear cool sound effects.



5. VOLUME BUTTON

Press the **Volume Button** to adjust the volume.

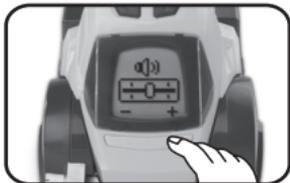

6. ACTION BUTTON

Press the **Action Button** to swing the tail or the crane.



7. WRECKING BALL & TOW HOOK

Use the **Hook** to tow other **SWITCH & GO DINOS™**. Or switch to the **Wrecking Ball** for some demolition fun!



8. DUMP TRAILER

Carry heavy loads in the **Dump Trailer**.




9. TURNING THE UNIT OFF/ AUTOMATIC SHUT-OFF


Slide the **ON/OFF** switch to **OFF** or hold the **Talk Button / Sound Button** for a few seconds to turn the unit **OFF**.

HOW TO SWITCH THE TRUCK TO A DINO

1. Truck shape.

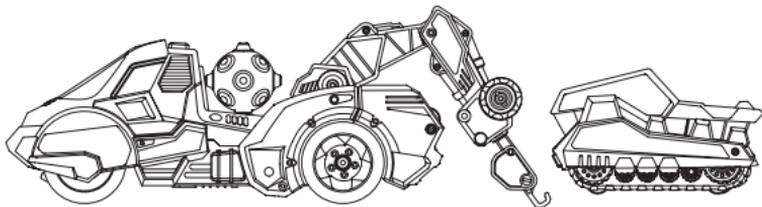


2. Attach the wrecking ball to the end of the crane and extend the crane to form the tail.

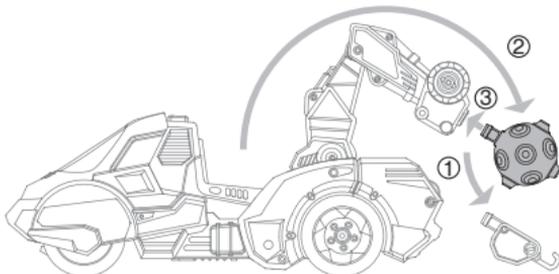


3. Flip the front legs down.


(Note: When switching the dino back to a truck, push the release lever in before flipping the legs up.)

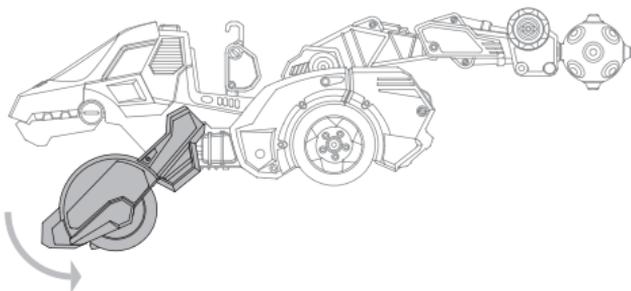


4. Turn the back legs forward.

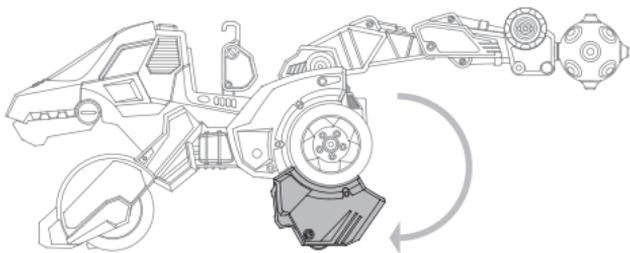


5. Pull out the back feet.

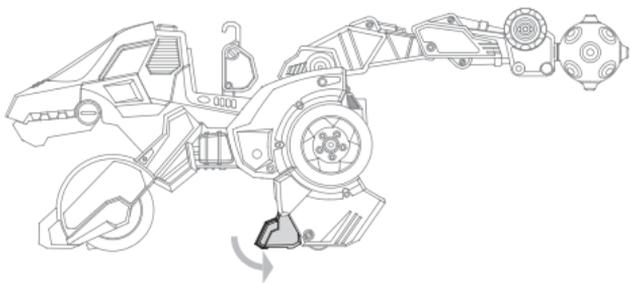


6. Turn the dump trailer upside down and put it on the back to form the armor.

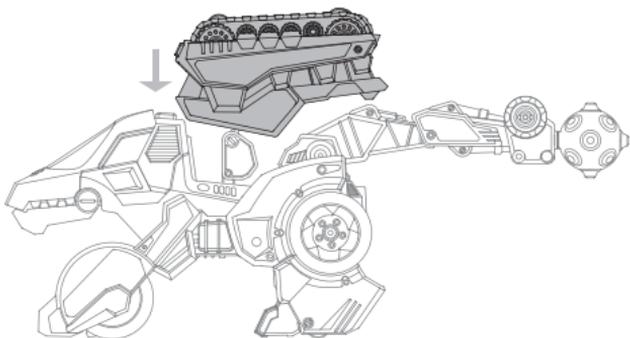

7. Flip the trailer treads up and pull out the spikes.

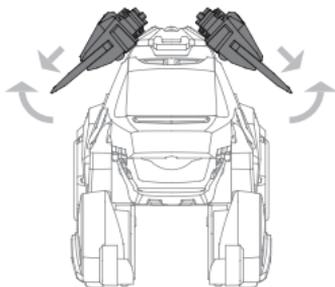


8. Dino shape.

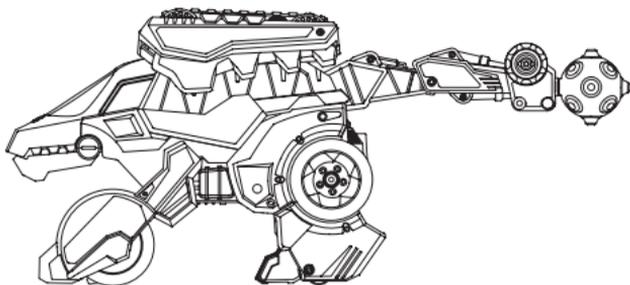

Note:

To change the dino back into a truck, reverse the order of the steps above. During step 3, the release lever must be pushed in before flipping the front legs up (please see the image below).

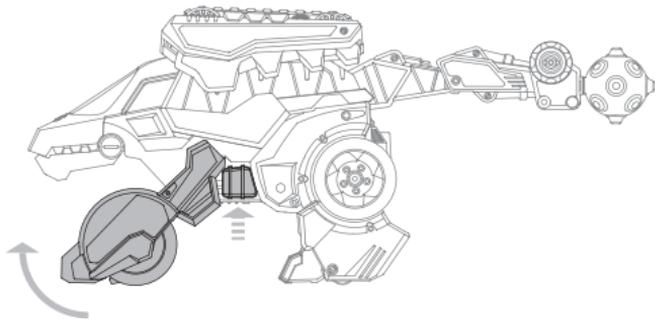

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

NOTE:

FCC information: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.