

vtech[®]

User's Manual

Play & Learn Tree House™



© 2008 VTech
Printed in China
91-079300-000-006 (美)



Dear Parent:

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**, series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,


Your Friends at VTech®

*To learn more about **Infant Learning**, and other VTech® toys, visit www.vtechkids.com*

INTRODUCTION

Thank you for purchasing the **VTech® Play & Learn Tree House™** learning toy!

The **VTech® Play & Learn Tree House™** is an interactive ball toy for toddlers. Roll or toss the balls towards the monkey and be rewarded with fun phrases, sounds and music. Press the light-up sun and birdhouse buttons to activate fun sounds, phrases and music. Drop the balls in the top of the tree to turn the roller and learn numbers, fruit and fun sounds. Toddlers will have a ball with the **VTech® Play & Learn Tree House™**.

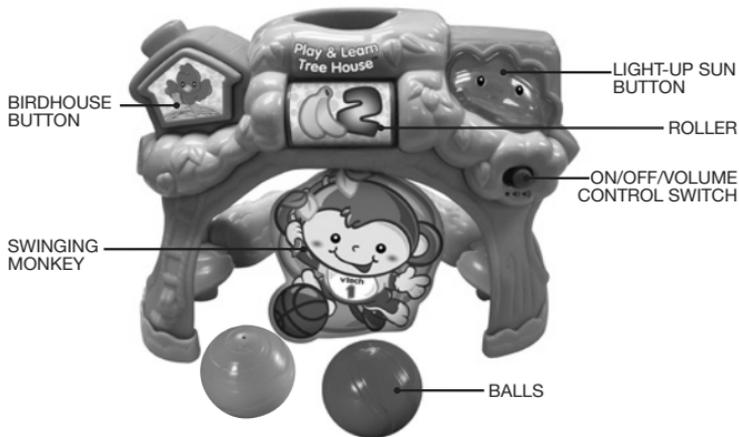

INCLUDED IN THIS PACKAGE


- One VTech® Play & Learn Tree House™ learning toy
- Two balls
- One support bar
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

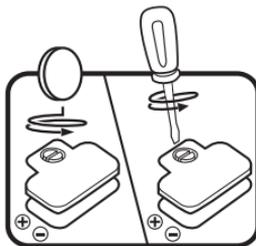



BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium)
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** (◀) or the **HIGH VOLUME** (▶) position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** (●) position.






2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Play & Learn Tree House™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button, spinning the roller or dropping in the balls.


3. PRODUCT ASSEMBLY

Please attach the support bar at the bottom of the product before using. First, insert the solid square side into the recessed slot on left side. Next, snap the square button side into the recessed slot on the right side.

Step 1

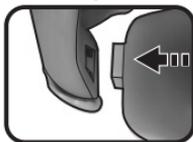

Step 2

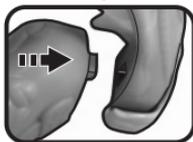


Assembled Product




ACTIVITIES

1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a song and an introductory phrase. The light will flash with the sound.
2. Press the **light-up sun button** to hear sound effects, playful phrases and random short tunes. The light will flash with sound.

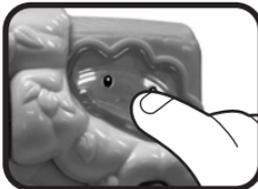





3. Press the **birdhouse button** to hear sound effects, phrases, a song or random melodies. The light will flash with sound.

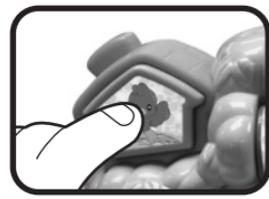

4. Spin the **roller** to learn letters, numbers, objects and fun sounds. The light will flash with the sound.

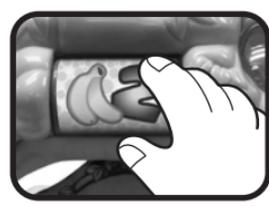

5. Insert the **balls** to hear playful sounds and phrases. The light will flash with the sound.

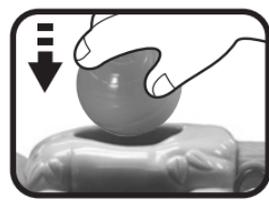

6. Swing the **monkey** to hear a variety of monkey sounds, fun phrases, random melodies or a song. The light will flash with the sound.





MELODY LIST

1. Animal Fair
2. Pop! Goes the Weasel
3. The Bear Went Over the Mountain
4. Glow Worm
5. Rock-a-bye Baby

SONG LYRICS

SONG 1 (to the tune of “Aiken Drum”)

There was a bird lived in the tree,
Lived in the tree, lived in the tree.
There was a bird lived in the tree,
And it liked to tweet and chirp.

SONG 1 (to the tune of “Sailing, Sailing”)

Swinging, swinging, swinging up in the tree.
Monkey’s swing from tree to tree,
And sing out happily. Wee!!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.



TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call VTech® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.



IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.



Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.