

Disney

User's Manual

Press n Play Learning Board



vtech[®]

Visit the Disney Web site at www.disney.com

© Disney
Based on the "Winnie the Pooh" works,
by A.A. Milne and E.H. Shepard.
All rights reserved.

Dear Parent,

*At VTech® we know that a child's imagination is a truly wonderful thing and needs to be developed and nurtured. That's why we created the **Winnie the Pooh electronic learning series™** of interactive learning toys to stimulate children's imaginations, while also teaching vital preschool concepts such as the alphabet, numbers, shapes, colors and objects.*

*Through the use of unique technology and engaging child-directed role-play scenarios, **Winnie the Pooh** characters magically come to life to guide children through learning activities. These engaging characters foster children's critical reasoning skills, enhance their fine motor skills and engage them in exciting role-play activities for endless hours of learning fun.*

*At VTech® we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech®** with the important job of helping your child learn and grow!*

Sincerely,

*Your Friends at **VTech®***

*To learn more about **Winnie the Pooh electronic learning series™** and other **VTech®** toys, visit*

www.vtech.com

INCLUDED IN THIS PACKAGE

- One VTech® Press 'n Play Learning Board learning toy
- One instruction manual

 
WARNING:

All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is **OFF**.
2. Locate the battery cover at the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 3 new "AA" (UM-3/LR6) batteries as illustrated. (The use of new, alkaline batteries is recommended for maximum performance.)



4. Replace the battery cover and tighten the screw to secure.

BATTERY NOTICE

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.

- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. To begin play, press the **ON/OFF BUTTON**. Winnie the Pooh will greet you and the toy will automatically enter the **Learn It** activity until another activity is selected.
2. Press one of the 5 honey pots at the top to select an activity to play.
3. To repeat what Pooh has previously said, press the **REPEAT BUTTON**.
4. To increase or reduce the volume, adjust the **VOLUME CONTROL SWITCH**.
5. Press the **ON/OFF BUTTON** again to turn the unit off.



ACTIVITIES

Learn It



In **Learn It**, Pooh will ask you to press a word to start learning. Press a word/number to hear the corresponding word/number. Press the word a second or third time to hear related sound effects and beginning letters.

Word Fun



In this activity, Pooh will ask you to find a word or a word that begins with a specific letter. Press the corresponding word to answer.

Number Fun



In **Number Fun**, Pooh will ask you to count some items that are in the picture. To answer, just press the correct number. Pooh will also ask you to find who has more of something. To answer, just press the correct word.

Find It



In this activity, Pooh will ask you to find a word/number. To answer, just press the corresponding word/number. Pooh may ask you to find a word/number by just giving a hint. Think carefully!

Follow Me



In **Follow Me**, Pooh will call out three words in a row. Listen carefully and repeat the sequence by pressing the words in the same order as Pooh. If you answer correctly, Pooh will call out the same sequence with another word added on.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Winnie the Pooh** electronic learning products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

FCC Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

© 2005 VTech
Printed in China
91-02109-001 (美)

Note

7