

vtech[®]

User's Manual

Catch-Me-Kitty™



© 2011 VTech
Printed in China
91-002585-003 美

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,


Your friends at **VTech**[®]

To learn more about the **Infant Learning**[®] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Catch Me Kitty™** learning toy!

The **VTech® Catch Me Kitty™** is an adorable kitten that moves across the floor, encouraging your child to chase it. As your child approaches the kitten, a sensor knows your child is near and the cat reacts with sounds and motion. This fun feline has three shape buttons that help your child develop motor skills, and with its motion, sound, and teaching capabilities, the **Catch-Me-Kitty™** is the purr-fect toy for your baby.

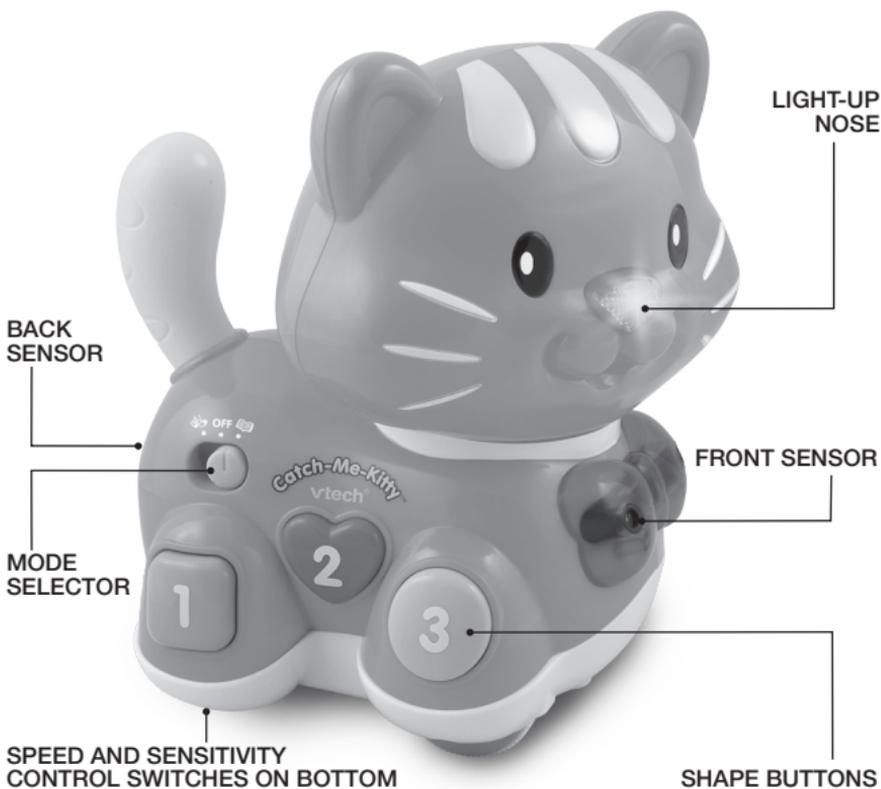

INCLUDED IN THIS PACKAGE

- One VTech® Catch Me Kitty™
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this instruction manual as it contains important information.


Demo strip removal:

When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 4 new 'AA' (LR6/AM-3) batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw to secure.

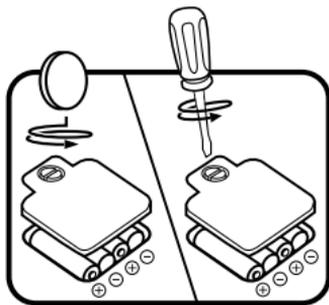

BATTERY NOTICE


- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Do not mix old and new batteries.

- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

PRODUCT FEATURES

1. MODE SELECTOR

To turn the unit **ON**, slide the **MODE SELECTOR** to the **Explore Mode** (📖) or the **Play Mode** (🎮) position. To turn the unit **OFF**, slide the **MODE SELECTOR** to the **OFF** position.

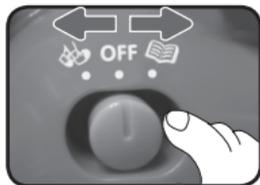

2. SHAPE BUTTONS

Press the three **SHAPE BUTTONS** to learn shapes, numbers and rhymes.




3. SPEED CONTROL SWITCH

Slide the **SPEED CONTROL SWITCH** to select high (↕) or low (▼) speed.



4. SENSITIVITY CONTROL SWITCH

Slide the **SENSITIVITY CONTROL SWITCH** to select high (📡) or low (📡) sensitivity of the front sensor.

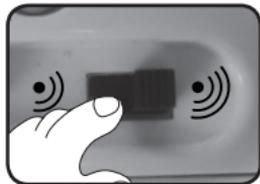


5. AUTOMATIC SHUT-OFF

To preserve the battery life, the **VTech® Catch Me Kitty™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Slide the mode selector to the **Explore Mode** () or **Play Mode** () position to turn on the unit. You will hear an entertaining sing-along song, a short tune, sound effects and talking phrases that relate to the mode. The light will flash with the sound.
2. In **Play Mode**, the kitty will run away and encourage you to chase it. Chase the kitty. The kitty can sense when it runs into obstacles and will turn around and run in the other direction. Press the shape buttons to hear rhymes and sound effects in this mode.
3. In **Explore Mode**, press the shape buttons to learn shapes, numbers and rhymes. You can also chase the kitty in this mode, as above.

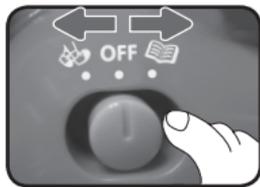

MELODY LIST

1. Row, Row, Row Your Boat
2. My Bonnie Lies Over the Ocean
3. Three Little Kittens
4. Hey Diddle Diddle
5. London Bridge
6. Little Miss Muffet

SING-ALONG SONG

“Catch me, catch me, if you can.
I'm a kitty who likes to play!
Chase me, race me, you'll have fun.
Ready, steady, come on let's run!”

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. For best performance, it is recommended that you use new batteries, otherwise the kitty may move slowly. Do not mix old and new batteries, different types of batteries, etc.
6. It is not recommended to play with the kitty in bright sunlight, as bright light will affect the front sensor. It is not recommended to play with this toy outside.
7. It is recommended to play with this toy in open spaces, free of obstacles that the kitty might bump into.
8. For best performance, it is not recommended to play with this toy on thick carpet or rugs. Solid surfaces are best.
9. If you receive abnormal or no response, please turn the kitty off and on again.
10. The kitty's front sensor is ultrasonic, and it emits high-frequency sound waves. Should you notice your pet having an adverse reaction to the sensor, discontinue use of the product around the pet.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.



**CLASS 1
LED PRODUCT**