

VTECH®

LITTLE SMART

Land 'n Sea JAMBOREE™

USER'S MANUAL



©VTECH
Printed in China
91-01331-000 美


Dear Parent:

At VTECH® we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. Whether it's introducing numbers and letters, identifying colors and shapes, or stimulating senses with lights and music, all VTECH® infant and toddler learning products encourage your child's natural growth and discovery skills. When it comes to providing electronic learning products that enlighten, entertain and develop minds, at VTECH® we see the potential in every child.

INTRODUCTION

Thank you for purchasing the **LITTLE SMART Land 'n Sea Jamboree™** learning toy! This product is one of a family of high-quality **LITTLE SMART®** electronic learning toys. We at **VTECH®** are committed to providing the best possible products to entertain and educate your child. Should you have any questions or concerns, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

The **LITTLE SMART Land 'n Sea Jamboree™** is a fun musical toy for infants 6 months and up. Chunky shape buttons teach letters and colors, and the soft battable animal figures say a variety of words. The musical keyboard and fun sound effects invite baby to be creative. The **LITTLE SMART Land 'n Sea Jamboree™** is boat loads of musical fun!

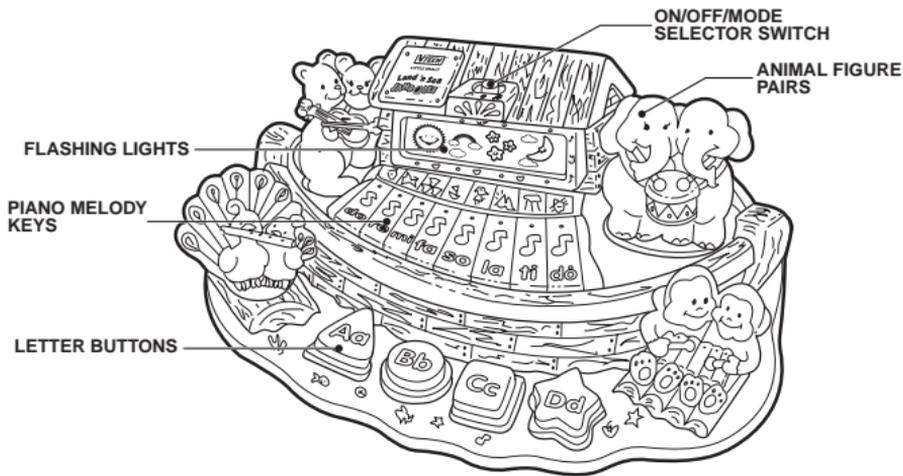


INCLUDED IN THIS PACKAGE

- One **LITTLE SMART Land 'n Sea Jamboree™** learning toy
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 new "AA" (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

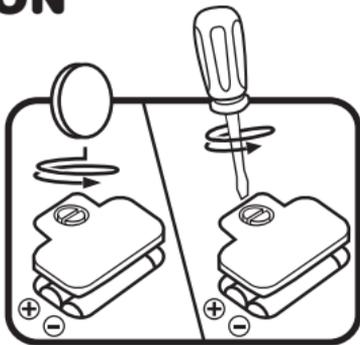

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.

- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.


NOTE: If for some reason the program/activity stops working, then please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.


If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, and a service representative will be happy to help you.

TO BEGIN PLAY


1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to either the **TALKING MODE** (😊) or the **MUSIC MODE** (🎵) position to turn the unit **ON**. You will hear a short tune. The lights will flash along with the sound.

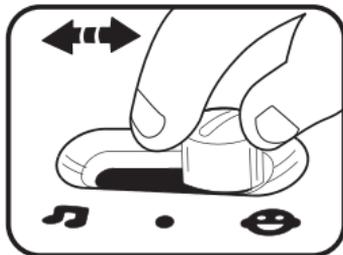

2. To adjust the volume, slide the **VOLUME CONTROL SWITCH** located on the bottom of the unit to (🔊) for **Low Volume** or (🔊🔊) for **High Volume**.

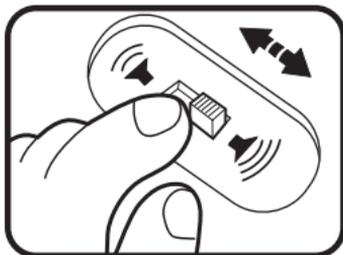

3. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** (●) position to turn the unit **OFF**.

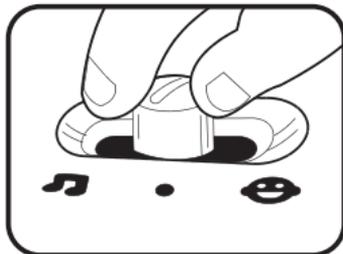


Note: To preserve battery life, the **LITTLE SMART Land 'n Sea Jamboree™** learning toy will turn off automatically after a few minutes without input. The unit can be turned on again by pressing any button.

ACTIVITIES


A. Talking Mode

1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **TALKING MODE** (😊) position. You will hear a short tune. The lights will flash along with the music.

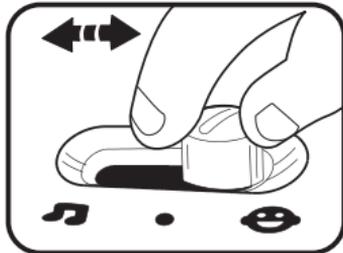


2. Press one of the **ANIMAL FIGURES** to hear a short phrase followed by a fun sound effect. The lights will flash along with the sound.


"Pretty" +
magical SFX

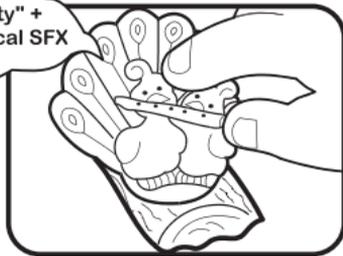


3. Press the **ANIMAL FIGURE** a second time to hear the musical instrument play a random melody. The lights will flash along with the music.

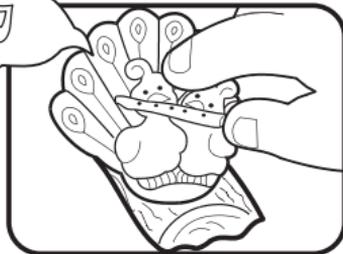

4. Press one of the **LETTER BUTTONS** to hear the letter identified. A light will flash along with the voice.

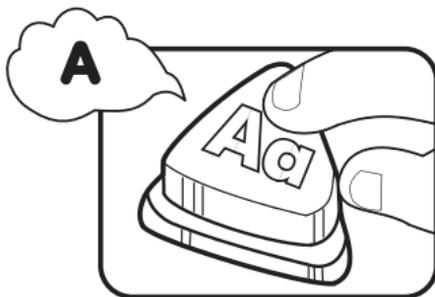

5. Press one of the **LETTER BUTTONS** while a melody is playing to hear the letter identified on top of the melody.

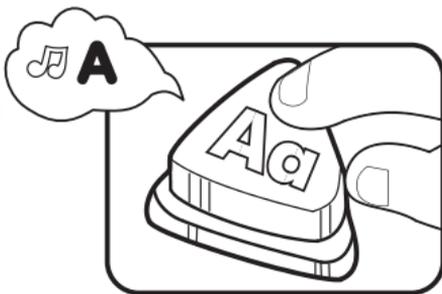


6. Press one of the **PIANO KEYS** to select a melody. The lights will flash along with the music.




Cheerful Melodies:

- Twinkle Twinkle Little Star
- Row Row Row Your Boat
- London Bridge
- Au Clair de la Lune
- Animal Fair
- My Bonnie Lies Over the Ocean
- Bicycle Built for Two
- Sailing Sailing

7. Press one of the **ANIMAL FIGURES** while a melody is playing to hear the animal sound effect play on top of the melody. The lights will flash along with the music.

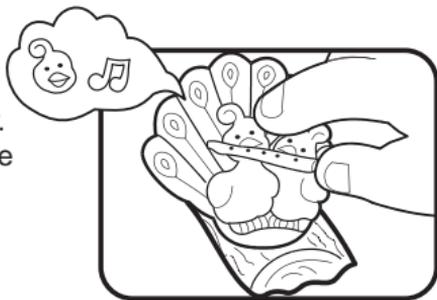


8. Press the **ANIMAL FIGURE** a second time while the melody is playing to change the instrument playing. The lights will flash along with the music.

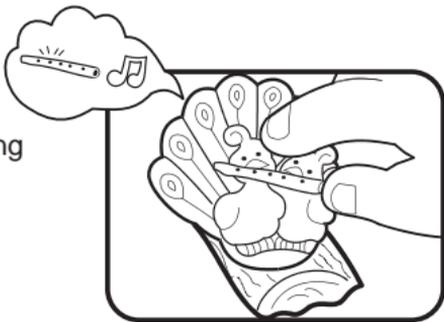


B. Music Mode


1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **MUSIC MODE** () position. You will hear a short tune. The lights will flash along with the music.

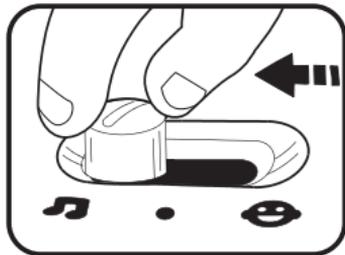


2. Press one of the **ANIMAL FIGURES** to hear the musical instrument play a random melody. The lights will flash along with the music.

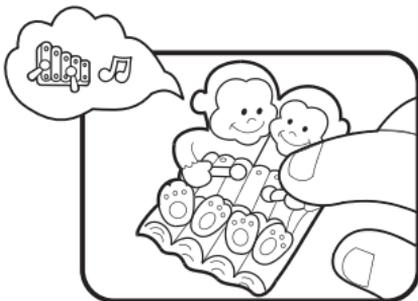

3. Press one of the **ANIMAL FIGURES** while a melody is playing to change the instrument sound. The lights will flash along with the music.

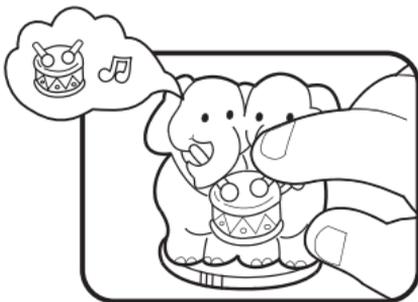

4. Press one of the **LETTER BUTTONS** to hear the color identified followed by a random melody. The lights will flash along with the sound.

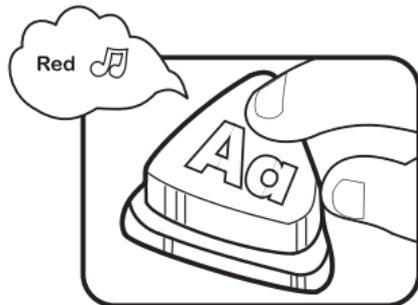

5. Press the **PIANO KEYS** to play music notes. The lights will flash along with the music notes.



CARE AND MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

IMPORTANT NOTE

Creating and developing Infant/Toddler products is accompanied by a responsibility that we at **VTECH**[®] take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this product with respect to the receiver
- move this product away from the receiver