

vtech[®]

User's Manual

Record & Learn Photo Album™



© 2010 VTech
Printed in China
91-002442-005-000 (美)

Dear Parent,

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

 
At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

*Sincerely,
Your friends at VTech®*

*To learn more about the **Infant Learning**® and other VTech® toys, visit www.vtechkids.com*

INTRODUCTION

Thank you for purchasing the **VTech® Record & Learn Photo Album™**. The **VTech® Record & Learn Photo Album™** provides a unique combination of learning and family fun! Place seven of your favorite family photos in the textured pages, and record your own message for each photo. The album also teaches colors while baby explores. Music mode features more than 20 melodies. The handy carry handle flips to convert the album into a stand-up frame.

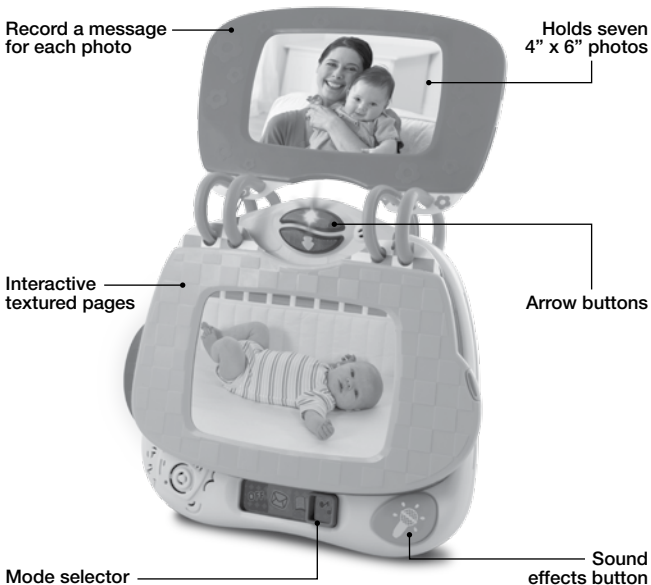

INCLUDED IN THIS PACKAGE

- One VTech® Record & Learn Photo Album™
- One user's manual
- Spare warning labels (20 pieces)

WARNING:

1. All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.
2. Photos can contain harmful substances. Please do not remove plastic sleeve in case your child tries to touch or place the photo in his or her mouth.

Demo strip removal:

When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode.



 
NOTE:

Please keep user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box.
4. Replace and tighten the screw to secure the battery cover.

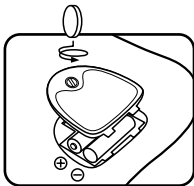

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

 
WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

ASSEMBLY INSTRUCTIONS


CAUTION:

TO ENSURE YOUR CHILD'S SAFETY, THIS PRODUCT MUST BE ASSEMBLED BY AN ADULT.

1. Pull the tab on the right hand side of the page down, toward the back of the unit, to allow a gap between the back and front pages.

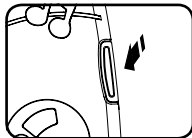


  2. Pull the plastic sleeve out of the gap and place your image/images into the plastic sleeve, then seal with the supplied warning label (we recommend you don't remove the warning label).

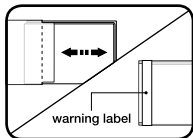



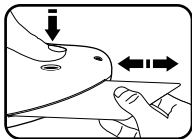

3. Repeat step 1 and replace the sleeve with your photos in it.

4. To insert an image into the back page of the album, turn the unit over and push down the orange button on the back. This will release the plastic sleeve in the back of the frame, allowing you to place your photo into the sleeve of plastic. Once inserted, replace it into the back page.





PRODUCT FEATURES

 
1. MODE SELECTOR

To turn the unit **ON**, slide the **Mode Selector** to the **Message Mode** [], **Learning Mode** [] or the **Music Mode** [] position. To turn the unit **OFF**, slide the **Mode Selector** to the **OFF** [] position.



2. VOLUME CONTROL SWITCH

To adjust the volume, slide the **VOLUME CONTROL SWITCH**, on the back of the unit, to the **LOW VOLUME** [] or the **HIGH VOLUME** [] position.

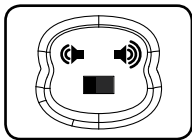

3. TWO WAYS TO PLAY

The **VTech® Record & Learn Photo Album™** can be used as a photo album or a standing frame. To use the album as a frame, fold the handle toward the back of the unit and use this as a stand.



4. SECURING THE PAGES

Pull out the string, located above the Mode Selector, and pull it over the knob on the first page to secure the pages for carrying.



5. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Record & Learn Photo Album™** will automatically power-down after approximately one minute without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Slide the **Mode Selector** to one of the modes to turn the unit on. You will hear an entertaining sing-along song, amusing phrase and fun melodies. The lights will flash with the sound.

2. **Message Mode**

Message Mode allows you to record a personal message for each photo. To record a message, turn to the page/photo for which you wish to record a message. Press and hold the **Sound Effects Button** until you hear a beep (approximately 2 seconds). The **Arrow Buttons** will begin to blink. Release the **Sound Effects Button**, and press and hold the **Arrow Button** that corresponds to your photo. You will hear another beep that signals you to begin recording. Record your message while continuing to hold the **Arrow Button**.

When you are finished recording your message, release the **Arrow Button**. There are about seven seconds allowed for each message.

Once your message is recorded, press the corresponding **Arrow Button** to hear your message, along with a short tune.

Note: If there is no message recorded, you will only hear a short tune when pressing an **Arrow Button**.

3. **Learning Mode**

Press the **Arrow Buttons** to learn the color of each page. Press the **Sound Effects Button** to be asked to find each page by color.

4. **Music Mode**

Press the **Arrow Buttons** to hear 28 different melodies. Press the **Sound Effects Button** to hear sound effects over the music.

5. **Sound Effects Button**

Press the **Sound Effects Button** to hear fun sound effects.

6. If there is no input after approximately 10 seconds, you will hear a fun sound or melodies and a phrase. After another 20 seconds without input, a cheerful sing-along song or melody will be played. If there continues to be no input after another 30 seconds, you will hear “Bye bye” and the unit will power down. The unit can be turned on again by pressing any button.

MELODY LIST

1. London Bridge
2. It's Raining, It's Pouring
3. Pop! Goes the Weasel
4. Shoo, Fly
5. Polly Wolly Doodle
6. Bingo
7. Twinkle, Twinkle, Little Star
8. Oh, Susanna
9. Sailing, Sailing
10. My Bonnie Lies Over the Ocean
11. Row, Row, Row Your Boat
12. Water Music Suite 1 (Handel)
13. Frere Jacques
14. Water Music Suite 2, Allegro (Handel)
15. Hey, Diddle Diddle
16. Pease Porridge Hot
17. Au Claire de la Lune
18. Sleeping Beauty Waltz
19. Hickory Dickory Dock
20. Brahms Lullaby
21. Three Blind Mice
22. Ode to Joy
23. Sing a Song of Sixpence
24. Waltz of the Flowers (Tchaikovsky)
25. The Glow Worm
26. Air - Bach
27. Three Little Kittens
28. Four Seasons - Spring, 3rd Movement (Vivaldi)

SONG LYRICS

Song 1: (To the tune of 'Twinkle, Twinkle, Little Star')

Special faces look at you.

See those people who love you.

Song 2: (To the tune of 'Mulberry Bush')

Look at all of the pictures here!

Friendly faces, full of cheer.

Look at all of the pictures here!

Everyone wants to play.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1
LED PRODUCT

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.
CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.