

vtech[®]
Baby

Parent's Guide

Glowing Lullabies Elephant™



91-003457-021 ©

INTRODUCTION

Thank you for purchasing the **Glowing Lullabies Elephant™**. This plush toy elephant features a soft, glowing tummy with color-changing lights and helps calm little ones with up to 15 minutes of familiar melodies. Press its tummy to hear soothing lullabies, loving phrases and relaxing sounds.



Light-Up Button



On/Off/Volume Control Switch




INCLUDED IN THIS PACKAGE

- One **Glowing Lullabies Elephant™**
- One parent's guide


WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.



NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.



WARNING: Keep this soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.

ATTENTION : Garder cette peluche hors de l'environnement de sommeil des bébés de moins de douze mois afin d'éviter tout risque de suffocation.



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



 
ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the electronic module inside the elephant. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
4. Replace the battery cover and tighten the screw to secure.

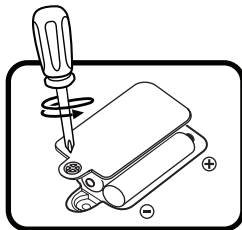

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

 
- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

ASSEMBLY INSTRUCTIONS

With the **Glowing Lullabies Elephant™**, safety comes first. Adult assembly required. For your child's safety, do not let them play with this toy until it is fully assembled.


 

Electronic Module

1. To remove the electronic module, open the hook-and-loop closure on the back of the elephant. Press the button on the left side of the electronic module to detach and remove it.
2. To reinsert the electronic module, press the same button you used to remove the electronic module and click it onto the tab inside the back of the elephant. When the electronic module is inserted correctly, you will hear a clicking sound. Seal the hook-and-loop closure.

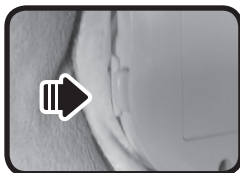

PRODUCT FEATURES

1. On/Off/Volume Control Switch

To turn the elephant **ON**, slide the **On/Off/Volume Control Switch** to the **Low Volume** () or **High Volume** () position. You will hear a phrase, giggle sound and song. To turn the elephant **OFF**, slide the **On/Off/Volume Control Switch** to the **OFF** () position.



2. Automatic Shut Off

To preserve battery life, the **Glowing Lullabies Elephant™** will automatically power down shortly after the responses have finished. The elephant can be turned on again by pressing the **Light-Up Button**.

Note: If the unit repeatedly shuts down, or the light flickers then fades out, we recommend changing the batteries.

ACTIVITIES

1. Light-Up Button

Press the **Light-Up Button** to hear soothing phrases, songs, nature sounds and soft melodies. You will hear approximately 15 minutes of music play after each press of the button. The light will fade in and out and change colors with the sounds. Press and hold the **Light-Up Button** for approximately three seconds to stop the current response.



SONG LYRICS

SONG 1

Close your eyes now and rest,
May these hours be blessed.
Till the sky's bright with dawn,
When you wake with a yawn.

SONG 2


Over in the jungle,
Under the moon's glow.
The stars, they shine so beautifully,
So off to sleep we go.





MELODY LIST

1. Alouette
 2. Beautiful Dreamer
 3. Jesu, Joy of Man's Desiring - Johann Sebastian Bach
 4. All Through the Night
 5. Hush, Little Baby
 6. Morning - Edvard Grieg
 7. London Bridge
 8. Danny Boy
 9. Cockles and Mussels
 10. Rock-a-bye Baby
 11. Bicycle Built for Two
 12. Cradle Song - Wolfgang Amadeus Mozart
 13. The Nutcracker - Pyotr Ilyich Tchaikovsky
 14. Eine kleine Nachtmusik - Wolfgang Amadeus Mozart
 15. The Four Seasons (Spring) - Antonio Vivaldi
 16. Diddle, Diddle, Dumpling
 17. Pussy Cat, Pussy Cat
 18. Yankee Doodle
 19. Sweet and Low - Joseph Barnby
 20. There's Music in the Air - George Frederick Root
 21. Cradle Song - Carl Maria von Weber
 22. Home, Sweet Home - Henry Bishop and John Howard Payne
 23. Polly Put the Kettle On
 24. Down by the Riverside
 25. A Paper of Pins
 26. Lavender's Blue
 27. Aiken Drum
 28. Canon in D - Johann Pachelbel
 29. Berceuse - Chopin
 30. Toyland
- 
- 

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- 

- 
- 
3. Remove the batteries when the unit is not in use for an extended period of time.
 4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

IMPORTANT NOTE:





Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.




Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in




accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.
CAN ICES-003(B)/NMB-003(B)



Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

Trade Name:	VTech®
Model:	5086
Product name:	Glowing Lullabies Elephant™
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website:	vtechkids.com



**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003457-021