

vtech[®]

User's Manual

Light-Up Baby Touch Tablet™



© 2014 VTech
Printed in China
91-002910-000 US CA

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

Your friends at **VTech**[®]


To learn more about the **Infant Learning**[®] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Light-Up Baby Touch Tablet™**.

The **Light-Up Baby Touch Tablet™** introduces baby to the tablet world. Special apps allow baby to learn about letters and numbers, open emails just like mom and dad, check the time or the weather. Interact with the light-up screen by tapping or swiping.

Tap, swipe and learn with Cody The Smart Cub!

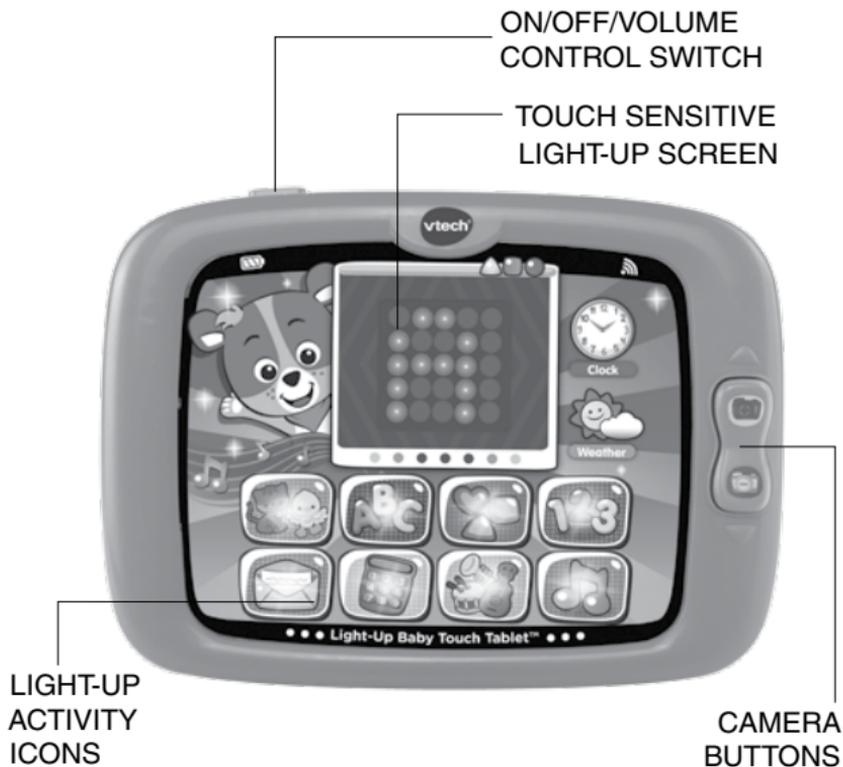

INCLUDED IN THIS PACKAGE

- One VTech® Light-Up Baby Touch Tablet™
- One User's Manual

WARNING:

All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.


ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE:

Please keep this user's manual as it contains important information.

Unlock the packing locks:

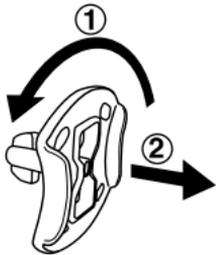


- ① Rotate the packing locks 90 degrees counter-clockwise.
- ② Pull out the packing locks.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.

3. Install 3 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

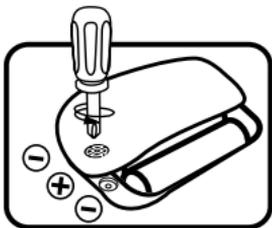


BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.

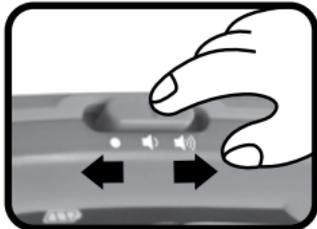

2. TOUCH SENSITIVE LIGHT-UP SCREEN


Use your finger to swipe the screen left, right, up or down to see the previous or next screen. Tap the screen to repeat the concept that was just introduced.

3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Light-Up Baby Touch Tablet™** will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing camera button.

ACTIVITIES

1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a playful song and hear an encouraging phrase. The lights will flash with the sounds and the screen will show fun animations.

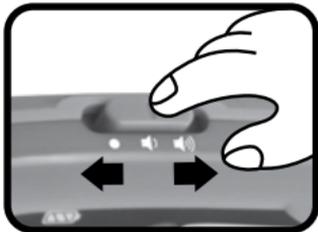


2. Touch the **8 activity icons** to learn about letters, numbers, shapes, animals, musical instruments and music. The lights will flash with the sounds and the screen will show fun animations.



3. Touch the **clock** or **weather icons** to learn about time concepts and weather. The lights will flash with the sounds and the screen will show fun animations.



4. Touch **Cody The Smart Cub** to play a fun game. Touch the light-up screen to answer. The lights will flash with the sounds and the screen will show fun animations.
5. Press the **camera zoom in/zoom out** buttons to hear playful phrases and sounds. The lights will flash with the sounds and the screen will show fun animations.

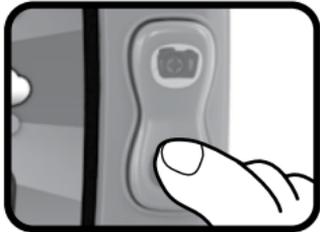

MELODY LIST

1. A-Tisket, A-Tasket
2. Humpty Dumpty
3. Jack and Jill
4. London Bridge
5. Three Little Kittens
6. Old King Cole
7. Polly Put the Kettle On
8. Ring Around the Rosie
9. Teddy Bears' Picnic
10. Old MacDonald Had a Farm
11. The Bear Went Over the Mountain
12. Did You Ever See a Lassie?
13. The Farmer in the Dell
14. The Glow Worm
15. I've Been Working on the Railroad

16. Yankee Doodle
17. Can Can
18. Toyland
19. This Old Man
20. Twinkle, Twinkle, Little Star

SUNG SONG LYRICS

SONG 1

Hello friend!
I'm so happy you are here to play!

SONG 2

A,B,C,D,E,F,G
have fun learning letters with me!

SONG 3

Learning numbers is so much fun,
Let's start now, count from 1!

SONG 4

Square, heart and star,
Learning shapes, the fun never ends!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

CLASS 1
LED PRODUCT