

vtech[®]

User's Manual

Lil' Baker Smart Kitchen™



© 2011 VTech
Printed in China
91-002586-000 (美)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

Your friends at **VTech**[®]

To learn more about the **Infant Learning**[®] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Lil' Baker Smart Kitchen™** learning toy!

Learn what's cooking with the **VTech® Lil' Baker Smart Kitchen™**! Through role-play fun, baby can stir up the alphabet soup, roll out some cookies, and wash the dishes when they are all done! Three shape sorter pieces can be sorted into the oven while the kitchen sink reminds little ones to wash their hands. The kitchen teaches opposites, names of foods, colors, shapes, numbers, and so much more.

REMOVABLE POT

FAUCET BUTTON

SHAPE SORTER
PIECES

MODE SELECTOR
SWITCH

ON/OFF/VOLUME
CONTROL SWITCH



INCLUDED IN THIS PACKAGE

- One VTech® Lil' Baker Smart Kitchen™
- One instruction manual
- One removable pot
- Two utensils
- Three shape sorter pieces

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE:

Please keep this instruction manual as it contains important information.

Unlock the packaging locks:

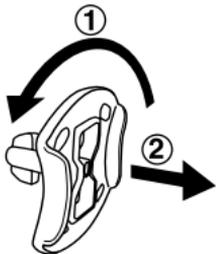

- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.


Please cut and discard the cord between the pot and the bottom cabinet before playing with the unit. This cord is not part of the product and should be discarded for your child's safety.



INSTRUCTIONS

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

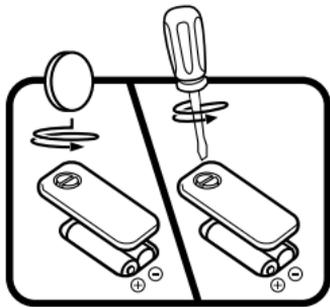

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.


- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES


1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, turn the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or the **HIGH VOLUME** () position. To turn the unit **OFF**, turn the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.

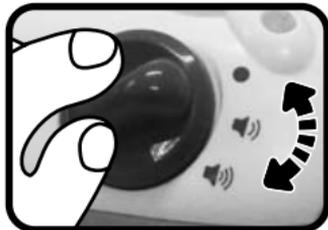

2. MODE SELECTOR SWITCH

To choose a mode of play, slide the **MODE SELECTOR SWITCH** to the **LEARNING MODE** or the **PLAY MODE** position.


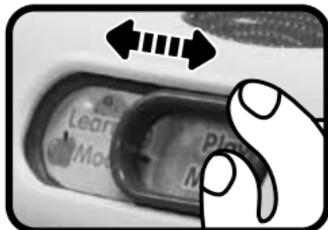


3. AUTOMATIC SHUT-OFF





To preserve battery life, the **VTech® Lil' Baker Smart Kitchen™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Turn the **on/off/volume control switch** to turn the unit on. You will hear a sing-along song, phrase and sounds in the learning mode. In the music mode you will hear a fun phrase and a short tune. The lights will flash with the sound.
2. Put the **removable pot** on or take it off the stove to hear a variety of fun sounds, playful phrases or short tunes, depending on the mode of play. The light will flash with the sound.
3. Put the **spoon** in the pot to stir the alphabet soup, you will hear a sing-along song, sounds and phrases. The light will flash with the sound.
4. Insert the **shape sorter pieces** into the shape sorter slots on the oven. You will hear a variety of fun sounds, short tunes, melodies and learn the names of the shape and the food, depending on the selected mode. The lights will flash with the sound.

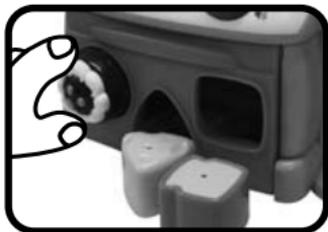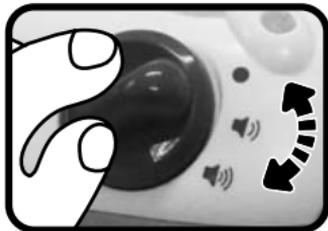

5. Open the **oven door** to release the shapes. You will hear playful phrases and sounds. The lights will flash with the sound.
6. Roll the **cookie roller** to hear a sing-along song, melodies and sounds. The light will flash with the sound.
7. Press the **faucet button** to hear water sounds and friendly reminders about cleanliness. The light will flash with the sound.
8. Press the **fruit button** to learn the names and colors of fruit, and hear fun sounds and short tunes. The light will flash with the sound.
9. Open and close the **dishwasher door** to learn opposites and hear sounds and short tunes. The light will flash with the sound.

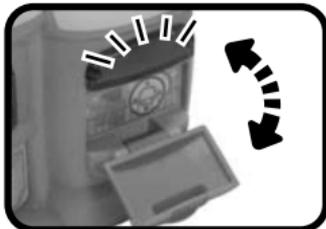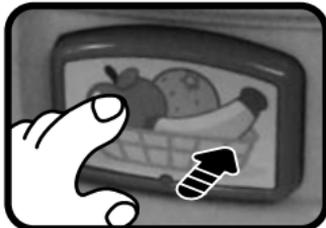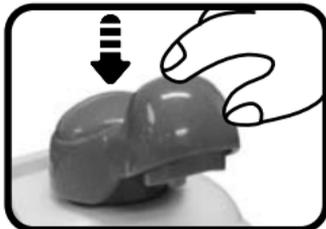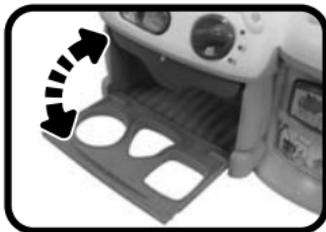

MELODY LIST

1. Pat-a-Cake
2. Sing a Song of Sixpence
3. Oat, Peas, Beans and Barley
4. Little Miss Muffet
5. Polly Put the Kettle On
6. Big Rock Candy Mountain
7. Teddy Bears' Picnic
8. Pease Porridge Hot

SING-ALONG SONG LYRICS

SONG 1

Little chef in the kitchen,
Cooking food for all to eat!
Rolling, stirring!
Yum! What a treat!

SONG 2

Stirring up my pot, what do I see?
A-B-C-D-E-F-G!
Alphabet soup, alphabet soup!
I cooked up a pot of alphabet soup, yummy!

SUNG 3

Roll, roll, roll the dough,
Roll it flat for me.
One, two, three, four,
Baking cookies with me!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

