

**vtech**<sup>®</sup>


Instruction Manual

# **SUPER SOUND** **KARAOKE**<sup>™</sup>




# INTRODUCTION

Thank you for purchasing the **SuperSound Karaoke™**. Bring the party wherever you go with this portable **Bluetooth®** speaker and corded microphone. The multicolored party light adds to the atmosphere, and sound controls allow you to adjust the volume, create an echo and other voice-changing effects. Warm up your singing voice with the built-in vocal exercises. Ready to party? Turn it up!

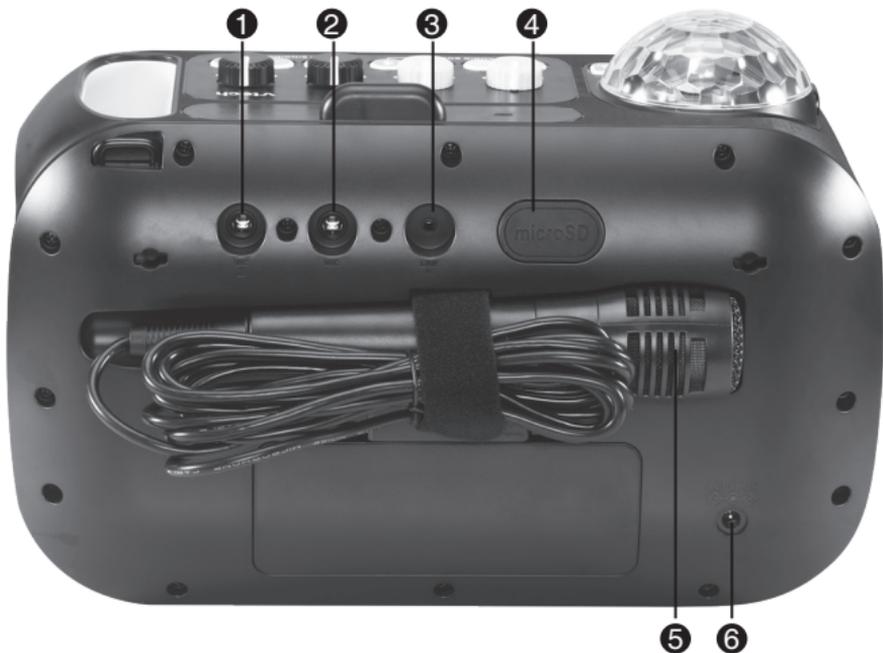

- ❶ 6.35mm Mic 2 Jack
- ❷ 6.35mm Mic 1 Jack
- ❸ Line-in Jack
- ❹ microSD Card Slot
- ❺ Corded Microphone (with 6.5-foot cord)
- ❻ AC Adapter Jack

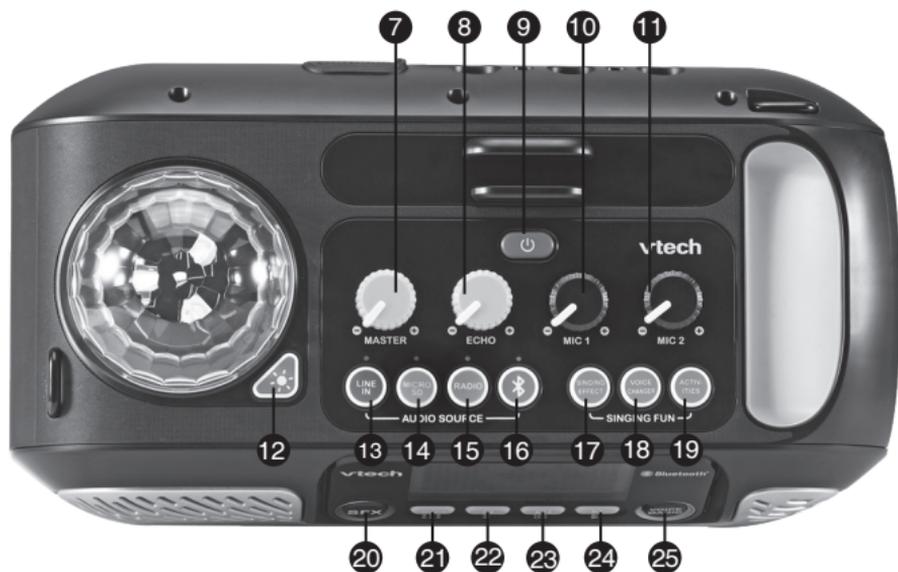

- |   |                         |
|---|-------------------------|
| 7 Master Volume Dial                    | 20 SFX Button           |
| 8 Echo Dial                             | 21 Mode Button          |
| 9 Power Button                          | 22 Back Button          |
| 10 Mic 1 Volume Dial                    | 23 Play/Pause/OK Button |
| 11 Mic 2 Volume Dial                    | 24 Next Button          |
| 12 Party Light On/Off Button            | 25 Voice Magic Button   |
| 13 Line-in Button                       |                         |
| 14 microSD Button                       |                         |
| 15 Radio Button                         |                         |
| 16 <i>Bluetooth</i> <sup>®</sup> Button |                         |
| 17 Singing Effect Button                |                         |
| 18 Voice Changer Button                 |                         |
| 19 Activities Button                    |                         |

Adapter, cable, music player, microSD card and second microphone not included.

# INCLUDED IN THE PACKAGE

- SuperSound Karaoke™
- Microphone
- Quick Start Guide

## **NOTE**

Please save this Instruction Manual as it contains important information.

## **NOTE**

Before first use, we recommend ensuring that the volume is lowered.

## **NOTE**

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.


## **NOTE**

Avant la première utilisation, nous vous recommandons de vous assurer que le volume sonore principal est réglé vers le bas.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 6 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover.

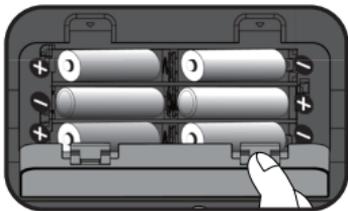

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the product.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the product before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## POWER ADAPTER CONNECTION

- Make sure the unit is turned **Off**.
- Locate the **AC Adapter Jack** on the back of the unit.
- Connect an AC adapter (not included) to the **AC Adapter Jack**.
- Plug the adapter into a power outlet.
- Press the **Power Button** to turn the system **On**.

### NOTE

If the unit will not be used for an extended period of time, unplug the adapter.

### Safety Information

We recommend using a power supply (AC/DC adapter) of the below specification:

Power rating: 12V/2A DC output with 3.5mm plug (positive center).

- Never clean a plugged-in product with liquid.
- Please examine the power supply periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the supply cord, output cord, plug, blades, housing, or other parts) and that, in the event of such conditions, the power supply should be properly disposed of.

## PRODUCT FEATURES

### 1. Power Button

Press the **Power Button** to turn the unit **On**. Press it again to turn the unit **Off**.



## 2. Line-in Jack

Connect an external music player here using a 3.5mm jack audio cable (cable and music player not included).



## 3. microSD Card Slot

Insert a microSD card in this slot and push gently until you hear a click sound (microSD card not included).



## 4. AC Adapter

Connect the **SuperSound Karaoke™** to an AC power adapter (adapter not included).



## 5. Mic 1 and Mic 2 Jack

Plug the **Microphone** into the jack to connect (second microphone not included).



## 6. Party Light On/Off Button

Press this button to switch the party light **On** and **Off**.



# BUTTONS AND FEATURES

## 1. Volume Control

**Master Volume Dial, Mic 1 Volume Dial, Mic 2 Volume Dial, Echo Dial:**

Turn clockwise to increase the volume, counter-clockwise to decrease.



## 2. Line-in Button

Press the **Line-in Button** to listen to music from your connected external music player. (Music player not included.)

**Note:** All playback controls (including play/pause, back, next) can only be controlled by the external music player when an external music source is connected via Line-in. The Voice Magic feature is unavailable for Line-in.



## 3. microSD Button

Press the **microSD Button** to listen to music from the microSD card in (MP3 file format). Press the **Mode Button** to shuffle or repeat the music. (microSD card not included.)



## 4. Radio Button

Press this button to listen to FM radio. Change the station by pressing the **Back Button** or **Next Button**. If the signal is weak, please try another station or move the SuperSound Karaoke™ to a different area.



## 5. Bluetooth® Button

Press this button to hear music from a **Bluetooth®** connected device. Select “Vtech SuperSound Karaoke” from your **Bluetooth®** device, then input the PIN displayed on your SuperSound Karaoke™. Press the **Mode Button**, **Back Button** or **Next Button** if you would like to turn the PIN off. If there are any connection problems, please reset the **Bluetooth®** settings on your device.



## 6. Singing Effect Button

Press the **Singing Effect Button** to apply special effects to your voice.



## 7. Voice Changer Button

Press the **Voice Changer Button** to apply one of four voice-changing effects to your voice.




## 8. Activities Button

Press the **Activities Button** to enter the Activities menu. Use the **Left/Right Buttons** to select an activity, then press the **OK Button** to confirm.



### Activity 1: Singing Warm-Up

First, listen to the built-in instructor's voice, and then repeat. You can press the **Back/Next Button** to select a different scale. Press the **Mode Button** if you would like to quit the activity.

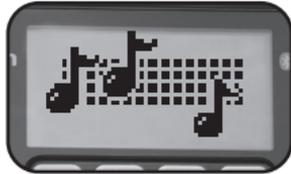


### Activity 2: Sing As You Like

Select the background music you would like, and then sing along to it.



### Activity 3: Singing Concert

Sing and hear an audience cheer you on!

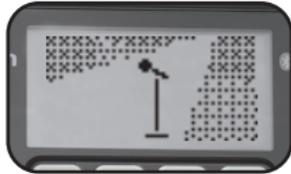

## 9. SFX Button

Press the **SFX Button** to play random fun sound effects.



## 10. Mode Button

When playing music from a microSD card, press this button to toggle, shuffle and repeat functions. Press this button during other activities to quit the activity.



## 11. Back Button, Play/Pause/OK Button and Next Button

Press these buttons to select and control songs and activities.



## 12. Voice Magic Button

Press the **Voice Magic Button** to reduce or remove the main vocal track of the song you're listening to.

**Note:** This feature is not available during Line-in mode. This feature may not work with every song, but works best for studio recorded songs.



# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

If there is a pairing problem with your *Bluetooth*<sup>®</sup> device, please follow these steps:

1. On your *Bluetooth*<sup>®</sup> enabled device, please go to *Bluetooth*<sup>®</sup> settings. If “SuperSound Karaoke” is found in your list of connected, paired or saved devices, please “forget” or “unpair” it.
2. Disable and enable *Bluetooth*<sup>®</sup> or restart your device.
3. Turn the unit **Off** and **On** and repeat the pairing process.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, insert a new set of batteries

### IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **FCC STATEMENT**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## Radiation Exposure Statement

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## Bluetooth Statement

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by **VTech**® is under license. Other trademarks and trade names are those of their respective owners.

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name: VTech®  
Model: 5474  
Product Name: SuperSound Karaoke™  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

