

**vtech**<sup>®</sup>

User's Manual

**Go! Go!**  **Smart Animals**<sup>®</sup>  
Playtime goes wild with learning!<sup>™</sup>

**Happy Paws Playland**<sup>™</sup>



© 2016 VTech  
All rights reserved  
**Printed in China**  
91-003249-004<sup>®</sup>

Dear Parent,

Welcome to the world of **Go! Go! Smart Animals**®! We're excited you've decided to go on an adventure with us and explore all that **Go! Go! Smart Animals**® has to offer. These toys have been designed to give your child a thrilling learning experience with hours of fun.

**Go! Go! Smart Animals**® features a collection of animals that interact with your child by lighting up and playing music and sounds while teaching your child letters and animal names\*. But that's only the beginning of the learning excitement! When your child interacts with our innovative **SmartPoint**® technology, they will love hearing the animals respond to each **SmartPoint**® location on **Go! Go! Smart Animals**® and **Go! Go! Smart Wheels**® playsets\* with different phrases, cheerful melodies, sing-along songs or sound effects.

Additionally, our **Go! Go! Smart Animals**® playsets can be connected to other playsets including **Go! Go! Smart Wheels**® to stimulate your child's creativity. The playsets also feature buttons, gears and other manipulative elements to encourage the development of your child's fine motor skills.

With **Go! Go! Smart Animals**®, playtime goes wild with learning!<sup>TM</sup>

Sincerely,

Your friends at **VTech**®

To learn more about **VTech**® toys, visit [vtechkids.com](http://vtechkids.com)

\*Each sold separately.

# INTRODUCTION


Play and explore with the **Go! Go! Smart Animals® Happy Paws Playland™** by **VTech®**. This exciting playland introduces time concepts, colors, songs and fun phrases. Put the cute cat in the elevator or on the eight **SmartPoint®** locations to trigger fun responses. You can also connect the tracks to other **Go! Go! Smart Animals®** playsets for more fun! (Each sold separately).

ON/OFF VOLUME  
CONTROL SWITCH

THREE LIGHT-UP  
BUTTONS

TRAP DOOR

ELEVATOR

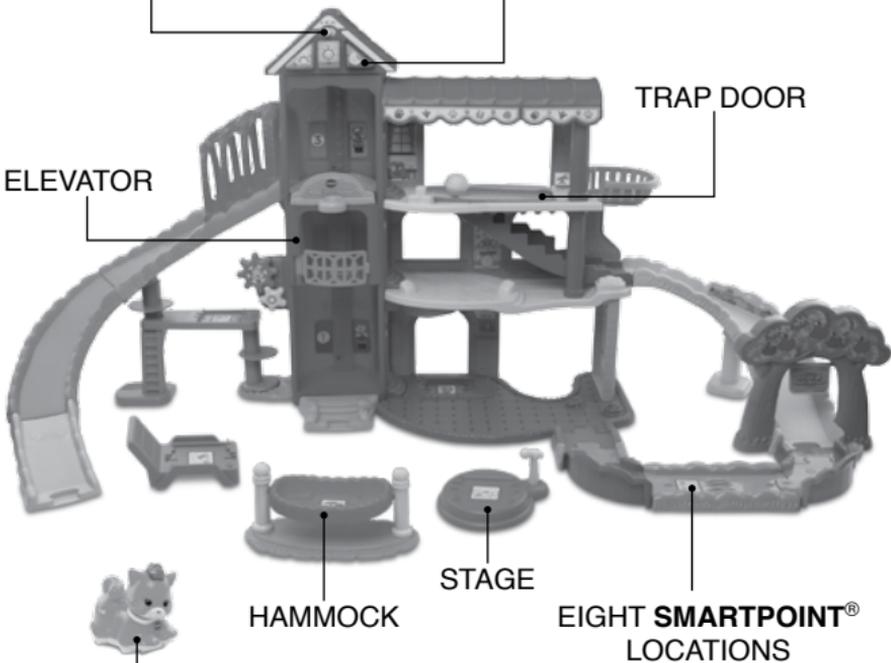


**SMARTPOINT®** CAT


# INCLUDED IN THIS PACKAGE



- One **SmartPoint**® cat
- One elevator roof
- One **SmartPoint**® elevator shaft
- One elevator exit
- One roof

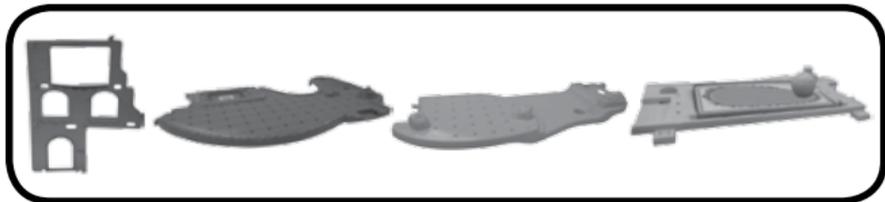


- One back wall
- One **SmartPoint**® first floor
- One second floor
- One third floor

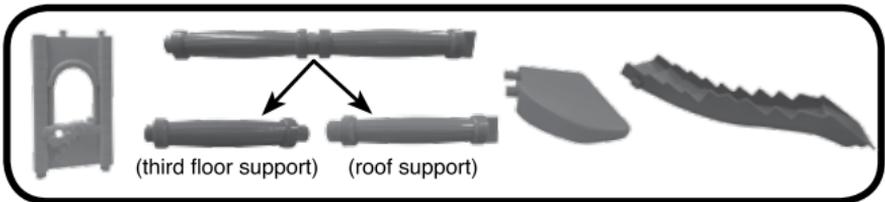


- One second floor support
- One third floor support (left) and one roof support (right), separate them before assembling
- One second floor support board
- One staircase slide



- One **SmartPoint**® balcony
- One 90-degree track, male
- One 90-degree track, female
- One **SmartPoint**® straight track
- One 1/4 straight track, male
- Two 1/4 straight tracks

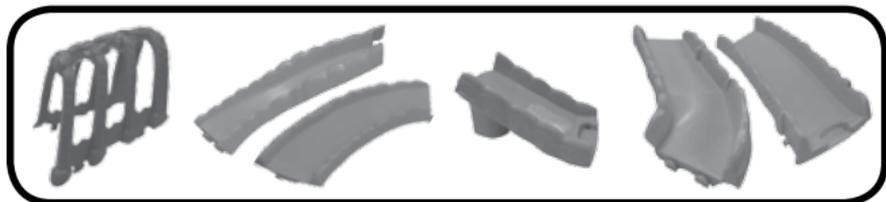

- One slide tunnel
- Two elevator ramp tracks
- One support track
- Two trap door ramp tracks

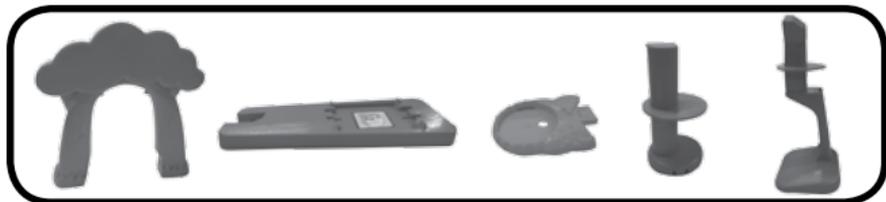

- One tree
- One **SmartPoint**® cat tree top
- One small cat tree slot
- One small cat tree support
- One large cat tree support




INCLUDED IN THIS PACKAGE



- One gear device
- One ramp track support
- One welcome board
- One **SmartPoint**<sup>®</sup> stage
- One microphone



- One **SmartPoint**<sup>®</sup> chair
- One **SmartPoint**<sup>®</sup> hammock
- Two hammock poles
- One hammock base

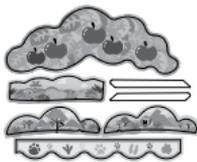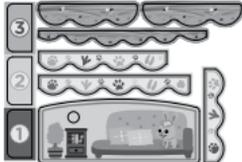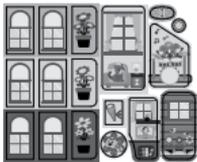


- Three label sheets
- User's manual

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**ATTENTION:** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep this user's manual as it contains important information.

## Unlock the packaging locks:

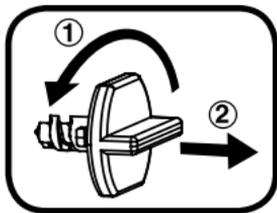


① Turn the packaging lock counter-clockwise several times.

② Pull out and discard the packaging lock.

## GETTING STARTED


### BATTERY INSTALLATION – CAT

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the cat. Use a coin or a screwdriver to loosen the screw.
3. Install two new “AAA” (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

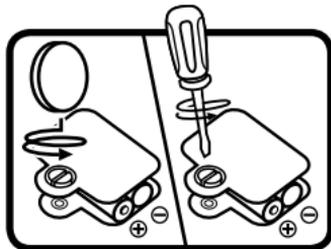

## BATTERY INSTALLATION – HAPPY PAWS PLAYLAND™





1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the **Happy Paws Playland™** elevator roof. Use a screwdriver to loosen the screw.
3. Install two new “AA” (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

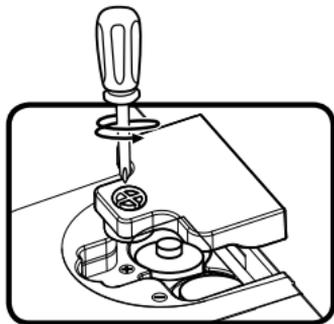


## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Please adhere the labels to the playset securely as indicated below:

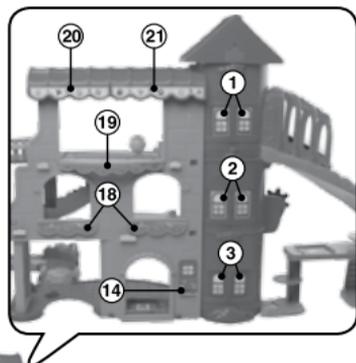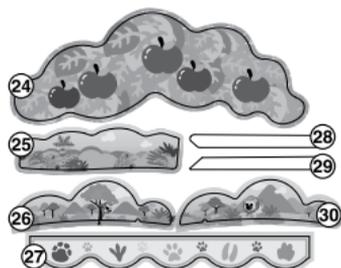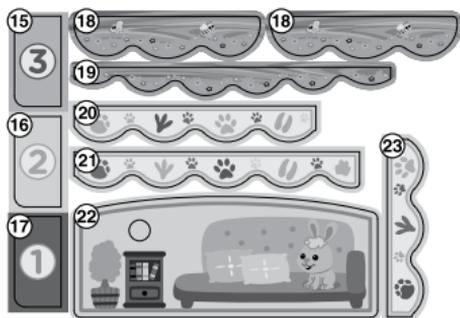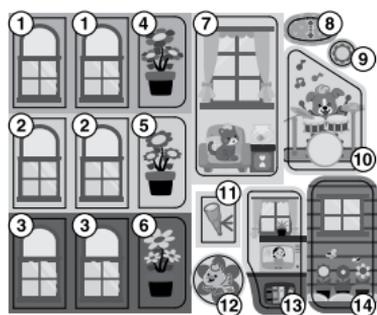

Back View


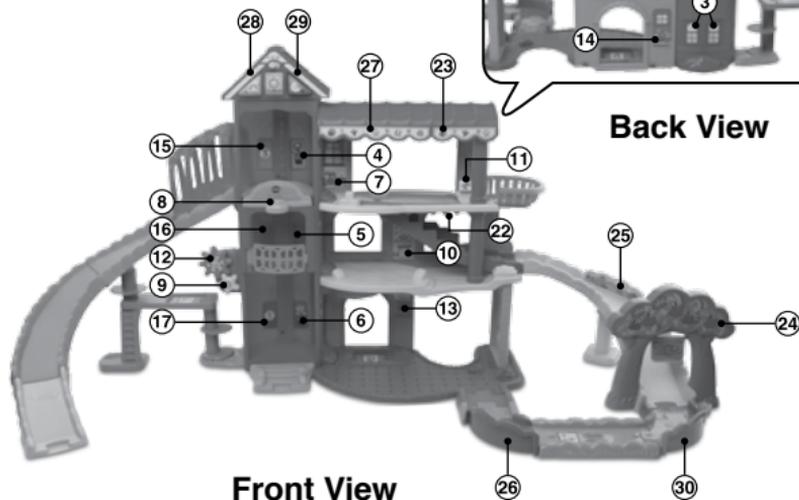


Front View



# ASSEMBLY INSTRUCTIONS

With the VTech® Go! Go! Smart Animals® Happy Paws Playland™, safety comes first. To ensure your child's safety, adult assembly is required.


1. With the **SMARTPOINT® ELEVATOR SHAFT** right-side up, insert the **ELEVATOR EXIT**, **GEAR PIECE** and **ELEVATOR ROOF** into the **SMARTPOINT® ELEVATOR SHAFT** as shown below.

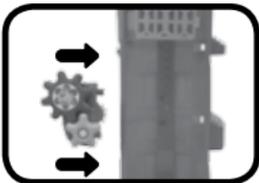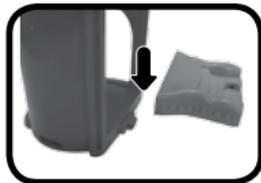



2. Connect the **SMARTPOINT® FIRST FLOOR** and the **SECOND FLOOR SUPPORT BOARD** to the **SMARTPOINT® ELEVATOR SHAFT**. Insert the **SECOND FLOOR SUPPORT** into the **SMARTPOINT® FIRST FLOOR** as shown below.

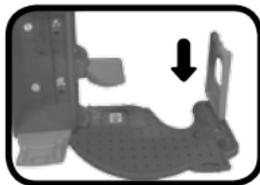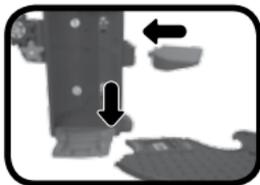


3. Insert the **SECOND FLOOR** into the **SECOND FLOOR SUPPORT** and the **SMARTPOINT® ELEVATOR SHAFT** as shown below.

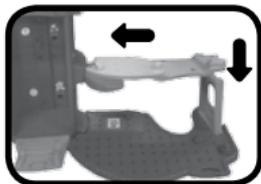


4. Insert the **THIRD FLOOR SUPPORT** into the **SECOND FLOOR**. Then, insert the **THIRD FLOOR** into the **THIRD FLOOR SUPPORT** and the **SMARTPOINT® ELEVATOR SHAFT** as shown below.

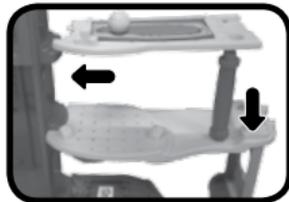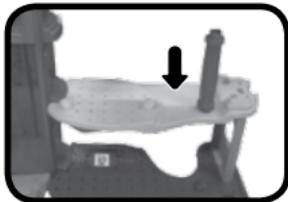


5. Attach the **REAR WALL** to the three floors as shown below.

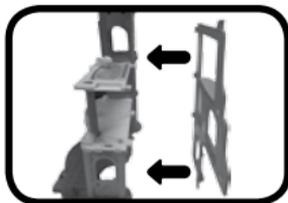



6. Insert the **ROOF SUPPORT** into the **THIRD FLOOR**, and attach the **ROOF** to the support as shown below.

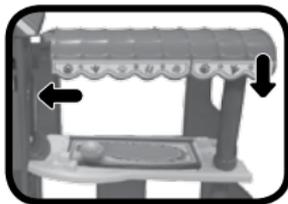


7. Insert the **SMARTPOINT® BALCONY** and the **STAIRCASE SLIDE** into the **THIRD FLOOR** as shown below.

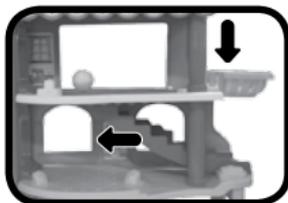


8. Insert the **RAMP TRACK SUPPORT** into the **TRAP DOOR RAMP TRACK**, and connect the ramp track to the **STAIR CASE SLIDE**. Next, connect the remaining **TRAP DOOR RAMP TRACK** as shown below.

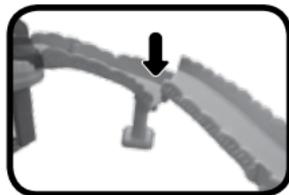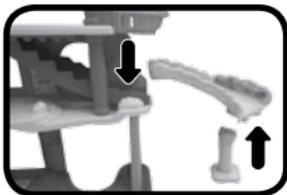


9. Insert the **CAT TREE SLOT** into the bottom of the **SMARTPOINT® ELEVATOR SHAFT** as shown below.

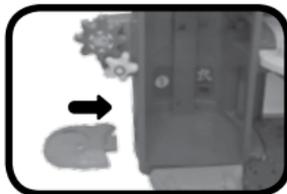



10. Insert the **CAT TREE SUPPORT** into the **CAT TREE SLOT** and the **SMARTPOINT® CAT TREE TOP**. Next, connect the **LARGE CAT TREE SUPPORT** to the **SMARTPOINT® CAT TREE TOP** as shown below.

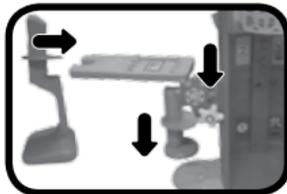


11. Insert the **ELEVATOR RAMP TRACKS** into the **SMARTPOINT® ELEVATOR SHAFT**. Then, connect the **CAT TREE SUPPORT** to the **ELEVATOR RAMP TRACK** as shown below.

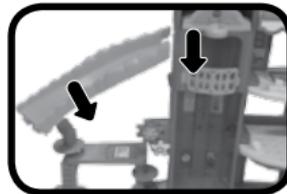


12. Insert the **SLIDE TUNNEL** into the **ELEVATOR RAMP TRACK**. Next, join the two **ELEVATOR RAMP TRACKS** as shown below.

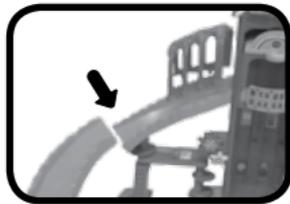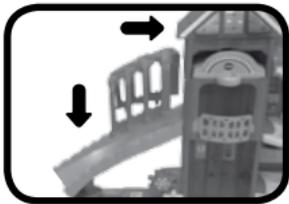

13. Connect the **SUPPORT TRACK** to the **ELEVATOR RAMP TRACK** as shown below.

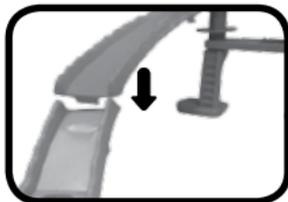

14. Insert both ends of the **SMARTPOINT® HAMMOCK** into the two **HAMMOCK POLES**. Next, insert the two **HAMMOCK POLES** into the **HAMMOCK BASE** as shown below.

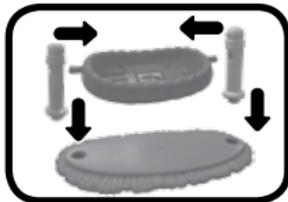

15. Insert the microphone into the **SMARTPOINT®** microphone stage as shown below.



16. Insert both sides of the **WELCOME BOARD** into the **TREE**, and then insert the **TREE** into the **TRAP DOOR RAMP TRACK** as shown below.



Once you've completed the above steps, you are ready to play! You can connect these pieces to the included track pieces or you can connect this playset to other **Go! Go! Smart Animals®** and **Go! Go! Smart Wheels®** tracks (each sold separately).



## EXPAND & EXPLORE


Connect to the **Go! Go! Smart Animals® Deluxe Track Set** or other **Go! Go! Smart Animals®** playsets (each sold separately) to expand the **Happy Paws Playland™** and inspire creativity.



# PRODUCT FEATURES – CAT

## 1. ON/OFF SWITCH

To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON** (☰) position. To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF** (●) position.

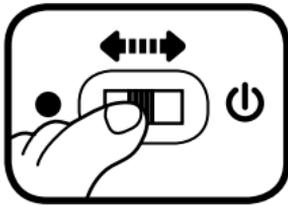


## 2. AUTOMATIC SHUT-OFF

To preserve battery life, the cat included with the **VTech® Go! Go! Smart Animals® Happy Paws Playland™** will automatically power down after approximately 45 seconds without input. The unit can be turned on again by pressing the light-up button or pushing the cat quickly.

**Note:** This product is in try-me mode in the packaging. After opening the package, turn the animal **OFF** and **ON** again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

# ACTIVITIES – CAT



1. Slide the **ON/OFF SWITCH** to the **ON** (☰) position to turn the unit **ON**. You will hear a song, a phrase and sounds. The light will flash with the sounds.

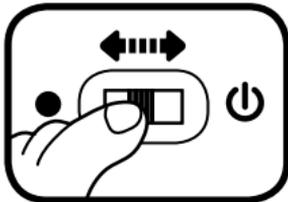

2. Press the light-up button to hear cat sounds, songs and phrases. The light will flash with the sounds.




3. Push the cat to hear fun sounds and melodies. While the melody is playing, push the animal again to add fun sounds on top of the melody. The light will flash with the sounds.
4. For added fun, the cat interacts with **VTech® Go! Go! Smart Animals® Happy Paws Playland™** playset. Simply roll or put the cat on one of the playset's **SmartPoint®** locations to hear the cat play sounds, short tunes and sing-along songs. The cat even interacts with other **Go! Go! Smart Animals®** playsets (each sold separately).

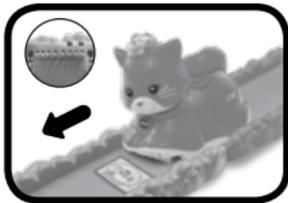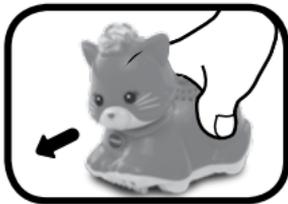

## PRODUCT FEATURES – HAPPY PAWS PLAYLAND™

### 1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the low volume (  ) or high volume (  ) position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** (  ) position.

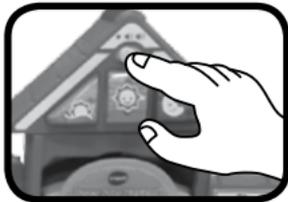

### 2. SMARTPOINT® LOCATIONS

The **Happy Paws Playland™** includes eight **SmartPoint®** locations that interact with the included **SmartPoint®** cat or other **Go! Go! Smart Animals®** characters (each sold separately). Simply roll or place the animal on a **SmartPoint®** location to hear fun sounds, phrases and music.


### 3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Go! Go! Smart Animals® Happy Paws Playland™** will automatically power down after approximately 40 seconds without input. To wake up the unit, activate any of the electronic features on the playset.

**Note:** If the unit powers down while playing, we suggest changing the batteries.

## ACTIVITIES – HAPPY PAWS PLAYLAND™

1. Slide the **ON/OFF/VOLUME CONTROL SWITCH** to either volume setting to turn the unit **ON**. You will hear a song, phrase and fun sounds. The lights will flash with the sounds.

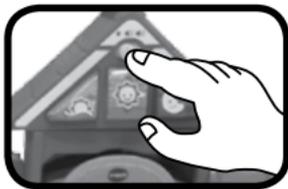

2. Press the **LIGHT-UP BUTTONS** to hear fun phrases, sounds, songs and melodies. The lights will flash with the sounds.



3. Place an animal in the **ELEVATOR**. While pressing the elevator tab on the **ELEVATOR**, you can lift the **ELEVATOR** up or lower it down. As the **ELEVATOR** reaches each floor, you will hear fun sounds and phrases.



4. There are two ways to exit when the **ELEVATOR** reaches the third floor. To the left, the animal will go down the elevator ramp track. If your animal goes to the right, it will come to the **SmartPoint®** balcony (when the trap door is closed). If the trap door is open when exiting to the right, the animal will go down the staircase slide ramp.



# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at [www.vtechkids.com](http://www.vtechkids.com) and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

## **IMPORTANT NOTE:**

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at [www.vtechkids.com](http://www.vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTECH" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTECH products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTECH in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTECH serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTECH Consumer Services Department by going to our web site at [www.vtechkids.com](http://www.vtechkids.com), filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTECH believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

**THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.**

To the extent permitted by law, VTECH will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTECH.