


vtech[®]

User's Manual

Lil' Critters Roll & Discover Ball™



© 2015 VTech
Printed in China
91-002989-002 

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at **VTech**[®]

To learn more about the **Infant Learning**[®] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Lil' Critters Roll & Discover Ball™** learning toy!

It's a circus of fun with the **Lil' Critters Roll & Discover Ball™**! Press the big music button to learn about the colorful circus animals. Then toss, shake, bounce and roll the bright ball to hear cheerful music and more!

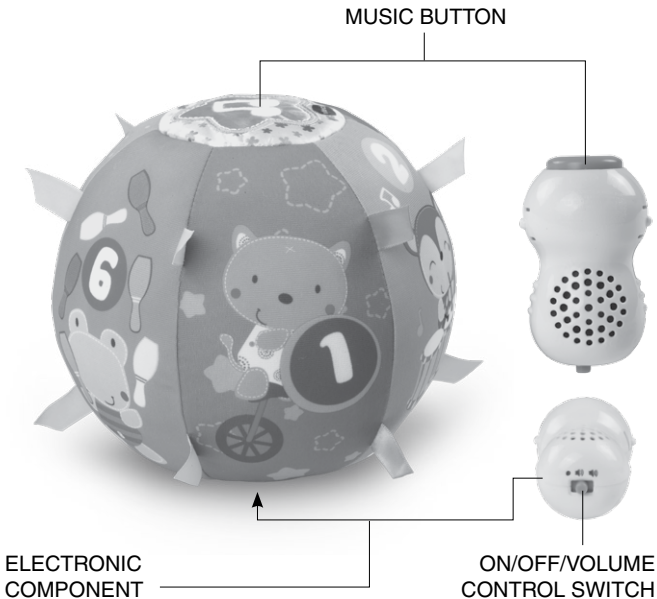

INCLUDED IN THIS PACKAGE

- One VTech® Lil' Critters Roll & Discover Ball™ learning toy
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

Attention:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

 
NOTE:

Please keep this user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the electronic component inside the unit. Use a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

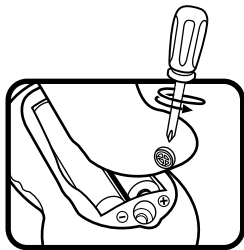

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

ASSEMBLY INSTRUCTIONS

 
To ensure your child's safety, this product should only be assembled by an adult.

REMOVABLE ELECTRONIC COMPONENT

1. To remove the **ELECTRONIC COMPONENT**, unfasten the hook and loop closures and open the fabric covering on the bottom of the ball. Pull the **ELECTRONIC COMPONENT** out.




2. To insert the **ELECTRONIC COMPONENT**, push it into the ball ensuring the round end goes in first. See the image on the fabric covering for reference. You'll hear a click when inserted correctly. Close the fabric covering and seal the hook and loop closures.

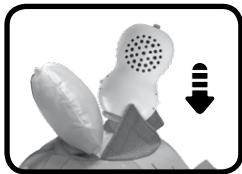

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

 To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** on the electronic component to the **LOW VOLUME** (🔊) or **HIGH VOLUME** (🔊) position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** (●) position.

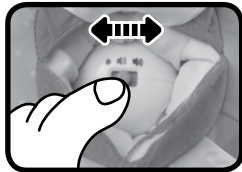


2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Lil' Critters Roll & Discover Ball™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing the music button.

ACTIVITIES

 
1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a song, a fun phrase and a playful sound.

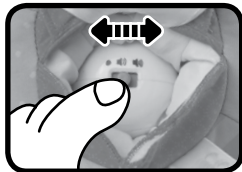

 2. Press the **music button** to learn about animals and numbers as well as a variety of playful sounds and melodies.

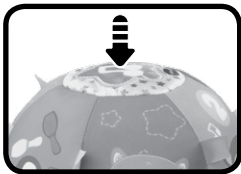

 3. Roll, throw or kick the ball to activate the motion sensor and hear a variety of playful sounds and songs.

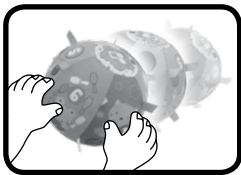

MELODY LIST

1. Take Me Out to the Ball Game
2. Bicycle Built For Two
3. Boys and Girls Come Out to Play
4. Camptown Races
5. I've Been Working on the Railroad
6. This Old Man
7. Little Boy Blue
8. The Animal Fair
9. Toyland
10. Skip to My Lou
11. Chopsticks
12. Polly Put the Kettle On
13. Humpty Dumpty
14. Aiken Drum
15. Ta-ra-ra Boom-de-ay

SONG LYRICS

SONG 1

Grab your friends,
It's time to play!
Bounce, bounce, bounce the ball.

SONG 2

Throw the ball into the air,
Catch it, kick it, roll it, bowl it.
Playing with the ball is so much fun!

SONG 3

One, two, it's cool playing with you!

SONG 4

Three, four, roll the ball on the floor!

SONG 5

Five, six, let's bounce and kick!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. This toy works best indoors on smooth surfaces.
6. The fabric ball is machine washable. Please remove the electronic component and follow the care instructions on the label.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call VTech® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

CAN ICES-3 (B)/NMB-3(B)