

vtech®

Parent's Guide

Kidi★Star
Karaoke
Remix™






91-003813-002 (US) (CA)

INTRODUCTION

Thank you for purchasing the KidiStar Karaoke Remix™!

Encourage creativity with the DJ mixer that lets kids mix tracks, drop out vocals, and sing along to the music, karaoke style. Set up the included microphone and detachable, adjustable stand, then use the included songs or connect your own music via the audio cable. Ready to perform? Set the mood with the disco light. Scratch, mix and sing!

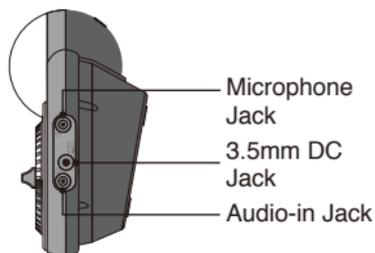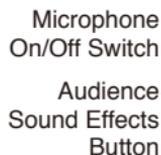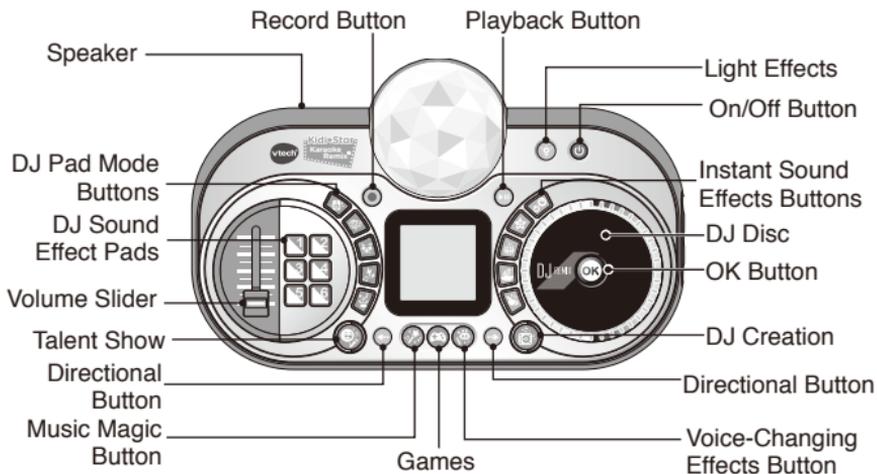

4' 5" Adjustable Stand

INCLUDED IN THIS PACKAGE

- KidiStar Karaoke Remix™
- 1 microphone
- 1 3.5mm jack audio cable
- 4 AA batteries for demo use only
- 1 set of stand components
- Parent's guide

Stand Components

	x 1		x 1		x 1
	x 2		x 1		
	x 1		x 1		x 1
	x 1		x 3		
	x 1		x 1		

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

NOTE: The toy is only to be connected to Class II equipment bearing the following symbol: 

ATTENTION :


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

NOTE : Le jouet doit uniquement être connecté à des équipements de classe II portant le symbole suivant 

Unlock the Packaging Locks

- ① Rotate the packaging lock counterclockwise several times.
- ② Pull out the packaging lock and discard.

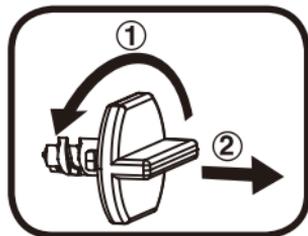

PRODUCT FEATURES

On/Off Button	Press this button to turn the unit On or Off .
Volume Slider 	This controls the master volume of the whole unit, including the microphone volume. Slide the slider to adjust the volume at any time.
Music Magic Button 	<p>Music Magic mode:</p> <p>When in Singing Fun mode, press to remove the main vocal track. When playing music with the External Music Connection, press to reduce or remove the vocals on most music.*</p> <p>Normal mode:</p> <p>Press again to return to Normal mode.</p> <p>NOTE:</p> <p>The Magic Music mode feature is not available in DJ Creation mode.</p> <p>*The Music Magic mode works on the songs included with this product and with most studio-recorded songs. We do not recommend trying to use this feature on mono-recorded songs or live concert performances.</p>

<p>Record </p>	<p>Press to record your performance. A menu will appear with two recording slots. Press the Directional Buttons and press the OK Button to select a slot and begin recording. While recording, press the Record Button again to stop recording.</p> <p>NOTE: Each slot can store a recording up to 2.5 minutes in length. Please ensure you do not remove the batteries or power adapter (sold separately) during recording; otherwise the recording may not be saved.</p>
<p>Playback </p>	<p>Press to play or pause your recordings. Use the Directional Buttons to select the recording you would like to listen to and press the Playback Button to play.</p>
<p>Light Effects </p>	<p>Press to turn the light On, to dim the light, or to turn the light Off. When the light options are shown, use the Directional Buttons to change the light effect.</p> <p>NOTE: We recommend turning off the disco light if the light makes your eyes feel uncomfortable.</p>
<p>Voice-Changing Effects </p>	<p>Press to switch between different voice-changing microphone effects.</p>
<p>Instant Sound Effects</p> 	<p>There are five Instant Sound Effects Buttons on this unit. Press any of these buttons to add a sound effect to your performance.</p>

DJ Pad Mode Buttons



DJ Sound Effects Pads



There are five DJ Pad modes on this unit. Press to switch between different DJ Pad sound effects.

 **DJ Sounds:** After selecting this mode, press any of the six **DJ Sound Effects Pads** to play DJ sound effects.

 **Announcer Sounds:** After selecting this mode, press any of the six **DJ Sound Effects Pads** to play announcer sounds.

 **Drum Sounds:** After selecting this mode, press any of the six **DJ Sound Effects Pads** to play drum set sounds.

 **Singing/Cartoon Sounds:** After selecting this mode, press any of the six **DJ Sound Effects Pads** to play singing sound effects or cartoon sound effects while playing a DJ Mixer song, or to hear cartoon sound effects only in any other mode.

NOTE: Pressing this button during a DJ Mixer song will toggle between singing sound effects and cartoon sound effects.

 **My SFX:** After selecting this mode, press any of the six **DJ Sound Effects Pads** to play your own recorded sound effects.

DJ Disc



Turn the **DJ Disc** to hear a scratch sound effect, or to fast-forward or rewind the track in DJ Mixer mode.

Talent Show



Press to enter Singing Fun, External Music Connection or Free Play modes.

DJ Creation



Press to enter the DJ Creation menu. Here you can DJ along to the songs, record your own sound effects and record your own DJ Mixer track.

Games



Press to enter Games mode to play four different games.







Directional Buttons 	Press these buttons to make a selection.
OK Button 	Press to confirm your selection. In DJ Mixer mode, press this button to sync the drum loop in time with the track.
Microphone Jack 	Used to plug in the microphone. NOTE: Please ensure a firm connection.
Audio-in Jack 	Use to plug in an external music player (not included) using the included 3.5mm jack audio cable.
3.5mm DC Jack 	Use to plug in a 3.5mm DC 6V power adapter (sold separately).

MICROPHONE BUTTONS


Microphone On/Off Switch 	Use this switch to turn the microphone On or Off . Slide the switch up to  for On and down to  for Off . NOTE: To avoid picking up any extraneous sounds, please keep the microphone away from the Speaker and make sure the microphone is switched Off whenever it is not in use.
Audience Sound Effects 	Press this button to add audience sounds to your performance. NOTE: The microphone must be switched On for this button to work.

STAND ASSEMBLY




Adult assembly required. For your child's safety, do not let your child play with this product until it is fully assembled.

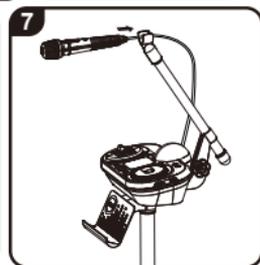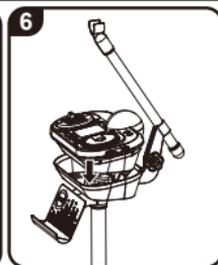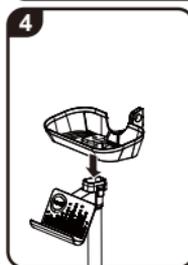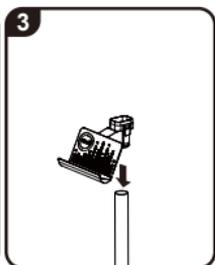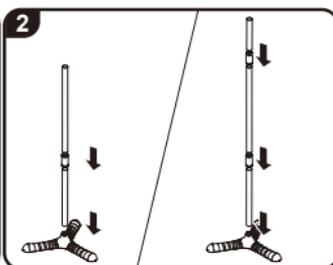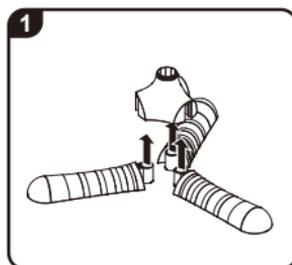

Stand components include three poles of different lengths to adjust height. You can choose a suitable height from seven combinations.

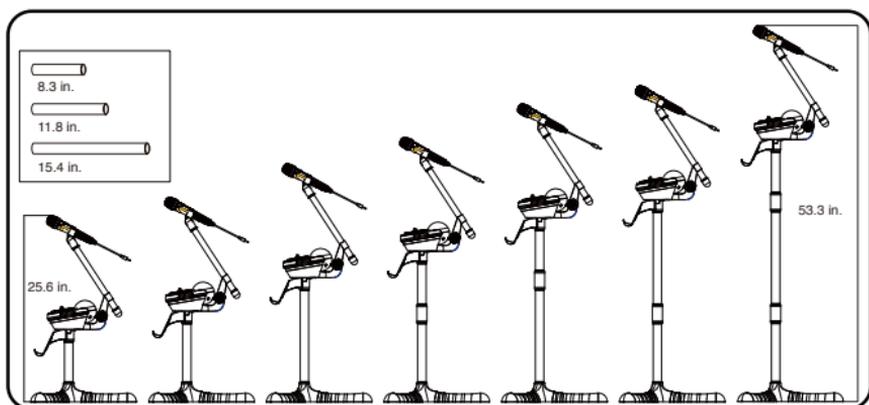

NOTE: For the best stability, we recommend positioning any foot of the stand perpendicular to the back of the **KidiStar Karaoke Remix™** unit. Please refer to the illustrations below.

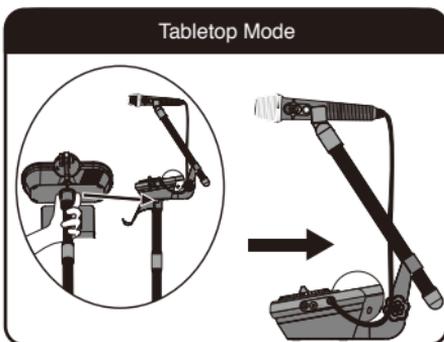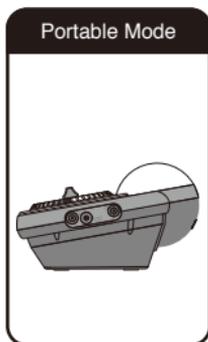
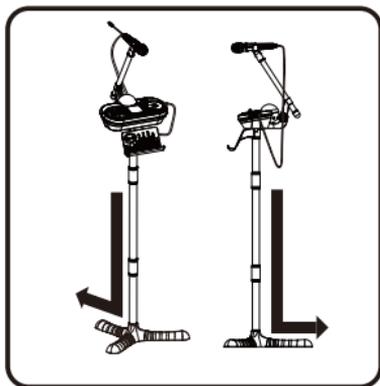


GETTING STARTED

Battery Removal and Installation

KidiStar Karaoke Remix™ uses 4 AA batteries or a 3.5mm DC 6V power adapter (sold separately).

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit and use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

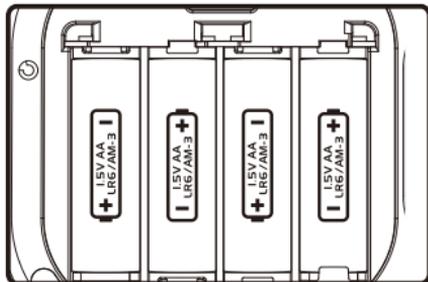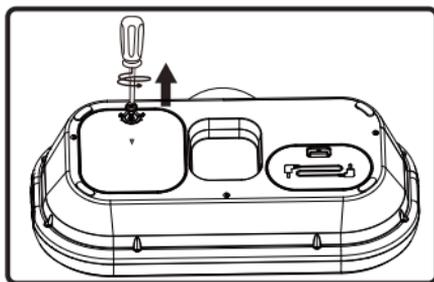

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.

- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

POWER ADAPTER CONNECTION

You may purchase a VTech® 3.5mm DC 6V power adapter by visiting our website at vtechkids.com. Hover over the "Support" option on the top menu bar and choose "Order Replacement Parts" from the menu that appears below. Or call our Consumer Services Department at 1-800-521-2010 in the US or 1-877-352-8697 in Canada.

To connect the adapter to the unit, follow the instructions below.

- Make sure the unit is turned **Off** and make sure that no batteries remain inside the unit.
- Locate the **3.5mm DC Jack** on the side of the unit.
- Connect the power adapter (sold separately) into the unit's **3.5mm DC Jack**.
- Plug the other end of the power adapter into an electrical socket.
- Turn the unit **On**.

TRANSFORMER SAFETY NOTICE

- Using a 3.5mm DC 6V power adapter (sold separately) that complies with EN61558 is recommended.
- This toy should only be used with a transformer for toys.
- The transformer is not a toy.
- This product is not intended for use by children under the age of three.
- Do not connect the toy to more than the recommended number of power supplies.
- Never clean this product with liquid when it is plugged into a power supply.
- Please regularly examine the transformer, checking for damage to the cord, plug, transformer or other parts. Do not use the transformer if there is any damage to it.

NOTE: If the unit stops working or the sound becomes weak, it may be because of a fault with the power adapter connection.

Turn the unit **Off** and unplug the adapter for 15 seconds. Then plug the adapter back in and turn the unit **On**. If the problem persists, the adapter you are using may be faulty.

HOW TO USE THE MICROPHONE

Plug in the included microphone into the **Microphone Jack**. Please make sure it has a firm connection.

Slide the **Microphone On/Off Switch** up to turn the microphone **On**. Bring the microphone close to your mouth when you use it for the loudest, clearest sound.

To avoid picking up any extraneous sounds, please keep the microphone away from the **Speaker** and make sure the microphone is switched **Off** whenever it is not in use.

TO BEGIN USING KidiStar Karaoke Remix™

TURN ON THE UNIT

Press the **On/Off Button**  to turn the unit **On** and enter Normal Play mode.

LOW BATTERY ICON

When the batteries are exhausted, the low battery icon will appear and the unit will automatically shut off. Please replace the batteries with a full set of new batteries before further use.



If the product is frequently used, then the batteries will drain at a faster rate. We recommend using a power adapter (sold separately) if this product will be used frequently.

Automatic Shut-Off

To preserve battery life, the **KidiStar Karaoke Remix™** will automatically shut off after a period of time without input.

ACTIVITIES

Talent Show 	<ul style="list-style-type: none">• Singing Fun• External Music Connection• Free Play
DJ Creation 	<ul style="list-style-type: none">• DJ Mixer Songs• DJ Mixer Track Customization• DJ Sound Effects Customization
Games 	<ul style="list-style-type: none">• Hungry Monster• Sneaky Notes• Freeze Dance• Tongue Twisters

1. TALENT SHOW

Press the **Talent Show** button to enter the Talent Show menu. Then press the **Directional Buttons** to choose an activity and press the **OK Button** to confirm.

1.1 Singing Fun

Choose the Singing Fun activity to learn and sing along to the six built-in songs or music from your own external music player (not included). Press the **Directional Buttons** to choose a song and press the **OK Button** to begin.

Built-in Songs

Sing along with the songs and watch the on-screen animations. When you are ready, press the **Music Magic Button** to remove the main vocal track from the built-in songs and sing by yourself like a karaoke superstar!



NOTE: For the lyrics of the six built-in sing-along songs, please refer to the APPENDIX.

1.2 External Music Connection

Choose the External Music Connection mode and plug in an external music player (not included) via the provided 3.5mm jack audio cable to listen to your own music! From here, you can press the **Music Magic Button** to reduce or remove the main vocal track from



the current song (works with most external music sources).

You can also set an auto-off timer in this mode. To do so, press the **OK Button** then press the **Directional Buttons** to choose your desired auto-off time: 60 minutes, 90 minutes, 120 minutes, 180 minutes or disable auto-off. Please note that the disable auto-off option can only be used when using a power adapter (sold separately).

The **Volume Slider** on **KidiStar Karaoke Remix™** cannot control the volume of external devices. Please use the volume controls on your external music player (not included) to increase or decrease volume. Music Magic mode may not apply for all songs. For details, please refer to the Music Magic section under **PRODUCT FEATURES**.

NOTE: Please disconnect your external music player (not included) and the provided 3.5mm jack audio cable from **KidiStar Karaoke Remix™** when it is not in use.

1.3 Free Play

Choose the Free Play activity to start your show! You can perform your own concert, talk show, talent show, or just play around and have fun! It's show time!



2. DJ CREATION

Press the **DJ Creation** button to enter the DJ Creation menu. Then press the **Directional Buttons** to choose a DJ Mixer song, or to record your own DJ Mixer track or DJ sound effects! Once you've made your selection, press the **OK Button** to begin.

2.1 DJ Mixer Songs

Choose a DJ Mixer song by pressing the **Directional Buttons**. Then, press the **OK Button** to begin.

Scratch the **DJ Disc** for a scratch sound effect and to fast-forward or rewind the song. To change the drum loop, press a **Directional Button**. Press the **OK Button** to sync the drum loop to the track after fast forwarding or rewinding the track.



Press any of the **DJ Sound Effects Pads** to play different sound effects with your mix.

NOTE: For the lyrics of the six DJ Mixer songs, please refer to the **APPENDIX**.

2.2 DJ Mixer Track Customization

Use the microphone to record your own track for DJ mixing! You can record a one-minute track, which will then be available in the DJ Mixer songs menu. Press the **OK Button** to begin and to end your recording.

NOTE: For this recording, voice-changing effects are not available.



2.3 DJ Sound Effects Customization

Record your own sound effects for use on the **DJ Sound Effects Pads**.

Press any of the **DJ Sound Effects Pads** and then press the **OK Button** to start your recording. Once you're done, press the **OK Button** to stop the recording.



These recorded sound effects can be heard by pressing the **DJ Sound Effects Pads** when the DJ Pad mode is set to My SFX mode.

3. GAMES

Press the **Games** button to enter the Games menu. From here, press the **Directional Buttons** to choose a game and press the **OK Button** to confirm.

3.1 Hungry Monster

Music notes will fall down from the top of the screen. Press the **Directional Buttons** to help the monster catch the type of note indicated at the beginning of the level as fast as possible. Be careful of the other falling objects!



3.2 Sneaky Notes

The sneaky notes are hiding in the music boxes. The music boxes will move around. When they stop, see if you can figure out which box the notes are hiding in. Press the **Directional Buttons** to choose the music box, and press the **OK Button** to confirm your selection.



3.3 Freeze Dance

To play this fun party game, simply dance along with the music and freeze when the music pauses. There is no right or wrong way to dance; this is just a fun game to play on your own or with friends!



3.4. Tongue Twisters

Challenge yourself to master all of these tricky Tongue Twisters! Press the **Directional Buttons** to select a twister, then press the **OK Button** to confirm. Listen to the instructions and repeat the Tongue Twister. Press the **OK Button** when you've finished and select the next Tongue Twister. Can you master them all?



APPENDIX

Tongue Twisters

1	Double bubble gum, bubbles double.
2	She sells seashells by the seashore.
3	A skunk sat on a stump and thunk the stump stunk, but the stump thunk the skunk stunk.
4	She sees cheese, she sees cheese, she sees cheese.
5	Rolling red wagons, rolling red wagons, rolling red wagons.
6	Freshly fried flying fish.
7	A proper copper coffee pot.
8	I scream, you scream, we all scream for ice cream.
9	Which wristwatches are Swiss wristwatches?
10	Many an anemone see an enemy anemone.
11	How much wood would a woodchuck chuck if a woodchuck could chuck wood?
12	Peter Piper picked a peck of pickled peppers, a peck of pickled peppers Peter Piper picked.
13	Fuzzy Wuzzy was a bear. Fuzzy Wuzzy had no hair. Fuzzy Wuzzy wasn't fuzzy, was he?
14	Any noise annoys an oyster, but a noisy noise annoys an oyster more.
15	If two witches were watching two watches, which witch would watch which watch?



1. I'll Be There for You!

You can count on me, like 1-2-3,
I'm always here to chat, I've always got your back.



No matter where or when,
No matter if you are happy or sad,

I'll be there for you,
When it rains, when it pours, I'll be there for you!
When it rains, when it pours, I'll be there for you!



So never give up, just hang in there.
I'm always here to care, I'm always here, I swear.



No matter where or when,
No matter if you are happy or sad.

I'll be there for you.
When it rains, when it pours, I'll be there for you!
When it rains, when it pours, I'll be there for you!





2. Thank you, Earth!

Green grass that we walk on with our bare feet.

Fruits and berries that we eat as a little treat.

Fresh air that we breathe in as we stroll on down the street.

Blue oceans that make us feel so free.



Thank you, Earth!

Our home on Earth.

Thank you for giving us everything we need.

Thank you for helping us grow.

Thank you for bringing us peace.

Thank you, Earth!



By the beach we'll lay out and feel the sea breeze.

In the forest, the sun shines through the tree leaves.

When it rains we'll smile, as it makes our rivers flow.

When it's winter, we'll play out in the snow.



Thank you, Earth!

Our home on Earth.

Thank you for giving us everything we need.

Thank you for helping us grow.

Thank you for bringing us peace.



Thank you, Earth!

Our home on Earth.

Thank you for giving us everything we need.

Thank you for helping us grow.

Thank you for bringing us peace.

Thank you, Earth!



3. Move and Groove!

Follow me now and clap, clap, clap your hands!

Follow me now and jump, jump up and down!

Dance like nobody's watching,

Dance, dance, dance, come on!

Sing like nobody's listening,

Ooh, ooh, ooh, ooh yeah!



We're gonna groove like we mean it,

We're gonna move and groove, yeah!



Follow me now and sing, sing, ooh ooh ooh!

Ooh ooh ooh ooh ooh ooh, ooh ooh ooh ooh ooh ooh!

Follow me now and sing, sing, yeah yeah yeah!

Yeah, yeah, yeah yeah yeah yeah!



Dance like nobody's watching,

Dance, dance, dance, come on!

Sing like nobody's listening,

Ooh, ooh, ooh, ooh yeah!

We're gonna groove like we mean it,

We're gonna move and groove, yeah!

We're gonna move and groove, yeah!





4. We Dream On!

When we're feeling blue,
Just know I got you.
'Cause I know we'll be all right
And that in the end...



We'll dream on,
We can reach the stars if we just imagine.
Yeah, we'll dream on,
If we just imagine, we can make it happen.



Yeah, you know it's true,
One plus one makes two.
Side-by-side we're the best of friends,
And we can make it through.



We'll dream on,
We can reach the stars if we just imagine.
Yeah, we'll dream on,
If we just imagine, we can make it happen.



5. Super Star!

Dim the lights, come on,
Let's rock the house tonight.
Turn it up, come on,
Let's put on a show all right.



I'm a super star tonight,
Standing center in the spotlight.
I have come so far, strumming my guitar.
I'm a super star tonight!



We are here to dance and party all night long.
Volume up,
Let's hear the crowd all sing this song!



I'm a super star tonight,
Standing center in the spotlight,
I have come so far, strumming my guitar,
I'm a super star tonight!



6. You and Me!

Time flies by,
With you right here by my side.
Our friendship's not easy to come by.



You and me,
We have so much fun together.
You and me,
We'll always be best friends forever.
You and me,
Let's go on this adventure together!



Such good times,
When we are hanging out,
Time after time,
It's always such a blast, there's no doubt!



You and me,
We have so much fun together.
You and me,
We'll always be best friends forever.
You and me,
Let's go on this adventure together!



DJ Mixer

Underlined words and phrases are used as Singing Sound Effects.

1. I'll Be There for You!

You can count on me, like 1, 2, 3.

I'm always here to chat,

I've always got your back.

I'll be there for you,

When it rains, when it pours.

I'll be there for you,

When it rains, when it pours.

I'll be there for you!

I'll be there for you,

When it rains, when it pours.

I'll be there for you,

When it rains, when it pours.

I'll be there for you!

Singing Sound Effects



Me



1, 2, 3



To chat



Got your back



Be there for you



For you



2. Thank You, Earth!

Green grass that we walk on with our bare feet.

Fruit and berries that we eat as a little treat.

Fresh air that we breathe in as we stroll on down the street.

Blue oceans that make us feel so free.

Thank you, Earth.

Our home on Earth.

Thank you for giving us everything we need.

Thank you for helping us grow.

Thank you for bringing us peace.

Thank you, Earth.

Our home on Earth.

Thank you for giving us everything we need.

Thank you for helping us grow.

Thank you for bringing us peace.

Thank you, Earth!

Singing Sound Effects



Little treat



Down the street



Blue oceans



Feel so free



Thank you, Earth



Earth



3. Move and Groove!

We're gonna move and groove, yeah!

Follow me now and clap, clap, clap your hands.

Follow me now and jump, jump up and down.

Dance like nobody's watching,

Dance, dance, dance come on!

Sing like nobody's listening,

Ooh, ooh, ooh, yeah!

We're gonna groove like we mean it.

We're gonna move and groove, yeah!

We're gonna groove like we mean it.

We're gonna move and groove, yeah!

We're gonna move and groove, yeah!

Singing Sound Effects



1 Move and groove, yeah

2 Clap your hands

3 Up and down

4 Come on

5 Ooh, ooh, ooh, yeah

6 Yeah



4. We Dream On!

We'll dream on,

We can reach the stars if we just imagine.

Yeah, we'll dream on,

If we just imagine, we can make it happen.

When we're feeling blue,

Just know I got you.

Cause I know we'll be all right and that in the end

We can reach the stars if we just imagine.

If we just imagine, we can make it happen!

Singing Sound Effects



 We'll dream on

 Imagine

 Happen

 Feeling blue

 Mmm...

 In the end



5. Super Star!

Dim the lights, come on,
Let's rock the house tonight.
Turn it up, come on,
Let's put on a show all right.

I'm a super star tonight,
Standing center in the spotlight.
I have come so far, strumming my guitar.

I'm a super star tonight,
Standing center in the spotlight.
I have come so far, strumming my guitar.
I'm a super star tonight.
I'm a super star tonight.

Singing Sound Effects



- 1 Tonight
- 2 All right
- 3 Super star tonight
- 4 Spotlight
- 5 My guitar
- 6 I'm a super star tonight



6. You and Me!

You and me!

You and me!

Such good times,

When we are hanging out.

Time after time,

It's always such a blast, there's no doubt.

You and me,

We have so much fun together.

You and me,

We'll always be best friends forever.

You and me,

Let's go on this adventure together!



Singing Sound Effects



You and me



Hanging out



No doubt



Me



Forever



Together



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Handle the device carefully.
3. Keep the device away from dusty or dirty areas.
4. Keep the unit clean by wiping it with a slightly damp cloth.
5. Keep the unit out of direct sunlight and away from any direct heat sources.
6. Remove the batteries if the unit will not be in use for an extended period of time.
7. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

EPILEPSY WARNING

Due to pre-existing conditions, a small percentage of users may experience epileptic seizures when viewing flashing lights or patterns. Please consult your doctor if you have an epileptic condition or experience any unusual symptoms while playing. Turn off the Disco Light on the **KidiStar Karaoke Remix™** if you do not feel comfortable.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If you are still experiencing difficulty operating your **KidiStar Karaoke Remix™**, please consult this table.

Problem	Possible cause	Correction
KidiStar Karaoke Remix™ has stopped working or does not turn on	Incorrect battery polarities	Ensure that the batteries are installed using the correct polarity.
	Depleted batteries	Replace with new batteries.
	Power adapter issue	Ensure that the adapter is connected correctly.
Microphone output cannot be heard	The microphone is not plugged in correctly	Ensure that the microphone is connected to the unit firmly and correctly.
	The microphone is not switched on	Turn the On/Off Switch on the microphone to the On position.
	The master volume is low	Turn up the master volume on the unit using the Volume Slider .
Microphone output is not enough	The microphone volume is low	Turn up the master volume on the unit using the Volume Slider .
Harsh sounds coming from the Speaker	The microphone may be too close to the Speaker	To avoid picking up any extraneous sounds, please keep the microphone away from the Speaker and make sure the microphone is switched Off whenever it is not in use.

Music Magic mode is not functioning correctly	The external music player is not correctly connected to KidiStar Karaoke Remix™	Make sure that your external music player is firmly connected to KidiStar Karaoke Remix™ at both ends of the provided 3.5mm jack audio cable. NOTE: If your external music player is inside a case, we recommend removing it to ensure a firm connection with the audio cable.
	Unsuitable song source	The Music Magic feature may not work for all songs. Its effectiveness varies from song to song. For best results, studio recorded songs are recommended. Unfortunately we cannot guarantee Music Magic will work with every song. We do not recommend using Music Magic mode for mono-recorded songs or live performance recordings.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity **47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®
Model: 5317
Product Name: KidiStar Karaoke Remix™
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



WARNING:

CHOKING HAZARD – Small parts.
Not for children under 3 yrs.



AVERTISSEMENT :

RISQUE DE SUFFOCATION –
Petites pièces. Ne convient pas aux
enfants de moins de 3 ans.

**CLASS 1
LED PRODUCT**

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty

