

vtech[®]

User's Manual

Sliding Songs Bead Maze™



© 2012 VTech
Printed in China
91-002682-002 US/CA

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

Your friends at **VTech**[®]

To learn more about the **Infant Learning**[®] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Sliding Songs Bead Maze™!**

The **VTech® Sliding Songs Bead Maze™** is a fun and innovative toy that adds an electronic twist to a traditional bead maze. This animal playground will help your baby strengthen their fine motor skills and learn about opposites, colors, and animals as they scoot the seven beads along the three tracks and play with the spinning monkey, sliding puppy, bouncing pony, and a see-saw. For added engagement, the ABC button plays a delightful alphabet song!



INCLUDED IN THIS PACKAGE

- One VTech® Sliding Songs Bead Maze™
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE:

Please keep this instruction manual as it contains important information.

Unlock the packing locks:

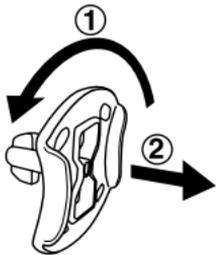


- ① Rotate the packing locks 90 degrees counter-clockwise.
- ② Pull out the packing locks.

INSTRUCTIONS

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

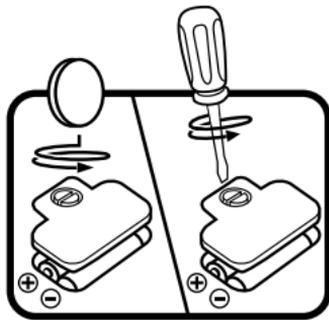


BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** (🔊) position, or the **HIGH VOLUME** (🔊) position. To turn the unit **OFF**, slide the **OFF/VOLUME CONTROL SWITCH** to the **OFF** (●) position.


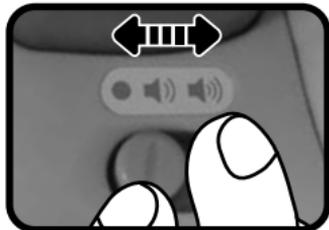


2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Sliding Songs Bead Maze™** will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES


1. Slide the **off/volume control switch** to the **low** or **high volume** position to turn the unit on. You will hear a fun sung song and phrases. The light will flash with the sounds.
2. Press the **light-up ABC button** to hear an alphabet song, a fun sung song and a variety of great melodies with fun monkey sounds. The light will flash with the sounds.

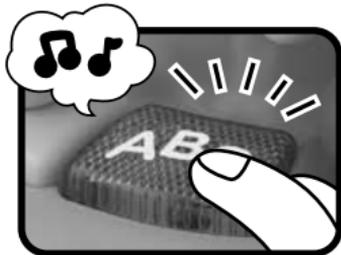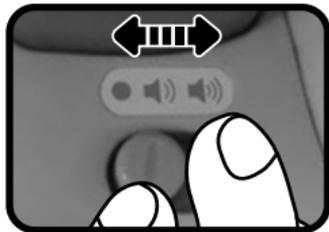


3. Move the **three colored balls** to the end of their tracks to learn their colors and hear melodies. The light will flash with the sounds.

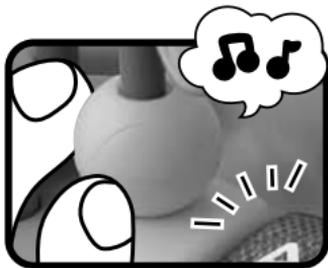


4. Press the **see-saw** to move the green ball up and down. The light will flash with the sounds.

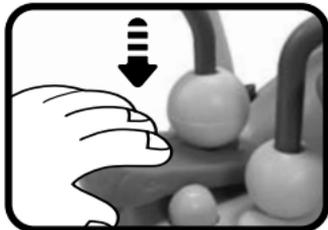


5. Slide the **flower** and **butterfly beads** to the end of their tracks to hear fun sounds and encouraging phrases. The light will flash with the sounds.

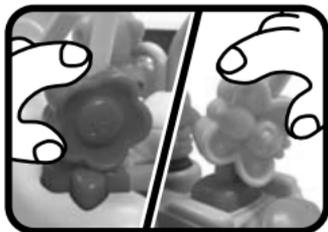

6. Press the **pony** to hear great melodies and fun sounds. The light will flash with the sounds.

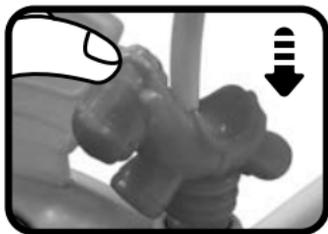

7. Slide the **puppy** to hear 'Bingo.' The light will flash with the sounds.

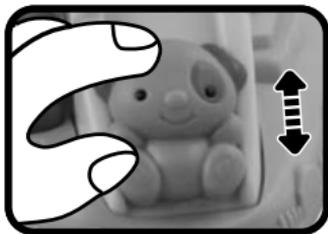

8. If there is no input to the unit after approximately 8 seconds, you will hear a fun sung song. If there is still no input after a further 8 seconds, you will hear the alphabet song melody, then the unit will automatically power-down.

MELODY LIST

1. Alphabet Song
2. Hickory Dickory Dock
3. The Bear Went Over the Mountain
4. Bumble Bee Rag
5. Alouette
6. Bingo
7. Pop! Goes the Weasel
8. Skip to My Lou
9. Here We Go 'Round the Mulberry Bush
10. Little Miss Muffet
11. Polly Wolly Doodle
12. Shoo, Fly
13. This Old Man
14. Teddy Bears' Picnic
15. Aba Daba Honeymoon
16. Row, Row, Row Your Boat
17. The Glow Worm
18. Pease Porridge Hot

SUNG SONG LYRICS

SUNG SONG 1

(Tune of 'Polly Wolly Doodle')

It's a sunny day, a perfect day,
To play at the playground.
Bouncing up, and sliding down,
The fun is all around!

SUNG SONG 2

(Tune of 'The Alphabet Song')

A-B-C-D,
E-F-G,
H-I-J-K,
L-M-N-O-P,
Q-R-S, T-U-V
W, X, Y and Z!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call VTech® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

FCC Information:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

