

vtech[®]

User's Manual

Sit, Stand & Ride Baby Walker™



© 2016 VTech
All rights reserved
Printed in China
91-003201-004 

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,


Your friends at VTech®

To learn more about VTech® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Sit, Stand & Ride Baby Walker™** learning toy!


The **Sit, Stand & Ride Baby Walker™** can be played with in three fun ways: as an activity panel, a walker or a ride-on. The activity panel has lots of interactive features including a steering wheel, gear shifter, turning gears, light-up press buttons and more! Press the buttons to learn about vehicles and letters through fun phrases and sounds. Equipped with a motion sensor, you will hear fun music play when scooting around on the ride-on or pushing the walker. There is lots to discover on the **Sit, Stand & Ride Baby Walker™**!

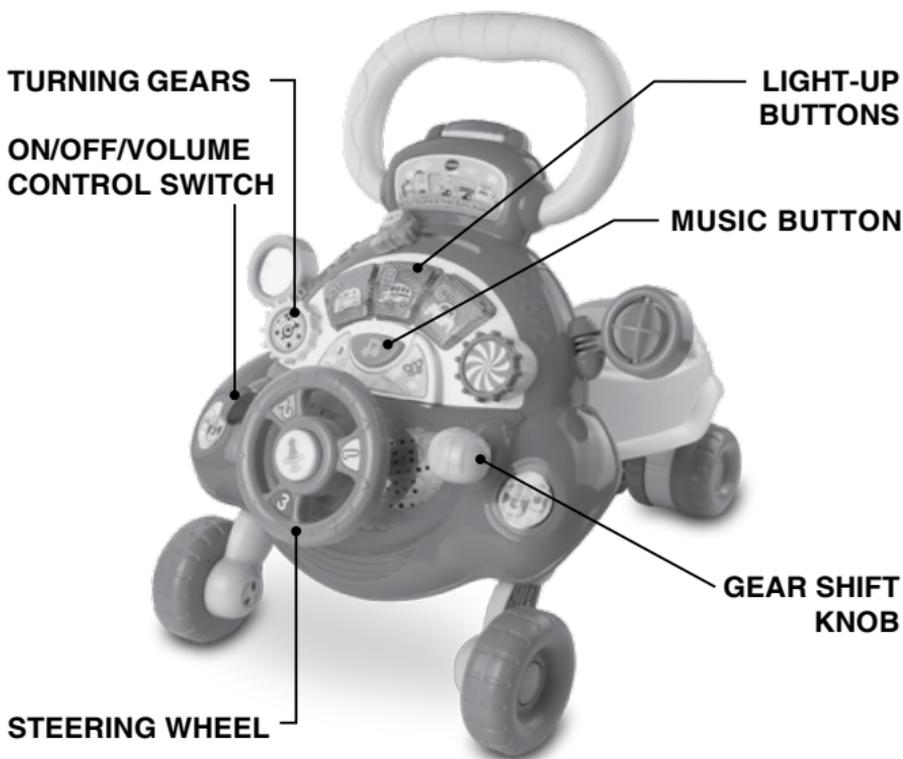

INCLUDED IN THIS PACKAGE



- One VTech® Sit, Stand & Ride Baby Walker™ activity panel

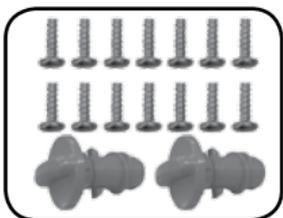

- Two big plastic screws and fourteen small screws



- Two walker/ride-on legs



- Two front wheels
- One instruction manual



- Two back wheels



- One handle

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

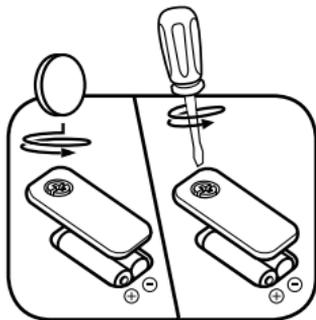


BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

ASSEMBLY INSTRUCTIONS

With the VTech® Sit, Stand & Ride Baby Walker™ safety comes first. To ensure your child's safety, adult assembly is required. After assembling in the walker or the ride-on position, please make sure the unit is assembled correctly before giving it to your child. Please keep the walker legs and wheels out of toddlers reach when not using the unit as a walker or ride-on.


1. Screw the handle to the top of the activity panel with six of the small screws. Check the handle to make sure it is attached securely.

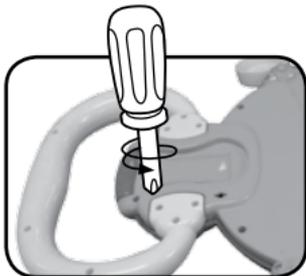


2. Screw the two back wheels to the underside of the walker legs with eight of the small screws. Check the wheels to make sure they are attached securely.




3. Insert the two front wheels into the slots on the bottom of the activity panel. You will hear the wheels click into place when inserted correctly. To remove the front wheels, press the release locks toward the centre and pull out the wheels.

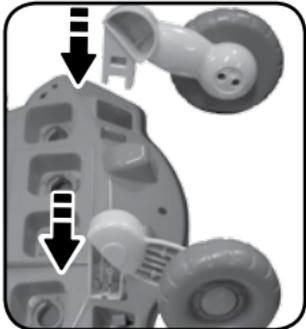

4. To assemble the walker mode, insert the walker legs into the slots on the outer edge on the bottom of the activity panel. The thicker part of the wheels should be facing out. Insert and tighten the two big plastic screws to secure the legs. Check the legs to make sure they are attached securely. To remove the walker legs, loosen the big plastic screws and remove the legs. Please check the screws periodically to ensure they are attached securely.

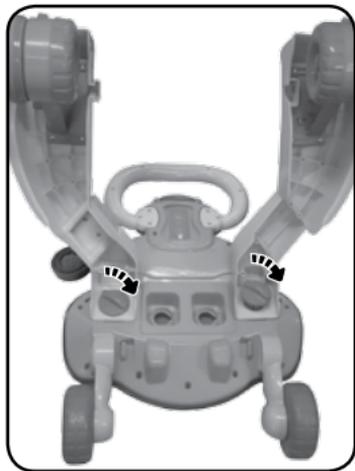

5. To assemble the ride-on mode, you need to criss-cross the left leg over the right leg until you hear the legs click together. Insert the ride-on legs into the middle slots on the bottom of the activity panel. Insert and tighten the two big plastic screws to secure the legs. Check the legs to make sure they are attached securely. To remove the ride-on legs, loosen the two plastic screws and remove the legs. Slide the lock on the underside by the back wheels to separate the criss-crossed legs. Please check the screws periodically to ensure they are attached securely.

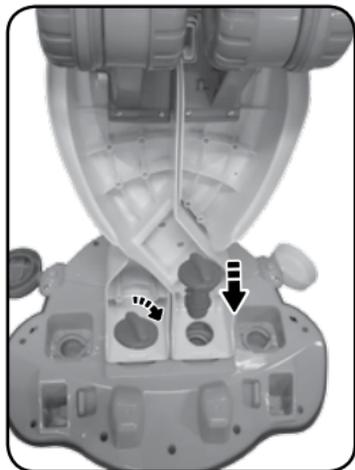

WARNING: Not to be used by children over 36 months.
Insufficient strength. 42 pounds Max.

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or the **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.



2. SPEED CONTROL LOCK

The VTech® Sit, Stand & Ride Baby Walker™ is equipped with a speed control lock on the two back wheels of the walker. Slide the lock up for the more skillful walker. This position has less tension on the wheels and will allow the walker to move more freely. Slide the lock down for toddlers who are just learning to take their first steps. This position has the most tension on the wheels and will not allow the walker to move too quickly. Please make sure both wheels are set to the same position.



Note: If the unit repeatedly powers down quickly or one of the lights flashes three times then powers down, we suggest changing the batteries.

ACTIVITIES

1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a playful song, a fun phrase and a sound. The lights will flash with the sounds.




2. Press the **music button** to hear sing-along songs and melodies. When a melody is playing, turn the steering wheel, trigger the motion sensor or push/pull the gear shift knob to hear sounds play over the melody. The lights will flash with the sounds.




3. Press the **light-up buttons** to learn about letters and vehicles. When a melody is playing, press the light-up buttons to play the melody one note at a time. The lights will flash with the sounds.




4. Turn the **steering wheel** to hear car sounds and imaginative phrases. The lights will flash with the sounds.

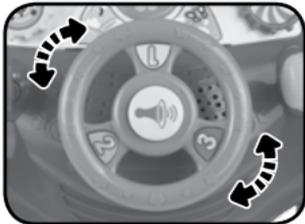


5. Push or pull the **gear shift knob** to learn about opposites through imaginative phrases, sounds and short tunes. The lights will flash with the sounds.

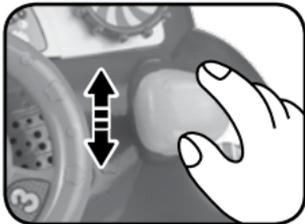

6. Spin the **turning gears** to hear a variety of short tunes and sounds. The lights will flash with the sounds.

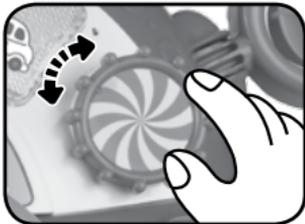

7. Activate the **motion sensor** to hear playful melodies. When a melody is playing and the motion sensor continues to be activated, you will hear fun sounds and phrases play over the melody. The lights will flash with the sounds.

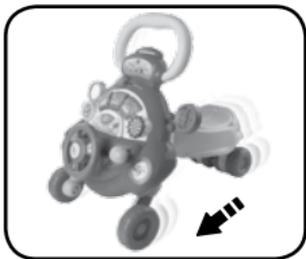

MELODY LIST

1. London Bridge
2. Bicycle Built for Two
3. I've Been Working on the Railroad
4. Camptown Races
5. Looby Loo
6. Jack and Jill
7. Glow Worm
8. On Top of Old Smokey
9. Clementine
10. Little Boy Blue
11. Daring Young Man on the Flying Trapeze
12. The Entertainer
13. Chopsticks
14. Aiken Drum
15. Did You Ever See a Lassie?

SUNG SONG LYRICS

SONG 1

Vroom! Vroom! Vroom!
The engine is running,
We're ready to explore!

SONG 2

Red light, stop.
Yellow light, slow down.
Green light, go!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



CAUTION:

Adult assembly required.

This package contains small screws.

For your child's safety, do not let your child play with the toy until it is fully assembled.



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our web site at www.vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.