

vtech[®]

User's Manual

Magical Dancing Flower™



© 2009 VTech

Printed in China

91-101600-000-006 (美)


Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

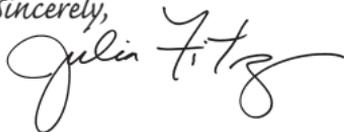

Julia Fitzgerald
Vice President, Marketing
Vtech Electronics, NA

To learn more about the **Infant Learning**[®] and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Magical Dancing Flower™** learning toy. This engaging toy features two modes of play with a light-up motorized flower that dances to music. Shape sorters and colorful piano keys round out the fun!



INCLUDED IN THIS PACKAGE


- One **VTech® Magical Dancing Flower™** learning toy.
- One user's manual.
- Three shape sorters.

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 3 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

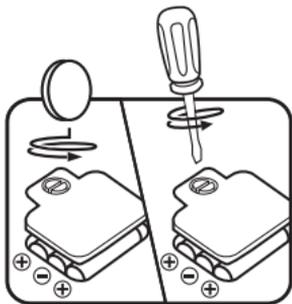

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **LEARNING MODE (1-2-3)** or the **PLAY MODE ()** position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** position.



2. MODES OF PLAY

The two modes of play include **LEARNING** and **PLAY**. Slide the **MODE SELECTOR SWITCH** to choose a mode of play.




3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Magical Dancing Flower™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Slide the mode selector switch to choose a mode of play. You will hear a cheerful song, some fun sounds and phrases depending on the selected mode. The light on the flower will flash along with the sounds, and the flower will dance to the melodies.
2. In Learning Mode, press the piano keys to learn colors, numbers, insect names and to hear some fun sounds and short tunes. The light on the flower will flash along with the sounds, and the flower will dance to the melodies.
3. In Play Mode, press the piano keys to play more fun sounds and some upbeat melodies. While a melody is playing, press the piano keys again to play the tune one note at a time. If you stop pressing piano keys, the full melody will resume. Press the shape buttons to hear more fun sounds while the melody is playing. The light on the flower will flash along with the sounds, and the flower will dance to the melodies.
4. Press the shape buttons or place the shape sorters correctly to learn shapes, colors, objects and more in Learning Mode. In Play Mode, press the shape buttons or place the shape sorters correctly to hear fun phrases, sounds

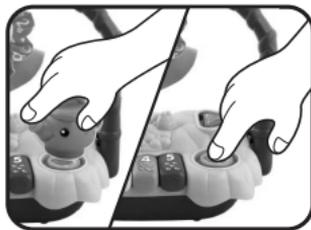

and cheerful melodies. The light on the flower will flash along with the sounds, and the flower will dance to the melodies.

5. If there is no input for 10 seconds, fun phrases, short tunes or sounds will be heard. If there is no input for another 10 seconds, cute songs and sounds will be heard. If there is no input for an additional 10 seconds, the unit will go into sleep mode. It can be re-activated by pressing any button.

MELODY LIST

1. Ants Go Marching
2. Skip to My Lou
3. Here We Go 'Round the Mulberry Bush
4. Shoo, Fly
5. The Glow Worm
6. Old MacDonald Had a Farm
7. Pop! Goes the Weasel
8. It's Raining, It's Pouring

SUNG SONG LYRICS:

Sung Song 1

Dancing in the sun is fun,
Dancing, learning all day long!

Sung Song 2 (Tune of "Polly Wolly Doodle")

It's a sunny day, a lovely day, for dancing in the sun.

Oh, the plants are green, the flower's bright, it's fun for everyone!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.