

vtech[®]

User's Manual

Discovery Nursery Farm[™]



© 2010 VTech

Printed in China

91-002466-000-000 (美)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

Your friends at VTech®

To learn more about the **Infant Learning**® series and other VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Discovery Nursery Farm™** learning toy!

The **VTech® Discovery Nursery Farm™** lets your baby join the barnyard jamboree while introducing animals, instruments, colors and more. Baby can learn and explore down on the farm!

4 ANIMAL
BUTTONS

ON/OFF SWITCH

1 BOOK PAGE



1 FARMER BUTTON

5 PIANO BUTTONS

MODE SELECTOR

1 PUPPY
SLIDE
BUTTON

INCLUDED IN THIS PACKAGE

- One VTech® Discovery Nursery Farm™ learning toy
- One user's manual


WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep user's manual as it contains important information.

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

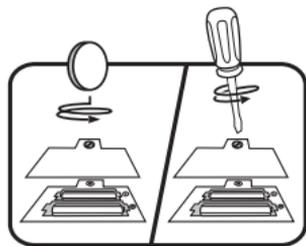

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.


- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES


1. ON/OFF SWITCH

To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON (*)** position. To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF (●)** position.

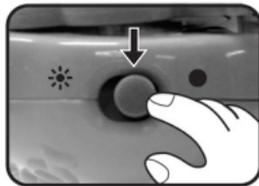

2. VOLUME CONTROL

The volume of the **VTech® Discovery Nursery Farm™** has three levels. Locate the **VOLUME SWITCH** on the bottom of the unit to adjust the volume level.

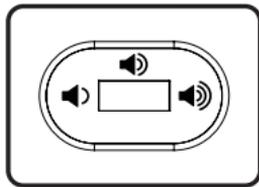


3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Discovery Nursery Farm™** will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button. Opening or closing the book does not turn the unit back on.

ACTIVITIES


1. Press the **animal buttons** to learn about animals and instruments in Learning Mode. Hear fun instrument sounds and melodies in Music Mode. While a melody is playing, press an animal button to have that animal sing the melody. The light will flash with the sounds.

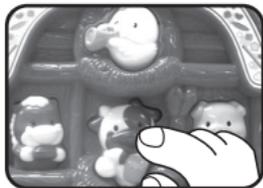

2. Press the **piano buttons** to learn colors and music notes in Learning Mode. In Music Mode, while a melody is playing, press the piano buttons to play the melody one note at a time. The light will flash with the sounds.



3. Press the **farmer button** to learn about the farmer, hear fun sound effects, talking phrases and a sung song in Learning Mode. Hear melodies in Music Mode. The light will flash with sounds.

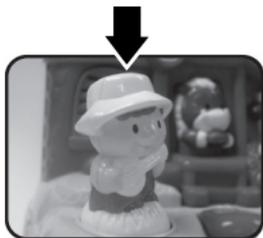

4. Slide the **puppy button** to learn about the puppy in Learning Mode. In Music Mode, hear fun sound effects, talking phrases and melodies sung by the puppy. The light will flash with the sounds.



5. Open the book to hear a cute sung song. Close the book to hear a closing short tune.



6. After a few seconds of no input, you will hear a question about an animal in Learning Mode, and a question about an instrument in Music Mode. Press the correct animal button or the farmer button to hear a rewarding sound and phrase.

MELODY LIST

1. Alouette
2. Shoo Fly
3. Hey Diddle Diddle
4. Skip to My Lou
5. Bingo
6. Alphabet Song
7. Old MacDonald Had a Farm

SONG LYRICS

SONG 1 (to the tune of 'This Old Man')

On the farm, there's a dog.

(dog barks)

With a pluck of the banjo and more music, too,

We can't wait to play with you!

On the farm, there's a rooster.
(rooster crows)
With a pluck of the banjo and more music, too,
We can't wait to play with you!

On the farm, there's a horse.
(horse neighs)
With a pluck of the banjo and more music, too,
We can't wait to play with you!

On the farm, there's a cow.
(cow moos)
With a pluck of the banjo and more music, too,
We can't wait to play with you!

On the farm, there's a pig.
(pig oinks)
With a pluck of the banjo and more music, too,
We can't wait to play with you!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product warranty, please call **VTech**[®] at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**

Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.