



User's Manual

Princess Carriage Laptop



vtech[®]

Visit the Disney Web site at www.disney.com

© Disney
All rights reserved.

© 2008 VTech
Printed in China
91-002315-003-000 (美)


Dear Parent,

At **VTech**[®], we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**[®] has developed the **Preschool Learning**[™] series of interactive toys.

Preschool Learning[™] features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**[™], learning is fun from day one!

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

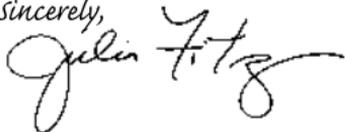


Julia Fitzgerald
Vice President, Marketing
VTech Electronics, NA

To learn more about the **Preschool Learning**[™] and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Princess Carriage Laptop**

This beautiful carriage-shaped laptop will delight any little princess. With 8 fun games, your child will learn age-appropriate curriculum in a fun and engaging way while improving their computer skills with the QWERTY keyboard and ring-shaped cursor. Cinderella will magically appear in the mirror for positive encouragement. Enchanting melodies, piano keyboard and the real voice of Cinderella add to the magic.

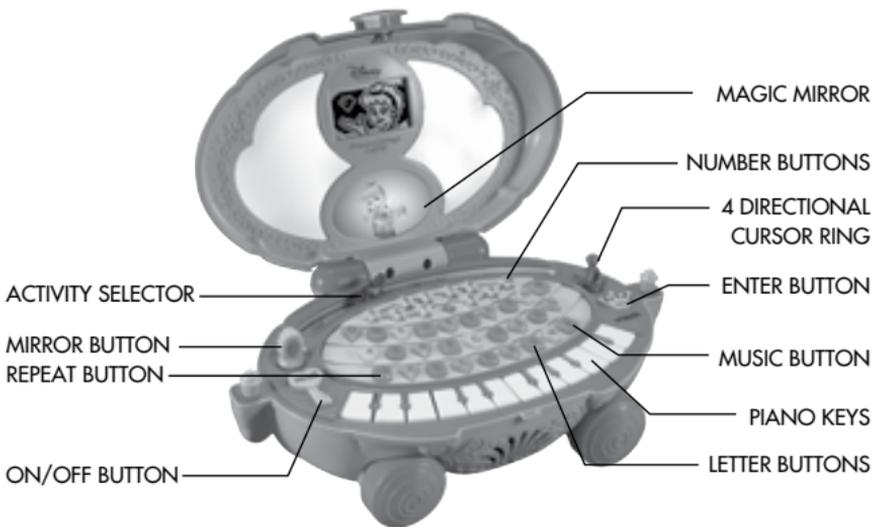

INCLUDED IN THIS PACKAGE


- One **VTech® Princess Carriage Laptop**
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit.
3. Install 3 new "AA" size (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover.

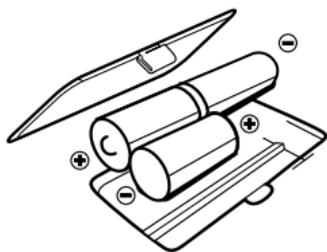

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

REMOVE DEMO TAG

The demo tag should be removed automatically when the product is taken out of the packaging. If the demo tag is still in position when you begin play, please remove it from the bottom of the unit to activate normal play mode.

PRODUCT FEATURES

1. ON/OFF BUTTON

Turn **ON** your **VTech® Princess Carriage Laptop** by pressing the **ON/OFF BUTTON**. Press again to turn the unit **OFF**.



2. ACTIVITY SELECTOR

Slide the **ACTIVITY SELECTOR** to the activity you would like to play.



3. MIRROR BUTTON

Press the **MIRROR BUTTON** to hear a twinkling sound and to see Cinderella magically appear in the mirror.




4. REPEAT BUTTON

Press the **REPEAT BUTTON** to hear a question again.



5. 4 DIRECTIONAL CURSOR RING

Move the **4 DIRECTIONAL CURSOR RING** left, right, up and down to select your choice or answer on the screen. Press the **ENTER BUTTON** to confirm.

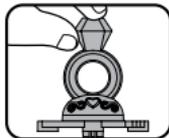

6. ENTER BUTTON

Press the **ENTER BUTTON** to confirm your choice or answer in related activities.



7. MUSIC BUTTON

Press the **MUSIC BUTTON** to hear a random melody.




8. MAGIC MIRROR

Cinderella will magically appear in the mirror during the game play for positive encouragement.



9. PIANO KEYS

Press the **PIANO KEYS** to play the piano.

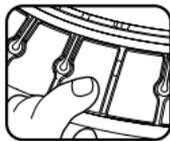

10. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Princess Carriage Laptop** will automatically power-down after approximately 3 minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**.

ACTIVITIES

1. Lovely Letters

Help Cinderella clean the floor by matching the capital and small letters. Use the cursor ring to select a letter, then press enter to confirm. The selected letter will flash. Select the corresponding capital or small letter and press enter to confirm and make a match.

2. Same or Different

Help Cinderella clean out the cupboard by finding the odd one out. Use the cursor ring to select the one that is different. The arrow on the screen will indicate your choice. Press enter to confirm.

3. Gem Count

Cinderella is sorting through her mothers jewelry. Help her arrange it by solving the equation. Watch carefully as the bird adds or takes away some objects. Press a number button to answer.

4. Spelling

Cinderella is teaching her bird friends to spell. Use the cursor ring to select the letters to spell the word. Press enter to confirm your choice. Alternatively, press the letter buttons to answer.

5. Dress Up

Cinderella is making clothes for the mice. Look carefully at the animation shown at the beginning of the question, then choose the appropriate clothing for the mice from the options given. Use the cursor ring to choose and press enter to confirm.

6. Tidying Up

Help Cinderella tidy the barn by finding the missing letter or number. Press a letter button or number button to complete the sequence in number or alphabetical order.

7. Pretty Pairs

Cinderella is sorting out some shoes. Use the cursor ring to help her find a matching pair. Press enter to confirm.

8. Magical Music

Select a song by pressing a number button. Press the piano keys while a song is playing to play the song one section at a time.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **electronic learning Disney Princess** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information that forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution : changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.