

vtech[®]

User's Manual

Bob the Builder[™] Letter Workshop



© 2007 VTECH
Printed in China
91-02257-000(美)

Dear Parent,

*At VTech® we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.*

***Preschool Learning™** features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to phonics, music, and cheerful sound effects! With **Preschool Learning™**, learning is fun from day one!*

At VTech® we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to exert the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

Your Friends at VTech®

*To learn more about **Preschool Learning™** and other VTech® toys, visit*

www.vtechkids.com

*To learn more about **Bob the Builder™**, visit*

www.bobthebuilder.com

INTRODUCTION

Thank you for purchasing the **VTech® Bob the Builder™ Letter Workshop!**

This fun-filled **Bob the Builder™ Letter Workshop** will keep your child entertained as they learn right alongside Bob and the Can-Do Crew. The colorful letter buttons will encourage exploration as your child learns letters, phonics, numbers, directions, basic vocabulary and much more! With realistic sound effects, fun phrases and cheerful melodies, learning has never been so much fun!



INCLUDED IN THIS PACKAGE


- One VTech® Bob the Builder™ Letter Workshop
- One User's Manual

WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to open the battery cover.
3. Install 3 new “AA” (UM3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

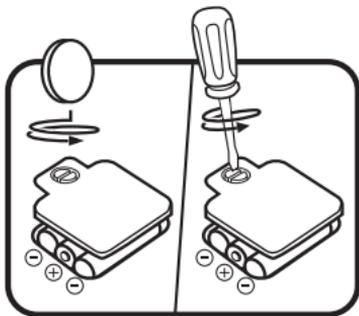

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF BUTTON

To turn the unit **ON**, press the **ON/OFF BUTTON**.

Press the **ON/OFF BUTTON** again to turn the unit **OFF**.



2. ACTIVITY SELECTOR

Slide the **ACTIVITY SELECTOR** to select an activity to play.



3. LETTER BUTTONS

Press the **26 LETTER BUTTONS** to learn letters and their sounds or to give a response/answer to the related activity.



4. MUSIC BUTTON

Press the **MUSIC BUTTON** to hear the Bob the Builder™ theme song.



5. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Bob the Builder™ Letter Workshop** will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**.

ACTIVITIES

1. Sound it Out



Slide the **ACTIVITY SELECTOR** to the first position to enter this activity.

Press the **LETTER BUTTONS** to hear the letter and its sound, followed by a related word. Answer questions related to phonics.

2. Friendly Help



Slide the **ACTIVITY SELECTOR** to the second position to enter this activity.

Bring an object to a character or a place. Press the required object, then press the character or the place.

3. Find It



Slide the **ACTIVITY SELECTOR** to the third position to enter this activity.

You will be given hints to find a certain object or place. Press the **LETTER BUTTONS** to answer.

4. SpellingSpelling

Slide the **ACTIVITY SELECTOR** to the fourth position to enter this activity.

You will hear a word. Press the **LETTER BUTTONS** in the correct order to spell the word.

5. CountingCounting

Slide the **ACTIVITY SELECTOR** to the fifth position to enter this activity.

You will hear a number. Press the same number of **LETTER BUTTONS** to count.

6. GuessingGuessing

Slide the **ACTIVITY SELECTOR** to the sixth position to enter this activity.

You will hear an object's sound or character's catchphrase. Press the corresponding **LETTER BUTTON** when you know what the answer is.

7. DirectionDirection

Slide the **ACTIVITY SELECTOR** to the seventh position to enter this activity.

You will be given the relative position of a certain object or character. Press the corresponding **LETTER BUTTON** when you know what the answer is.

8. MusicMusic

Slide the **ACTIVITY SELECTOR** to the eighth position to enter this activity.

Press the **LETTER BUTTONS** to hear a melody.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Preschool Learning™** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



(c) 2007 HIT Entertainment Limited and Keith Chapman. The Bob the Builder name and character, related characters and riveted logo are trademarks of HIT Entertainment Limited. Reg. U.S. Pat. & Tm. Off. and other countries.