

vtech[®]

User's Manual

Count & Learn Turtle[™]



© 2016 VTech
Printed in China
91-003153-000 

Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.

Preschool Learning™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning™**, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,


Your friends at VTech®

To learn more about VTech® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the **Count & Learn Turtle™**.

The **Count & Learn Turtle™** introduces numbers, colors, shapes and instruments in both English and Spanish using the twenty number buttons and two rollers! The turtle also teaches early math skills and plays fun sing-along songs and melodies.

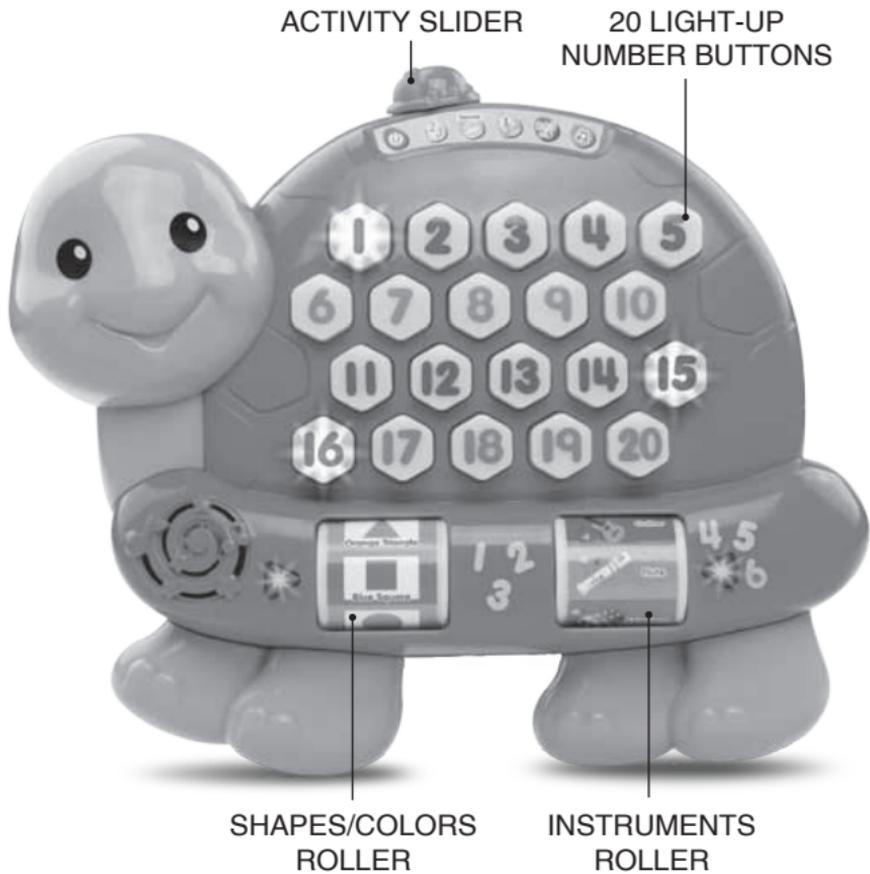

INCLUDED IN THIS PACKAGE

- One **Count & Learn Turtle™**
- User's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE:

Please keep this user's manual as it contains important information.

Unlock the packaging locks:

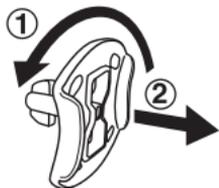


- ① Rotate the packing lock counter-clockwise 90 degrees.
- ② Pull out the packing lock.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover at the bottom of the unit.
3. Use a screwdriver to loosen the screw and open the battery cover.
4. Install 2 new "AA" (AM-3/LR6) batteries into the battery box as illustrated. (The use of new,

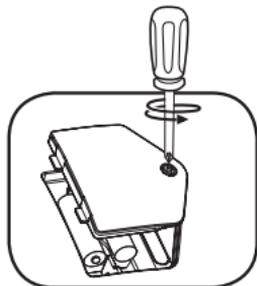

- alkaline batteries is recommended for maximum performance.)
- Replace the battery cover and tighten the screw to secure.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ACTIVITY SLIDER

Slide the **ACTIVITY SLIDER** to select an activity to play. Or slide the **ACTIVITY SLIDER** to **OFF** () to turn off the unit.



2. 20 LIGHT-UP NUMBER BUTTONS

Press the **LIGHT-UP NUMBER BUTTONS** to learn numbers, counting, Spanish, addition or select an answer in related activities.



3. SHAPES/COLORS ROLLER

Roll the **SHAPES/COLORS ROLLER** to learn 7 shapes and 7 colors. In the Spanish activity, the **ROLLER** will introduce shapes and colors in Spanish. In the music activity, it will add fun sounds into the music.




4. INSTRUMENT ROLLER

Roll the **INSTRUMENT ROLLER** to learn the instrument names, facts and sounds. In the Spanish activity, the **ROLLER** will introduce instruments in Spanish. In the music activity, it will add instrument sounds into the melody.



5. VOLUME CONTROL SWITCH

The **VOLUME CONTROL SWITCH** is located on the bottom of the product. Slide the switch to select between high and low volume.

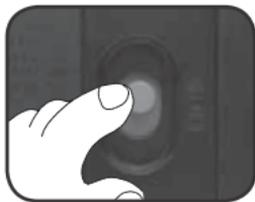

6. AUTOMATIC SHUT-OFF


To preserve battery life, the **Count & Learn Turtle™** will automatically power down after several minutes of no input. The unit can be turned on again by sliding the **ACTIVITY SLIDER**.

ACTIVITIES:

The **Count & Learn Turtle™** offers 5 activities to play.

Activity 1: Numbers and Counting

Move the **ACTIVITY SLIDER** to the second position () to enter this activity. Press any of the **NUMBER BUTTONS** to learn about numbers and start counting. The buttons will then light-up one by one to teach counting.

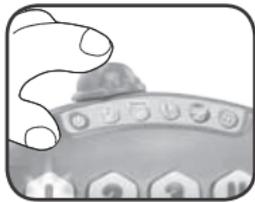

Activity 2: Counting in Spanish

Move the **ACTIVITY SLIDER** to the third position () to enter this activity. Press any of the **NUMBER BUTTONS** to learn how to say the number in Spanish. The buttons will then light up one by one to teach counting in Spanish.




Activity 3: Follow the Lights

Move the **ACTIVITY SLIDER** to the fourth position () to enter this activity. Watch as the buttons light up one by one, and then repeat the same sequence. When you have answered 5 questions correctly, you will progress to the next level. There are a total of three levels to play.



Activity 4: Add it Up

Move the **ACTIVITY SLIDER** to the fifth position () to enter this activity. The unit will first select a number between one and ten. Then, you will be asked to choose another number between one and ten. After you have selected the second number, the program will add up both numbers and teach simple addition by lighting the buttons one by one.

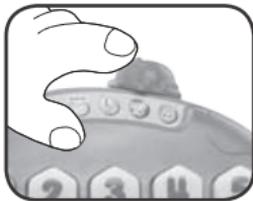

Activity 5: Music Fun

Move the **ACTIVITY SLIDER** to the sixth position () to enter this activity. Press a number between one and ten to play number related songs or press a number between eleven and twenty to play a melody. Press a **NUMBER BUTTON** at any time to change the song or melody.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] Preschool Learning products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If

this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.





PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.