

User's Manual

Yo Gabba Gabba! Learning Laptop



www.YoGabbaGabba.com

© 2009 VTech Printed in China

vttech®




Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the Preschool Learning™ series of interactive toys.

Preschool Learning™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With Preschool Learning™, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

sincerely,

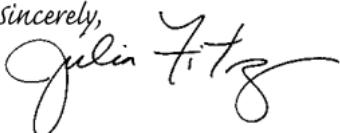


Julia Fitzgerald
Vice President, Marketing
VTech Electronics, NA

To learn more about Preschool Learning™ and other VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Yo Gabba Gabba Learning Laptop!**

The **VTech® Yo Gabba Gabba Learning Laptop** is a toy for all your essential preschool learning. With eight activities, this toy will introduce your child to age-appropriate curriculum in a fun and engaging way. Your child will use the alphabetical keyboard, twist wheel, turntable, and LCD screen to learn letters, numbers, rhythm, and much more. Cool sound effects and melodies add to the fun. The real voice of DJ Lance will give friendly guidance to your child as they explore and meet up with the rest of the Yo Gabba Gabba gang.

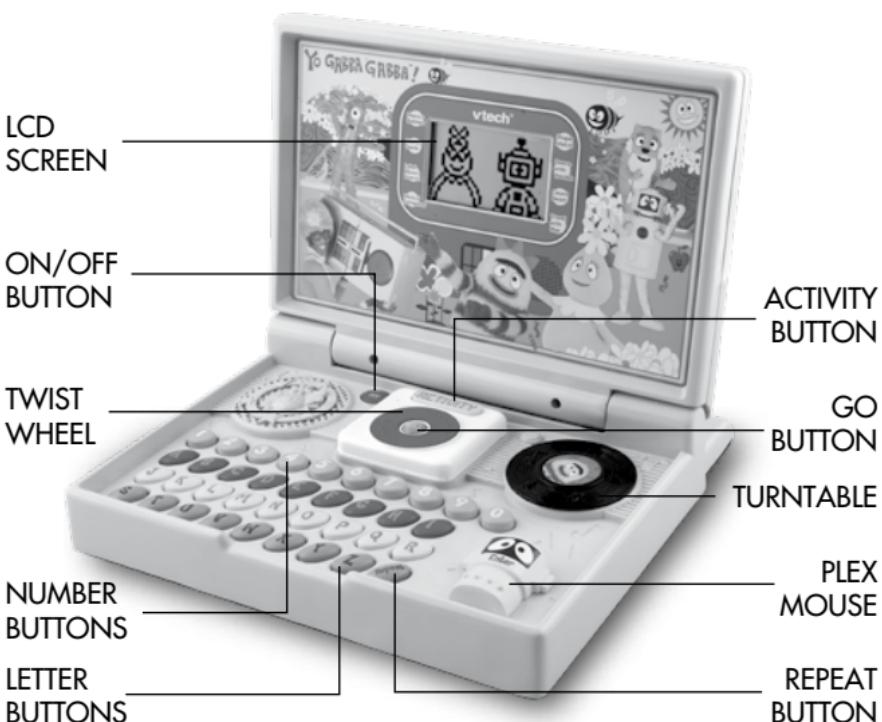


INCLUDED IN THIS PACKAGE

- One VTech® Yo Gabba Gabba Learning Laptop
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, packing lockers, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

Unlock the packing lockers:

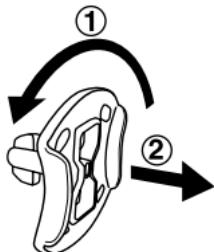


- ① Rotate the packing locker counter-clockwise for 90 degrees.
- ② Pull out the packing locker.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit.
3. Open the battery cover.
4. Install 3 new "AA" (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover.

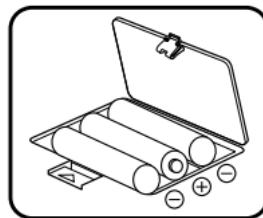

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

DEMO STRIP REMOVAL

When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode.

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the **ON/OFF BUTTON** to turn the unit on.
Press it again to turn the unit off.



2. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Yo Gabba Gabba Learning Laptop will automatically power off after approximately three minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**.

3. ACTIVITY BUTTON

Press the **ACTIVITY BUTTON** to enter the activity menu.



4. TWIST WHEEL

Turn the **TWIST WHEEL** to select an activity from the activity menu, or to answer questions in some activities. Press the **GO BUTTON** to confirm your choice. Listen for fun sound effects when you turn the wheel!



5. TURNTABLE

Rotate the **TURNTABLE** to hear fun sound effects and enjoy the Gabba gang's cool dance steps.



6. NUMBER BUTTONS

Press the **NUMBER BUTTONS** to answer questions in number activities.



7. LETTER BUTTONS

Press the **LETTER BUTTONS** to answer questions in letter activities.



8. REPEAT BUTTON

Press the **REPEAT BUTTON** to repeat the current question or instructions.



9. PLEX MOUSE

Move the **PLEX MOUSE** left, right, up, or down to select an answer in related activities.



10. ENTER BUTTON

Press the **ENTER BUTTON** located on Plex's head to confirm your selection.



ACTIVITIES

1. Dance with Toodee

Choose your favorite character from the Gabba gang. Then, watch Toodee's dance steps and repeat them in the correct order by using the mouse. Move the mouse left to spin, right to hop, up to jump, and down to wiggle.



2. Foofa's Seeds

Help Foofa match up pairs of capital and lower case letters! Two, three, or four pairs of buckets are covering letter seeds. Use the mouse or twist wheel to choose a bucket, and then press the Enter button or Go button to confirm.



3. Odd One Out

There's a party in Brobee's tummy! Can you figure out which object can't go? Four objects appear on the screen. Three of them are food objects, and the other one is a non-food object. Use the mouse or twist wheel to choose an object, and then press the Enter button or Go button to confirm.




4. Letter Bubbles

Three, four, or five letter bubbles appear on the screen. Help Plex pop them in alphabetical order by pressing the letters on the keyboard.




5. Count Beats

Toodee is playing instruments, and she needs to count the beats! Help Toodee count as a drum, trumpet, or xylophone play. Use the mouse or number buttons to answer.

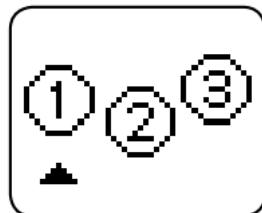

6. Muno's Insects

Muno's insects got out of order! He needs to label them all with the correct numbers. Three insects are lined up in number order, and one has a missing number. Find the missing number by pressing the correct number button.

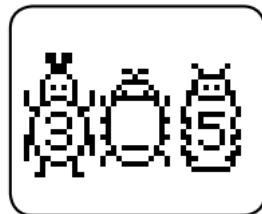


7. Music Composer

Press a letter button to hear a melody, and watch the Gabba gang dance to the music. Press the number buttons to hear various sound effects from our daily life and add more fun to the music.



8. Travel with Plex

One letter of a word is missing. Press the missing letter on the keyboard to help Plex complete the word.

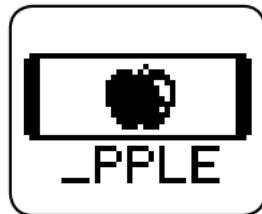

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE

Creating and developing **Preschool Learning™** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.