

Disney  
**Junior**

User's Manual

**MINNIE**

**Smile & Style Mirror™**



**3-6**  
Years

**vtech®**

© Disney  
Visit [DisneyJunior.com](http://DisneyJunior.com)

© 2015 VTech  
Printed in China  
91-003059-000 (US)

Dear Parent,

At **VTech**<sup>®</sup>, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**<sup>®</sup> has developed the **Preschool Learning**<sup>™</sup> series of interactive toys.

**Preschool Learning**<sup>™</sup> features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**<sup>™</sup>, learning is fun from day one!

At **VTech**<sup>®</sup>, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**<sup>®</sup> with the important job of helping your child learn and grow!

Sincerely,


Your friends at **VTech**<sup>®</sup>

To learn more about **VTech**<sup>®</sup> toys, visit [vtechkids.com](http://vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Smile & Style Mirror™!**

Learning is always in fashion with Minnie and the **Smile & Style Mirror™!** Featuring Minnie's voice, this handheld mirror lights up and has five learning games that introduce letters, numbers, shapes, music and more.

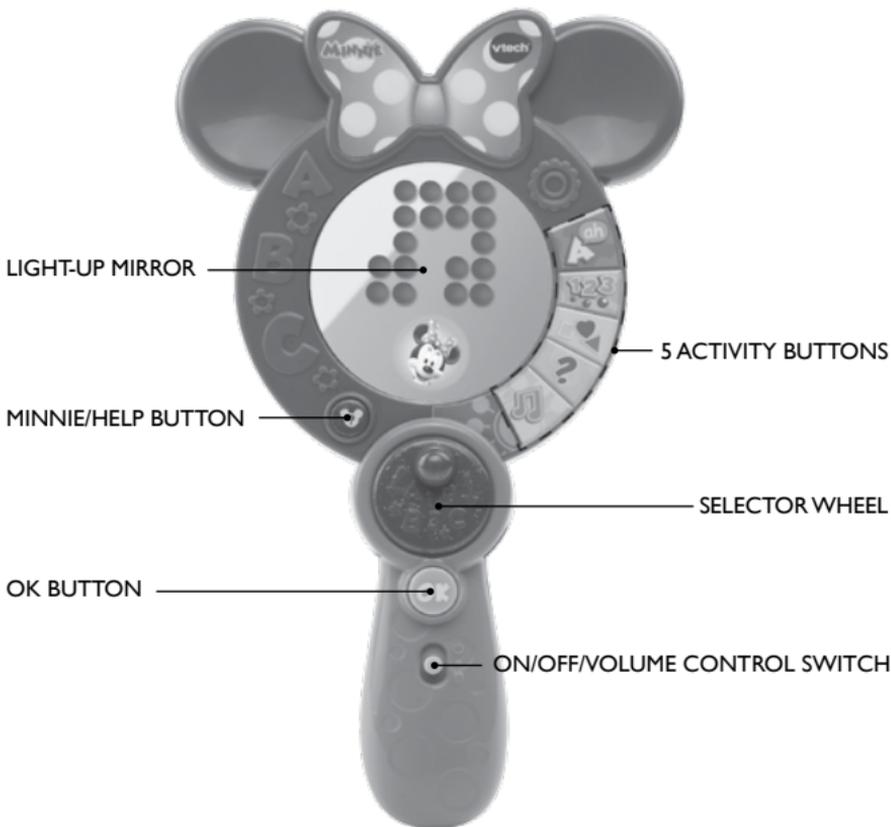

# INCLUDED IN THIS PACKAGE


- One **VTech® Smile & Style Mirror™**
- One user's manual

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**ATTENTION:** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep this user's manual as it contains important information.

## Unlock the packaging locks:

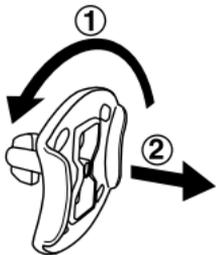


- ① Rotate the packaging lock 90 degrees counter-clockwise.
- ② Pull out the packaging lock.

# GETTING STARTED

## BATTERY INSTALLATION

1. Make sure the unit is **OFF**.
2. Locate the battery cover at the back of the handle. Use a screwdriver to loosen the screw.
3. Install 2 new “AAA” (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

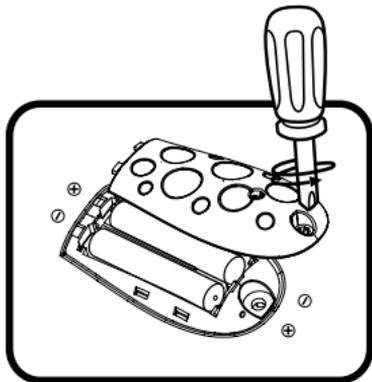

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## PRODUCT FEATURES

### 1. ON/OFF/VOLUME CONTROL SWITCH



To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to either the **LOW VOLUME** (●) or **HIGH VOLUME** (●) position. To turn the unit **OFF**, slide the switch to the **OFF** (⏻) position.

### 2. LED LIGHT PANEL



The **LED LIGHT PANEL** will display letters, shapes, numbers and more to assist with game play.

### 3. MINNIE/HELP BUTTON



Press the **MINNIE/HELP BUTTON** to play Minnie's voice or to repeat a question in the **HIDE & SEEK** activity.

## 4. OK BUTTON



Press the **OK BUTTON** to confirm a selection.

## 5. SELECTOR WHEEL



Hold the knob on the **SELECTOR WHEEL** and rotate clockwise or counter-clockwise to toggle between choices and to change the tempo of the music in the **MUSIC TIME** activity.

## 6. ACTIVITY BUTTONS

Press one of the **ACTIVITY BUTTONS** to play an activity.

## 7. AUTOMATIC SHUT-OFF

To preserve battery life, the **Smile & Style Mirror™** will automatically turn off after a while of inactivity. The unit can be turned on again by pressing any button on the unit or sliding the **ON/OFF/VOLUME CONTROL SWITCH** between volume levels. The unit will also automatically turn off when the batteries are very low.

# ACTIVITIES

The **Smile & Style Mirror™** offers a total of 5 activities to play.

## ACTIVITY 1: LETTER SOUNDS



Rotate the **SELECTOR WHEEL** to choose a letter you want to learn. Then, press the **OK BUTTON** to hear the letter and the sound it makes.

## ACTIVITY 2: COUNT THE LIGHTS



To choose a number you want to learn to count to, turn the **SELECTOR WHEEL**. Then, press the **OK BUTTON** to learn the selected number and how to count to that number.

### ACTIVITY 3: MAGIC SHAPES



Turn the **SELECTOR WHEEL** and press the **OK BUTTON** to choose a shape or object and learn about it.

### ACTIVITY 4: HIDE & SEEK



To begin the activity, you will be asked to find a specific letter, number, object or shape on the mirror. Turn the **SELECTOR WHEEL** and press the **OK BUTTON** to answer the question. After two incorrect selections, you will be shown the correct letter, number, object or shape. Then, you will be asked a new question. To repeat a question, press the **MINNIE/HELP BUTTON**.

### ACTIVITY 5: MUSIC TIME



Turn the **SELECTOR WHEEL** and press the **OK BUTTON** to choose a melody (ten melodies are represented by the numbers one through ten). While a melody is playing, turn the **SELECTOR WHEEL** clockwise to speed up the tempo or counter-clockwise to slow down the tempo. You can also press the **MINNIE/HELP BUTTON** to put Minnie's voice into the melody.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

## IMPORTANT NOTE

Creating and developing **VTech®** **Preschool Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.  
CAN ICES-3 (B)/NMB-3(B)



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to [vtechkids@vtechkids.com](mailto:vtechkids@vtechkids.com) or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase data and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

**THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.**

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

**This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.**