

Disney

User's Manual



WRITE & LEARN DOCTOR'S BAG™



3-6
Years

vtech®

© Disney
Visit DisneyJunior.com

© 2013 VTech
Printed in China
91-009652-000 (US)

Dear Parent,

At **VTech**[®], we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**[®] has developed the **Preschool Learning**[™] series of interactive toys.

Preschool Learning[™] features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**[™], learning is fun from day one!

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!


Sincerely,

Your friends at **VTech**[®]

To learn more about **Preschool Learning**[™] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Write & Learn Doctor's Bag™!** This carry-along doctor's bag is the perfect introduction to early drawing and writing. Your child can use the attached stylus to trace letters, numbers, and shapes on the interactive touch screen. Encouraging phrases and health facts from Doc McStuffins add to the fun. The Doc is in, and it's time to learn!

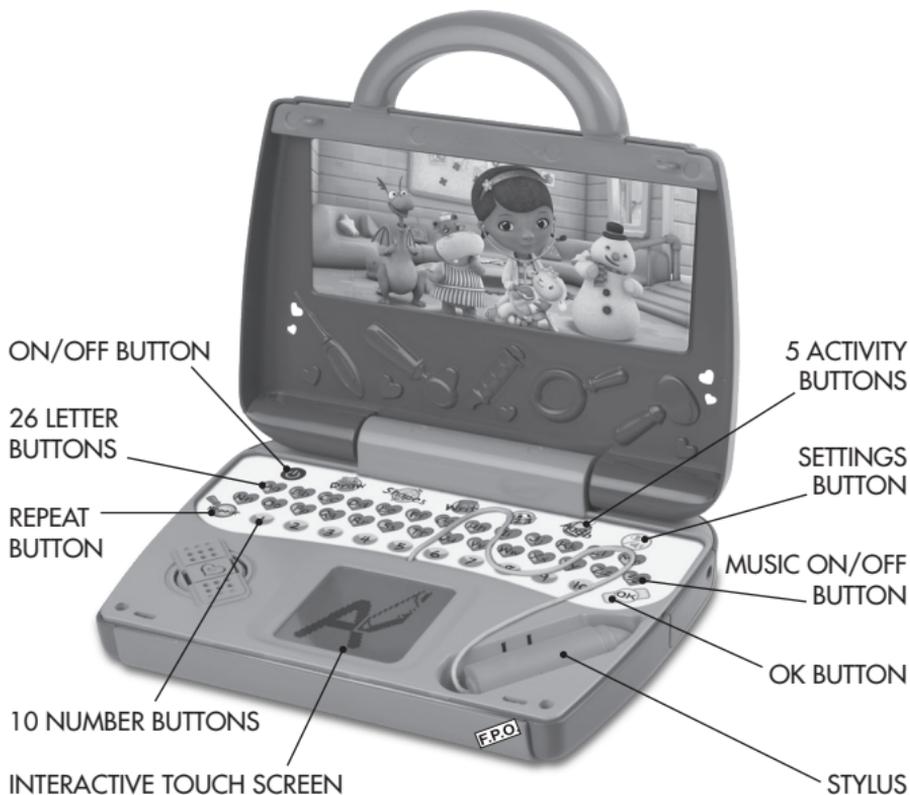

INCLUDED IN THIS PACKAGE


- One VTech® Write & Learn Doctor's Bag™
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep the user's manual as it contains important information.

Unlock the packing locks:

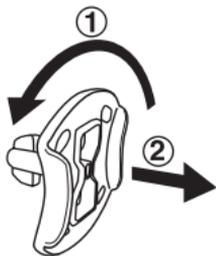


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packing lock.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new "AA" (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

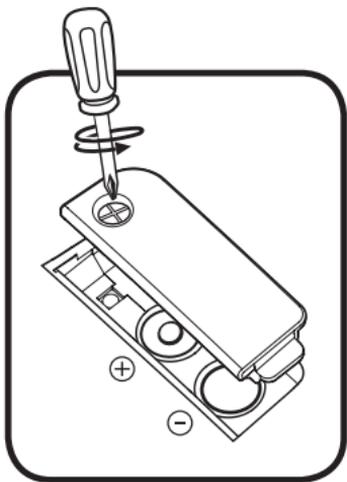

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES


1. INTERACTIVE TOUCH SCREEN

Practice drawing and trace the letters or numbers on the **INTERACTIVE TOUCH SCREEN**.



2. STYLUS

Use the **STYLUS** to draw or write on the **INTERACTIVE TOUCH SCREEN**.

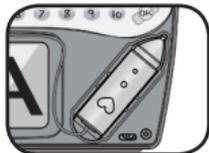

3. ON/OFF BUTTON

To turn the unit on, press the **ON/OFF BUTTON**. Press the **ON/OFF BUTTON** again to turn the unit off.




4. ACTIVITY BUTTONS

Press one of the five **ACTIVITY BUTTONS** to select an activity.



5. LETTER BUTTONS

Press the 26 **LETTER BUTTONS** to learn letters, letter-related objects, or the proper letter strokes, depending on the activity selected.

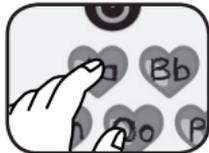


6. NUMBER BUTTONS

Press the 10 **NUMBER BUTTONS** to learn numbers or the proper number strokes or to answer a question, depending on the activity selected.



7. REPEAT BUTTON

Press the **REPEAT BUTTON** to hear the current instruction or animation repeated.

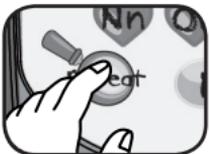

8. SETTINGS BUTTON

Press the **SETTINGS BUTTON** to adjust the volume and LCD contrast.



9. MUSIC ON/OFF BUTTON

Press the **MUSIC ON/OFF BUTTON** to turn the background music on or off.



10. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**.

ACTIVITIES

In the learning activities, you'll see this toolbar. Use it to draw, erase, or confirm your answer.



 - Tap this icon to draw.

 - Tap this icon to erase parts of your drawing.

 - Tap this icon to erase everything you've drawn.

 - Tap this icon to confirm your answer or finish your drawing.

1. DRAW WITH DOC

Sometimes Doc will draw for the toys to make them feel better! In this activity, you can draw anything you'd like on the touch screen.

2. SHAPES & STORIES

Doc loves drawing! Let's learn to draw step by step! First, select a shape. Then, learn how to draw a type of line that's used in that shape by tracing

the dotted lines. Then, learn how to draw the shape. Finally, draw an object that looks like the shape you selected. After you've finished, hear Doc explain how that object helps her stay healthy!

3. GET WELL WRITING

Doc is making a get well soon card for Lambie. Press a letter button to learn how to write the letter by tracing the dotted lines. Learn the uppercase letter and then the lowercase letter, too!

4. COUNT AND TRACE TOOLS

Help Hallie count the tools and press a number button to answer. Then, learn how to write the number by tracing the dotted lines.

5. LETTER MATCHING

Stuffy got the cards mixed up! Match the uppercase and lowercase letters.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.

4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

NOTE:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

COPYRIGHT NOTICES:

Copyright ©2013 **VTech**® Electronics North America, L.L.C. All Rights Reserved. **VTech**® and the VTech® logo are registered trademarks of **VTech**® Electronics North America, L.L.C. All other trademarks are property of their respective owners.

IMPORTANT NOTE:

Creating and developing Preschool Learning products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.