

**vtech**<sup>®</sup>

User's Manual

**Baby Amaze™**  
**Learn to Talk & Read Baby Doll™**



**Baby  
Amaze™**

© 2015 VTech  
Printed in China  
91-002942-008 US

Dear Parent,

At VTech®, we know how much children love to take care of baby dolls. Blending classic role play with innovative technology, **Baby Amaze™** has been designed for children whose parents want to combine nurturing concepts with educational content.

**Baby Amaze™** features adorable products that interact with your child through fun educational phrases and baby care reminders that incorporate learning into role play.

Playing with the **Baby Amaze™** items introduces your child to reading concepts, age-appropriate vocabulary words, parts of the body, colors, numbers, animals and more while listening to encouraging phrases.

Additionally, **Baby Amaze™** features buttons and other manipulative elements to encourage the development of your child's fine motor skills. **Baby Amaze™** also includes a variety of classic nursery rhymes, sing-along songs, lullabies and melodies for even more fun!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop children's minds and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

Your friends at VTech®

To learn more about VTech® toys, visit [vtechkids.com](http://vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **Baby Amaze™ Learn to Talk & Read Baby Doll™** by VTech®. Talk to the baby doll and hear her repeat what is said, or read from the three included vocabulary books! The more your little one talks to the baby doll, the more words and phrases the baby doll will learn. Includes more than 80 adorable phrases and realistic sound effects like drinking and giggling.

VOLUME/ON/OFF SWITCH



NEWBORN BUTTON

BOTTLE



CARING BUTTON

READING BUTTON

TALK WITH ME BUTTON

MUSIC BUTTON

PACIFIER

## 3 Vocabulary Books:



1. My Home



2. Food Fun



3. Animals

# INCLUDED IN THIS PACKAGE

- One **Baby Amaze™ Learn to Talk & Read Baby Doll™**
- One pacifier
- One bottle
- Three vocabulary books
- One user's manual

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**ATTENTION:** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep the user's manual as it contains important information.

## GETTING STARTED

### START FROM NEWBORN MODE

After removing the baby doll from the packaging, put the pacifier in her mouth. When you remove the pacifier, the baby doll will be in newborn mode. The more you interact and talk with the baby doll, the more advanced she will become.



## BATTERY INSTALLATION

1. Open the fabric on the back of the doll to locate the battery unit.
2. Make sure the unit is turned **OFF**.
3. Open the battery cover using a screwdriver.
4. Install 2 new “AA” size (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.




## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## NOTE:

The cords located on the hands are not part of this toy. The cords should be removed and discarded for your child's safety.

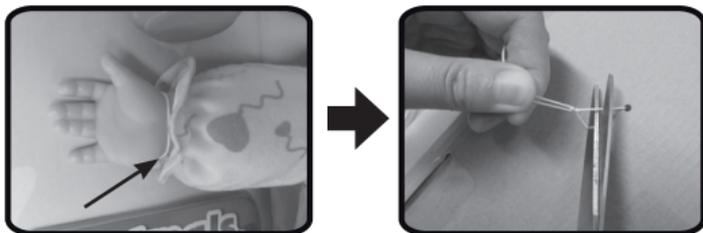

## PRODUCT FEATURES

### 1. VOLUME/ON/OFF SWITCH



Slide the **VOLUME/ON/OFF SWITCH** to the desired volume level to turn the unit on or adjust the volume.

### 2. TALK WITH ME BUTTON



Press the **TALK WITH ME BUTTON** and the baby doll will invite you to talk to her. When you say something she can imitate what you said!

### 3. READING BUTTON



Press the **READING BUTTON** to choose from 3 vocabulary books to read with the baby doll. Read aloud to the baby doll, listen to the baby doll read to you or teach the baby doll to read!

#### 4. CARING BUTTON



Press the **CARING BUTTON** to love and care for the baby doll by responding to her requests.

#### 5. MUSIC BUTTON



Press the **MUSIC BUTTON** to listen to the baby doll coo and sing along to nursery rhymes.

#### 6. PACIFIER

Insert the **PACIFIER** into the baby doll's mouth to hear cute sounds.



#### 7. BOTTLE

Insert the **BOTTLE** into the baby doll's mouth to feed her.



#### 8. NEWBORN BUTTON

Pressing the **NEWBORN BUTTON** will reset the baby doll to newborn mode. The baby doll will forget all previous knowledge and you can experience the learning process all over again.



#### 9. TURNING THE UNIT OFF/ AUTOMATIC SHUT-OFF

Slide the **VOLUME/ON/OFF SWITCH** to **OFF** to turn the unit off. To preserve battery life, the unit will automatically power off after several minutes without input.

# ACTIVITIES

## 1. TALK WITH ME

**Learn to Talk & Read Baby Doll™** will invite you to talk to her. When the red bow on the baby doll's head lights up, talk to her and she can imitate what you say!

To ensure the baby doll can hear clearly, please speak toward the baby doll's front within a distance of 9 inches.



## 2. READING

You can choose from 3 vocabulary books to read with the baby doll. First, she will ask you to read words to her. As she grows and learns she will want to read together and read the words to you.



## 3. CARING

The baby doll may get hungry or want her pacifier. Respond to the baby doll's needs by giving her the bottle or pacifier.




## 4. MUSIC TIME

The baby doll will coo and sing along with the nursery rhymes.



## 5. NEWBORN MODE

If you want to experience the learning process all over again, pressing the **NEWBORN BUTTON** will reset the baby doll to newborn mode. The baby doll will forget all previous knowledge.

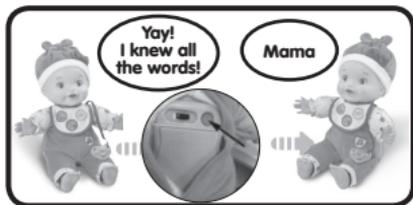

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

## IMPORTANT NOTE:

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



CLASS 1  
LED PRODUCT



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to [vtechkids@vtechkids.com](mailto:vtechkids@vtechkids.com) or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase data and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.