


INTRODUCTION

Thank you for purchasing the **Style & Glam On Unicorn™**. Magical accessorizing is easy with this unicorn! Adding stylish accessories to the unicorn's horn and tail makes her star and horn light up. Make a new magical friend and hear about colors, counting and more!

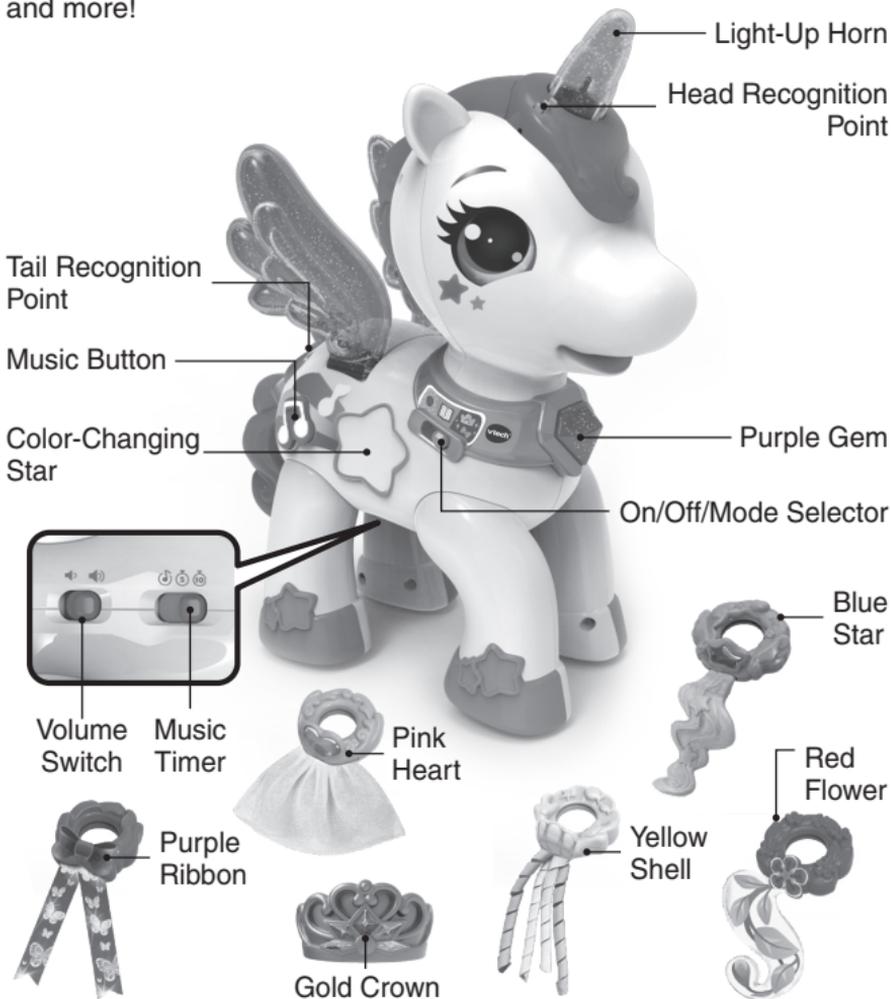

INCLUDED IN THE PACKAGE

- **Style & Glam On Unicorn™**
- 6 Accessories
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.


ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

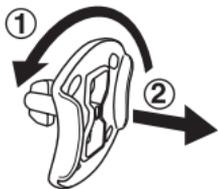


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the side of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni- MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

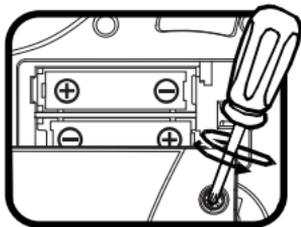

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES :

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES


1. On/Off/Mode Selector

To turn the unit **On**, slide the selector to the Learning mode 📖 or Pretend Play mode 🎭 position. To turn the unit **Off**, slide the selector to the **Off** ● position.



2. Volume Selector

Find the **Volume Switch** located on the bottom of the unicorn. To adjust the volume, slide the **Volume Switch** to the Low volume 🔊 or High volume 🔊) position.

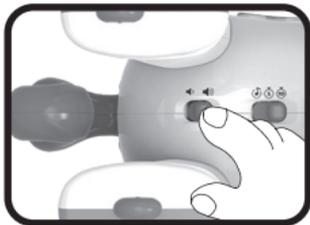

3. Six Accessories

Place an accessory on the **Head** or **Tail Recognition Point** to learn about the accessory, counting, colors and more. Enjoy pretend play fun!



4. Recognition Points

Place an accessory on the **Head** or **Tail Recognition Point** on the unicorn to trigger fun responses and lights.



5. Light-Up Horn

The **Light-Up Horn** lights up in blue with the voice responses and songs.




6. Color-Changing Star

The **Color-Changing Star** lights up in multiple colors with songs and melodies.




7. Music Button

Press the **Music Button** to play songs and melodies.

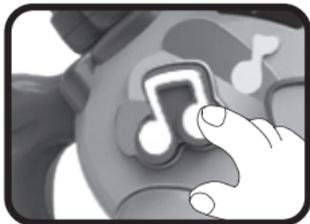


8. Music Timer

Find the **Music Timer** located on the bottom of the unicorn. Slide the **Music Timer** to select Normal Play (🎵), Five-Minute Timer (5) or Ten-Minute Timer (10) music setting.

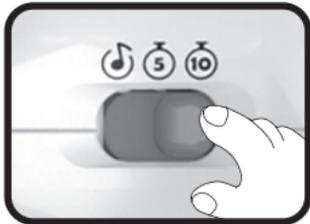

9. Purple Gem

Press the **Purple Gem** to hear fun phrases, sounds and to see the unicorn's horn light up.

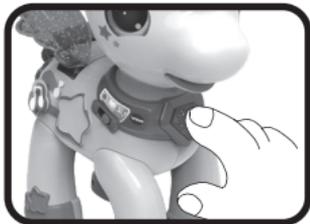

10. Rolling Wheels

Push the unicorn along on the wheels built into the hooves.



11. Flapping Wings

Flap the unicorn's wings back and forth with a gentle hand.



12. Automatic Shut-Off

To preserve battery life, **Style & Glam On Unicorn™** will automatically shut off after several minutes without input. The unicorn can be turned on again by sliding the **On/Off/Mode Selector** to Learning mode or Pretend Play mode position.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Learning Mode

Slide the **On/Off/Mode Selector** to Learning mode and place an accessory on a **Head** or **Tail Recognition Point** to hear about objects, colors, counting and fun phrases. Press the **Purple Gem** to hear fun facts about unicorns.



2. Pretend Play Mode



Slide **Off/Mode Selector** to Pretend Play mode and place an accessory on a **Head** or **Tail Recognition Point** to hear phrases for pretend play fun.

Press the **Purple Gem** to hear unicorn sounds and fun phrases when there is no accessory on either of the **Recognition Points**.




3. Music Timer

Slide the **Music Timer** to , then press the **Music Button** to hear sung songs and melodies.

Slide the **Music Timer** to , then press the **Music Button** to hear melodies. The melodies will play for five minutes.

Slide the **Music Timer** to , then press the **Music Button** to hear melodies. The melodies will play for 10 minutes.

Place an accessory on the **Head** or **Tail Recognition Point** to hear fun sounds while the music is playing.

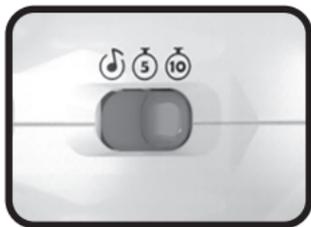

SONG LYRICS

Song 1

It's going to be a magical day,
We will sparkle wherever we go!
Believe in ourselves, today is our day!

Song 2

Let's accessorize!
I can wear a crown, a star,
A heart, a shell, ribbons or flowers.
The combinations are endless!

Song 3

Beautiful colors everywhere,
Gold, red, yellow, purple, blue and pink.
We will explore and learn together,
In the magical world of colors!

Song 4

Flying from here to there,
Got wings on my back and color in my hair! Oh yeah!
And magic under my feet,
It's really sweet!
Won't you come and shine with me?
Let's go!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the product out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the product on a hard surface and do not expose the product to excess moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions while playing with the accessories, please remove the accessories and place them back onto the unicorn.

If the unit still isn't functioning, or if for some reason the unit stops working, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5425
Product Name: Style & Glam On Unicorn™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003 (B)/NMB-003(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

