

vtech[®]

User's Manual

SWITCH & GO DINOS[®]

JAGGER THE T-REX[™]



© 2013 VTech
Printed in China
91-009654-006 US



Hi Friend,

You're about to embark on a "dino-mite" adventure with me, **Jagger The T-Rex™**! Just so you know, I've been specially created just for you and am part of the **VTech® Switch & Go Dinos®** crew! **Switch & Go Dinos®** are a special breed of dinosaurs that transform from vehicle to dino in a few easy steps. You're going to love playing with me!

Not only can you help me do some wicked transformations, but you can help me do other cool things, too! Customize me by choosing my eyes in dino mode or picking a driver when I'm in vehicle mode! Press my buttons to hear fun phrases and awesome sounds! You can even tell me what to do! Just say a command, and watch me spring into action!

For more fun, be sure to check out the rest of the **Switch & Go Dinos®** crew (each sold separately)! And remember, with me you're in for some dino switchin', road racing fun!


Your pal,

Jagger The T-Rex™

INTRODUCTION

I am **Jagger The T-Rex™**, and my power is yours to command! Tell me to “go”, and I’ll make the earth shake with my powerful legs! Or tell me to “eat”, and my spike-like teeth and super-strong jaws will leave nothing behind!

Turn me into a crane for even more excitement! Hear me rev my engine and blast my horn! Or fire my drill for some demolition fun! There’s so much we can do together. Just say the word!

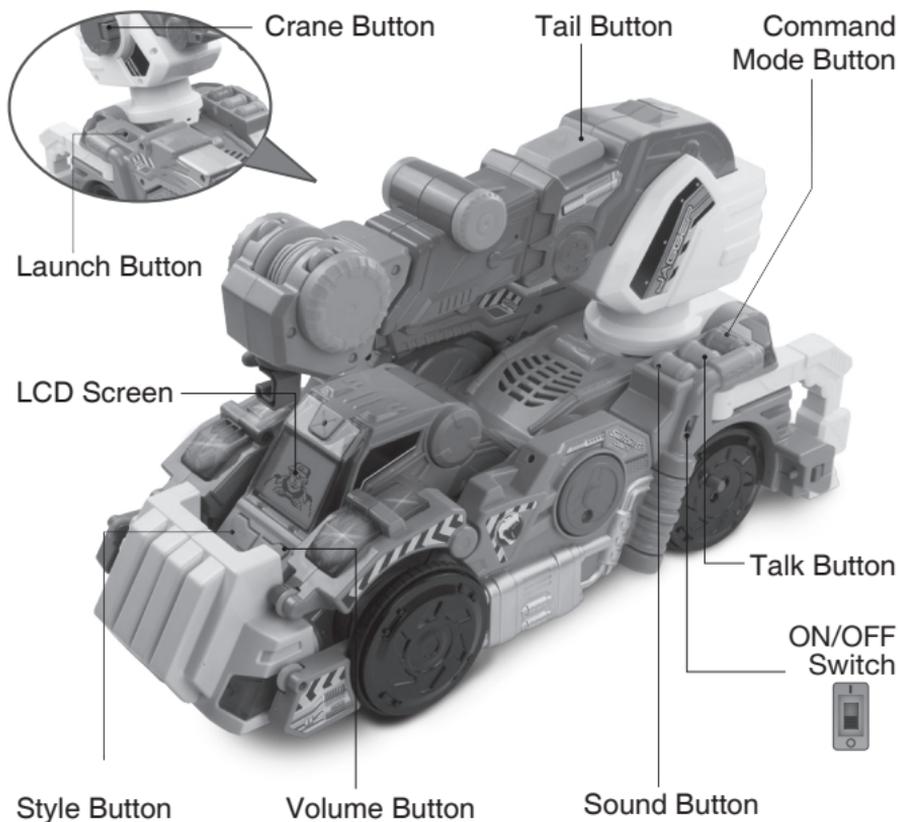

INCLUDED IN THIS PACKAGE

- One VTech® Switch & Dinos®: Jagger The T-Rex™
- One small bulldozer
- One Switch & Dinos® poster
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.


NOTE:

Please keep the user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Install 4 new "AA" (LR6/AM-3) batteries into the main unit following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover.

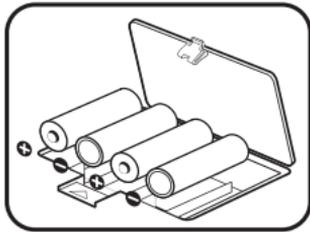

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. TURNING THE UNIT ON



Slide the **ON/OFF Switch** to **ON** to turn the unit **ON**.

2. STYLE BUTTON



Press the **Style Button** to choose a driver or change the dino eyes.

3. TALK BUTTON



Press the **Talk Button** to hear the dino or driver talk.

4. SOUND BUTTON



Press the **Sound Button** to hear cool sound effects.

5. VOLUME BUTTON

Press the **Volume Button** to adjust the volume.

6. LAUNCH BUTTON

Press the **Launch Button** to fire the drill.

7. TAIL BUTTON

Press the **Tail Button** to turn on the truck's headlights or make the dino roar. Jagger will also roar if you lift his tail.



8. CRANE BUTTON

To adjust the crane's height, hold down the **Crane Button** and move the crane up to one of three positions. Release the button to lock the crane in place.

Note: Please make sure the crane is in the bottom position before switching the truck to a dino.

9. COMMAND MODE BUTTON

Press the **Command Mode Button** to enter Command Mode, and Jagger will teach you how to command him. For more details about Command Mode, please see the "How to Use Voice Commands" section.

10. TURNING THE UNIT OFF/ AUTOMATIC SHUT-OFF

Slide the **ON/OFF** switch to **OFF** to turn the unit **OFF**, or hold the **Talk Button** for a few seconds to put the unit into sleep mode.

To preserve battery life, the unit will automatically go to sleep after several minutes without input.

HOW TO USE VOICE COMMANDS

Jagger responds to 12 different commands in each mode.

Before you can give a command, you have to get Jagger's attention. Say "Hello T-Rex" if he's a dino, or "Hello Truck Driver" if he's a truck.

Wait for Jagger to respond. Then say one of the commands. If Jagger hears you, he'll follow your command. But if he says "Let's try again later", he's not listening to you anymore. Say "Hello T-Rex" or "Hello Truck Driver" to get his attention, and say the command again.

COMMAND MODE

If you don't have the Command List with you and you don't know the commands, you can press the Command Mode button to have Jagger give you a reminder.


In Command Mode, Jagger will tell you what command to say. Just repeat after him. You don't have to say "Hello T-Rex" or "Hello Truck Driver" first.

If you want to choose a different command, press the Command Mode button again. Keep pressing the button until Jagger tells you the command you're looking for.


COMMAND LIST:

	DINO MODE	TRUCK MODE
Command 1	Go forward!	Go forward!
Command 2	Go back!	Go back!
Command 3	Roar with me!	Start your engine!
Command 4	Fire the drill!	Fire the drill!
Command 5	Change your voice!	Turn on the lights!
Command 6	Go wild!	Let's make some noise!
Command 7	Snack time!	Let's race!
Command 8	Make me laugh!	Sound the alarm!
Command 9	Talk to me!	Talk to me!
Command 10	Teach me something!	Wrecking machine!
Command 11	Go to sleep!	Monster truck!
Command 12	You're not so tough!	It's quitting time!


HOW TO SWITCH THE TRUCK TO A DINO

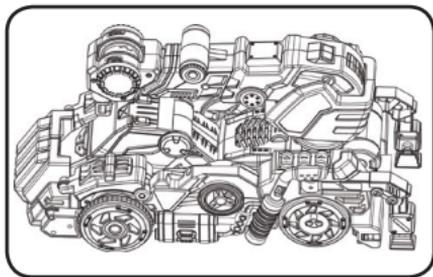


1. Truck shape.

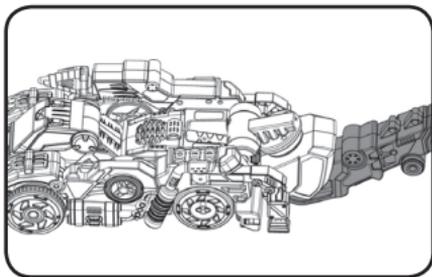


2. Move the crane back.

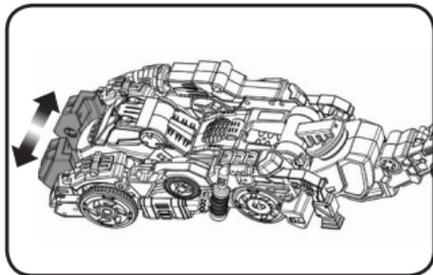


3. Separate the grill on the front of the truck.

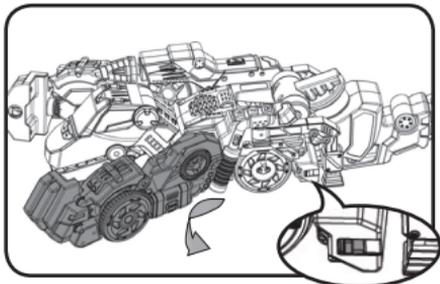



4. Turn Jagger over onto his side and flip his leg back. Make sure it locks into place.

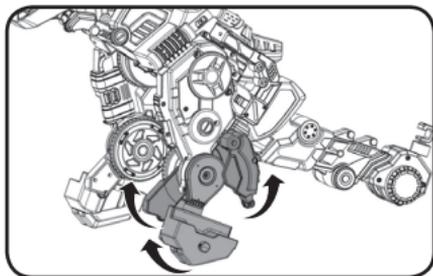

5. With Jagger still resting on his side, turn his foot and his big toe up towards the front and turn his heel up towards the back.

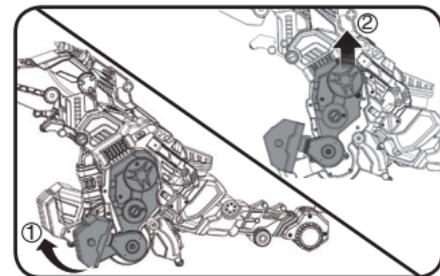

6. Slide the grey cover on the leg forward as far as it will go. Then push the cover up until it locks into place.

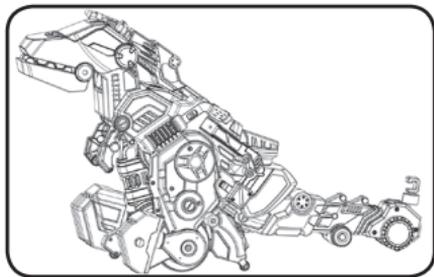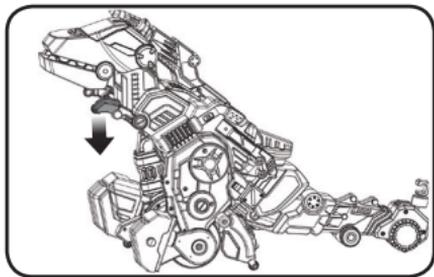

7. Turn Jagger over onto his other side and repeat steps 4, 5, and 6 with the other leg. Stand Jagger up when you're done. Move his arms down.
8. Dino shape.

Note: To change the dino back into a truck, reverse the order of the steps above.

Before you can transform the dino's legs, you have to unlock them. Pull back the release switch behind each leg to unlock it. Then, the leg can move forward.



TIPS TO IMPROVE THE DINO'S WALKING MOTION

 
Jagger's legs will move up and down as he walks along the ground. In order to keep the legs moving smoothly, please make sure that the grey cover on the outside of each leg is in the proper position.

When Jagger turns into a dino, slide the cover forward first. Then slide it up until it locks in place in the top position. (See step 6 in the How to Switch section.)



Top position

When you turn Jagger into a truck, slide the cover down to unlock it. Then slide it back into the bottom position.




Bottom position

For best results, place Jagger on a hard surface.

Jagger may not move properly when the batteries are low. If Jagger's movements become very slow, please replace the batteries.

If the string attached to the crane gets disconnected, follow the steps below to reattach it.

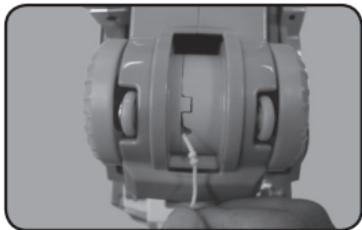

1. Tie a small knot at one end of the string.



2. Feed the knot through the hole on the crane wheel.



3. Pull the string over to the side so the knot cannot slip back out the hole.

INSTRUCTIONS FOR THE DINO POSTER

This product comes with a special dino poster that works with the **VTech® Switch & Go Dinos®** App to give you a 3D prehistoric adventure! To use the poster, please follow the instructions below.

1. Place this poster on a wall or flat vertical surface.
2. Download or update the **VTech® Switch & Go Dinos®** App from the App StoreSM for iPhone® and iPad®.



Available on the
App Store

3. Hold your device up to the poster until you see the dino's appearance change. Tap on the dino and watch it come to life!



More dino posters are available on **VTechDinoDen.com**.
Have a roaring good time!

Apple, the Apple logo, iPhone and iPad are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.

4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

