

vtech[®]

User's Manual

Learn & Discover Driver™



© 2012 VTech
Printed in China
91-002724-000 US

Dear Parent,

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,


Your friends at VTech®

*To learn more about the **Infant Learning**® series and other VTech® toys, visit www.vtechkids.com*

INTRODUCTION

Thank you for purchasing the **VTech® Learn & Discover Driver™** learning toy!

Take a spin down the learning highway with the **VTech® Learn & Discover Driver™**! This role-play toy teaches animals, numbers, colors and more with fun phrases and realistic car sounds. Baby's imagination will soar while spinning the wheel, moving the car and pressing the horn button. Big location buttons and a traffic light round out the learning.

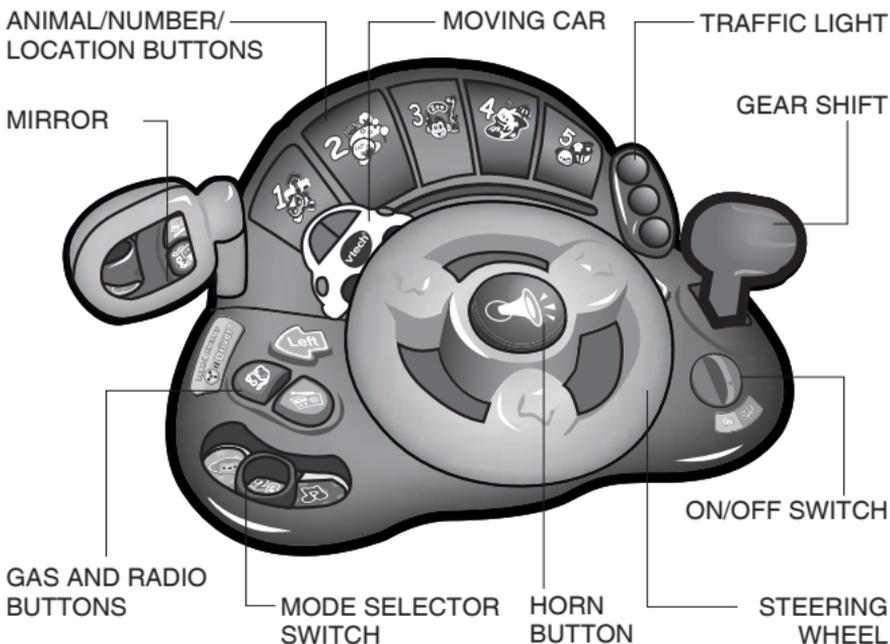

INCLUDED IN THIS PACKAGE


- One VTech® Learn & Discover Driver™
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packing lockers, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep user's manual as it contains important information.

Unlock the packaging locks:

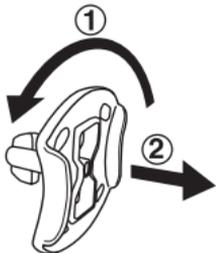


- ① Rotate the packing locks 90 degrees counter-clockwise.
- ② Pull out the packing locks.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)

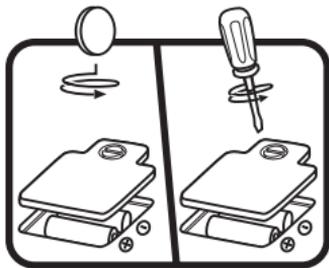

4. Replace the battery cover and tighten the screw to secure.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF SWITCH

To turn the unit **ON**, turn the **ON/OFF SWITCH** to the **ON** position. To turn the unit **OFF**, turn the **ON/OFF SWITCH** to the **OFF** position.





2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Learn & Discover Driver™** will automatically power-down after approximately 90 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Turn the **on/off switch** to turn the unit **on**. You will hear fun sounds, a song and a phrase. The lights will flash with the sounds.
2. Slide the **mode selector** to choose Animal (🐾), Number (123) or Music (🎵) Mode.
3. Press the **animal/number/location buttons** to learn animals in Animal Mode and numbers in Number Mode. In Music Mode, pressing the buttons will play melodies. When melodies are playing, pressing the buttons will add fun sounds over the music. The lights will flash with the sounds.
4. Spin the **steering wheel** or slide the **car** to hear fun sounds, melodies and phrases. In Animal Mode, turning the wheel will teach animals and locations. In Number Mode, turning the wheel will teach numbers. In Music Mode, turning the wheel will activate melodies. Turning the wheel fast will speed up the melodies. The lights will flash with the sounds.

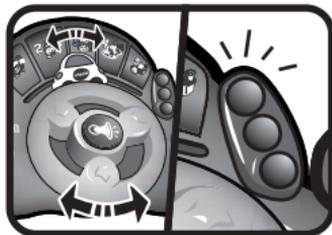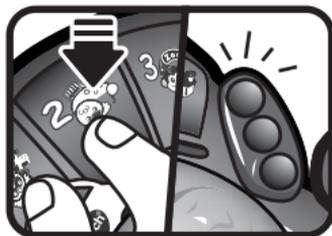

5. Push the **gear shift** up and down to hear fun sounds and phrases. The lights will flash with the sounds.

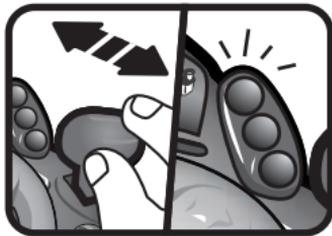

6. Press the **gas button** to hear fun phrases and sounds. Press the **radio button** to hear melodies. Keep pressing to find a melody you like!



7. If there is no input for approximately 10 seconds, you will hear a phrase, a fun sound or a melody. If there continues to be no input after another 10 seconds, you will hear a song. If there is no input for an additional 10 seconds, you will hear a short tune and the unit will power down. The unit can be turned on again by pressing any button or sliding the mode selector.

MELODY LIST

1. Alphabet Song
2. The Entertainer
3. Pop! Goes the Weasel
4. Sailing, Sailing
5. Home Sweet Home
6. This Old Man
7. One, Two, Three, Four, Five
8. Skip to My Lou
9. Bingo

10. Row, Row, Row Your Boat

11. Farmer in the Dell

SUNG SONG LYRICS (To the tune of “Bingo”)

Just come along, we'll take a drive.

There's so much to see!

Stop at school.

To the park.

Beach and more.

Drive along with me!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

FCC Information:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

