

Disney

User's Manual

Manny's Learning Phone



© Disney.
www.disney.com

© 2009 VTech
Printed in China
91-002363-001-000 (美)

vtech®


Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.

Preschool Learning™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning™**, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

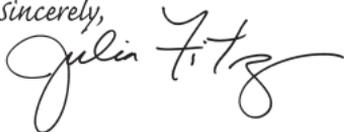


Julia Fitzgerald
Vice President, Marketing
VTech Electronics, NA

To learn more about **Preschool Learning™** and other VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Manny's Learning Phone**.

Manny's Learning Phone is an interactive toy that's full of fix-it right fun! With three great activities, kids will be stimulated and entertained while they learn numbers, letters, colors, and shapes in English and Spanish! The phone also helps improve and challenge your child's memory. With a slide-out keypad, flashing lights, friendly phrases, and music, kids are sure to keep coming back for more with **Manny's Learning Phone**.

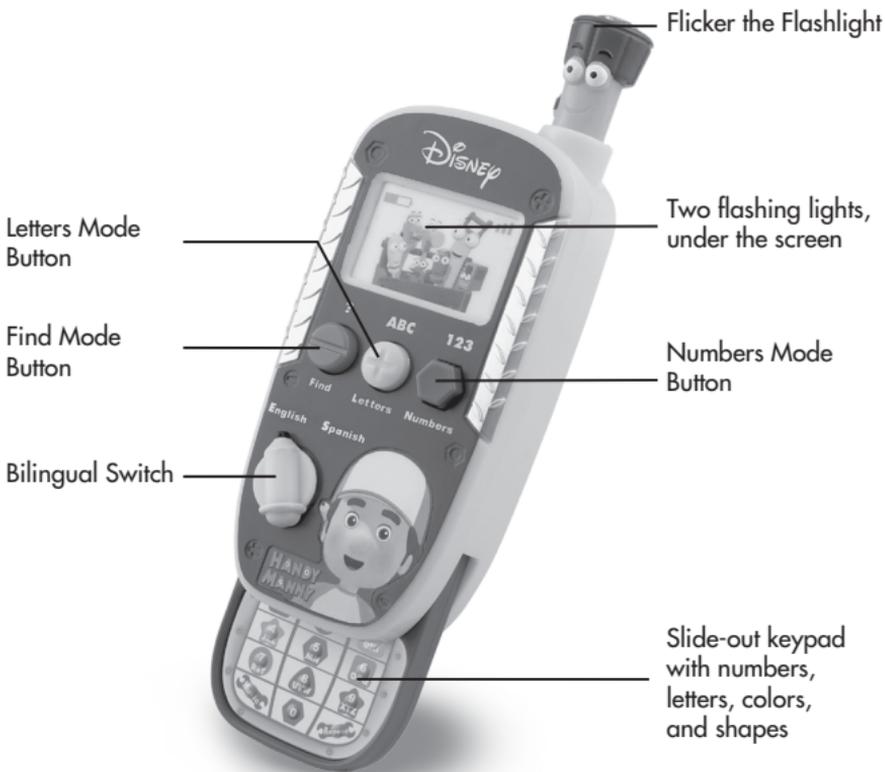

INCLUDED IN THIS PACKAGE

- One VTech® Manny's Learning Phone
- One user's manual


WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep the user manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is OFF.
2. Locate the battery cover on the back of the unit.
3. Open the battery cover.
4. Install three new "AAA" (AM-3/LR6) batteries into the compartment as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover.

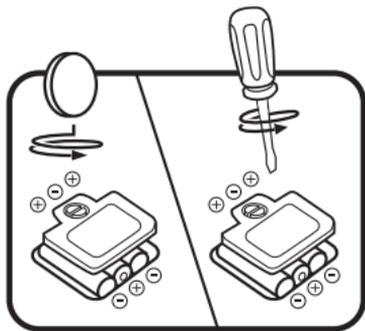

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).

- Remove the batteries from the equipment when the unit will not be used for an extended period of time
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

REMOVE DEMO TAG

The demo tag should come off automatically when the product is taken out of the packaging. If the demo tag is still in place when you begin play, please remove it from the bottom of the unit to activate normal play mode.

PRODUCT FEATURES

1. FLICKER THE FLASHLIGHT

To release the keypad, press **FLICKER**.



2. SLIDE-OUT KEYPAD

Press the keypad to learn numbers, letters, colors or shapes in free play mode; push the keypad back in to turn the phone off.



3. MODE BUTTONS

Press the **MODE** buttons to learn numbers, letters, colors or shapes.



4. BILINGUAL SWITCH

Twist the **BILINGUAL** switch to select English or Spanish modes of play.



5. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Manny's Learning Phone** will automatically turn off after approximately three minutes of inactivity. The unit can be turned on again by pressing any button.

MODES OF PLAY

Activity 1 Find Mode

Press the **FIND** mode button to be asked questions about colors and shapes. Press the buttons on the keypad to find the correct answers.

Activity 2 Letters Mode

Press the **LETTERS** mode button to be asked questions about beginning sounds. Press the buttons on the keypad to find the correct answers.

Activity 3 Numbers Mode

Press the **NUMBERS** mode button to be asked questions about numbers. Press the buttons on the keypad to find the correct answers.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, then please follow these steps:

1. Turn the unit off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back on. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Handy Manny™** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information that forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.