

vtech[®]
Baby

User's Manual

Touch & Discover Animal Home™



© 2006 VTech

Printed in China

91-02184-000 (美)

Dear Parent:

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning** series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

 
Your Friends at VTech®

To learn more about **Infant Learning** and other VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Touch & Discover Animal Home™** learning toy.

The **VTech® Touch & Discover Animal Home™** teaches toddlers about fun concepts around the home. Knock, knock, who's there? Open the door to greet puppy and his animal friends around the home. A variety of manipulative features provide toddlers many opportunities to strengthen their fine motor control. Learn about simple opposites, animal names, colors and much more with this busy board. Flashing lights, fun sounds and melodies add to the appeal.

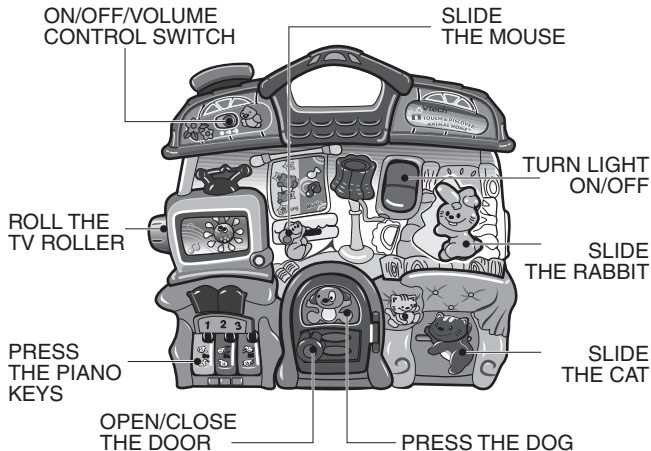

INCLUDED IN THIS PACKAGE

 
- One VTech® Touch & Discover Animal Home™ learning toy
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw to secure.

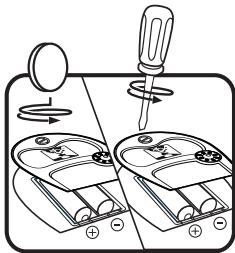

BATTERY NOTICE


 

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.


- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.
- The use of new alkaline batteries is recommended for maximum performance.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

 To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.

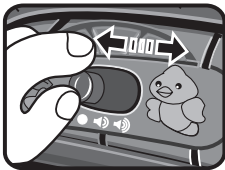

2. MODES OF PLAY

The two modes of play include **LEARNING** and **MUSIC**. Slide the **MODE SELECTOR SWITCH** to choose a mode of play.



3. AUTOMATIC SHUT-OFF

 
 
To preserve battery life, the **VTech® Touch & Discover Animal Home™** will automatically power-down after approximately 30 seconds without input. To turn the unit back on, press any of the manipulative features.

4. If for any reason the door is removed from the door top cabinet, please re-insert it to avoid losing it.





ACTIVITIES



1. To turn the unit on, slide the **on/off/volume control switch** to the on position. Slide the **mode selector switch** to choose a mode of play. You will hear a cute song and cheerful phrase. The lights will flash with the sounds.

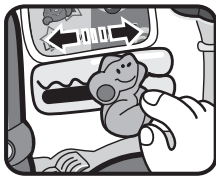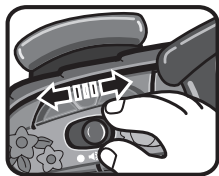

  2. Roll, slide or press the buttons to learn about opposites, animals, colors, sounds and music, depending on the selected mode. The lights will flash with the sounds.

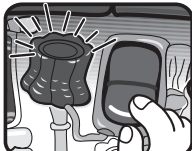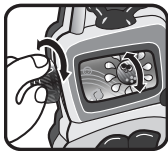

  - When a melody is playing, press or slide one of the three animals to hear the animal sound jam into the melody. The lights will flash with the sounds.

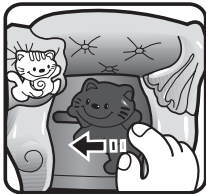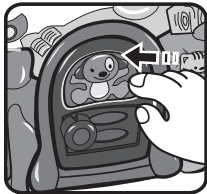

- If there is no input to the unit after approximately 10 seconds, you will hear a fun phrase or sound. After another 10 seconds without input, you will hear a short tune. If there continues to be no input, the unit will automatically power down.

MELODY LIST

- Are You Sleeping?
- Au Clair de la Lune
- Where Has My Little Dog Gone?
- BINGO
- Home Sweet Home
- Pat-a-cake
- Three Little Kittens
- Pop! Goes the Weasel
- Twinkle, Twinkle, Little Star
- Home on the Range
- Oh, Susanna!
- I've Been Working on the Railroad

SUNG SONG LYRICS (to the tune of BINGO)

There are four pets who live at home,

And they would like to meet you.

Arf - arf - arf - arf -arf!

Meow - meow - meow - meow - meow!

Boing - boing - squeak - squeak - squeak!

And they are pleased to greet you.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna
- Relocate this product with respect to the server

- Move this product away from the receiver

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.