

**vtech**<sup>®</sup>

User's Manual

# Baby's Learning Laptop<sup>™</sup>



© 2012 VTech  
Printed in China  
91-002725-000 US/CA

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**<sup>®</sup> created the **Infant Learning**<sup>®</sup> series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**<sup>®</sup>'s **Infant Learning**<sup>®</sup> toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**<sup>®</sup>, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**<sup>®</sup> with the important job of helping your child learn and grow!

Sincerely,

Your friends at **VTech**<sup>®</sup>

To learn more about the **Infant Learning**<sup>®</sup> series and other **VTech**<sup>®</sup> toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Baby's Learning Laptop™** learning toy!

The **VTech® Baby's Learning Laptop™** brings discovery to home computing! The colorful keyboard interacts with the bright light-up screen to teach shapes, common objects and feelings. Entertaining sound effects, melodies and a movable mouse round out the fun!



# INCLUDED IN THIS PACKAGE

- One VTech® Baby's Learning Laptop™ learning toy.
- One user's manual.

## WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


## ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

## NOTE:

Please keep this instruction manual as it contains important information.

Unlock the packing locks:

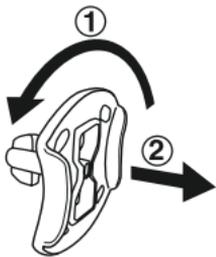


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

# INSTRUCTIONS

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

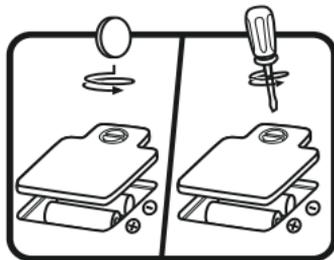


## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# PRODUCT FEATURES


## 1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the Learning, Discovery or Music Mode position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** position.

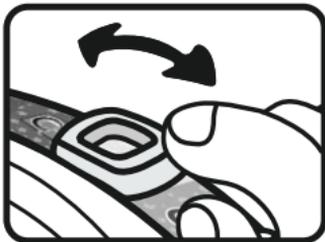

## 2. VOLUME CONTROL SWITCH

To adjust the volume, slide the **VOLUME CONTROL SWITCH** located on the bottom of the unit to (  ) for **LOW VOLUME** or (  ) for **HIGH VOLUME**.



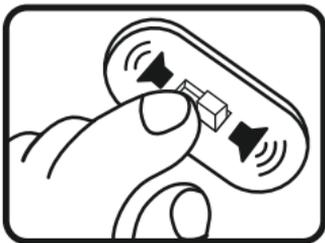


## 3. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Baby's Learning Laptop™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any shape button or moving the mouse.

# ACTIVITIES


1. Slide the **on/off/mode selector switch** to the **Learning Mode** position. You will hear a sound effect and a sung song followed by a phrase. Press any shape button to hear it identified along with a short tune. If you press the shape button again, you will hear an object identified along with a related sound. The lights on the screen will flash with the sound.
  
2. Slide the **on/off/mode selector switch** to the **Discovery Mode** position. You will hear a sound effect and a sung song followed by a phrase. Press the shape buttons to hear friendly phrases, fun sound effects and a song. The lights on the screen will flash with the sound.

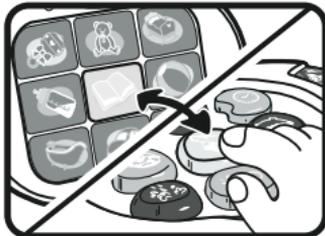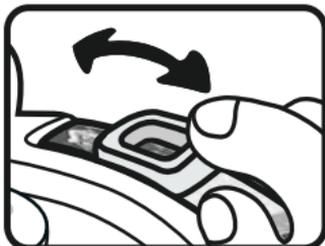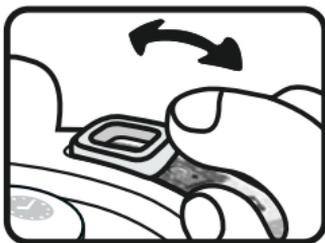

3. Slide the **on/off/mode selector switch** to the **Music Mode** position. You will hear an opening sound effect and a sung song followed by a phrase. A variety of cheerful melodies will play when the shape buttons are pressed. Diverse light patterns will dance with the music. If the mouse is moved during this time, sounds will jam into the melodies.

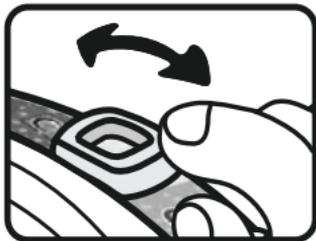

4. When the laptop is open or closed, the mouse can move in eight directions and the light patterns on the screen will follow.

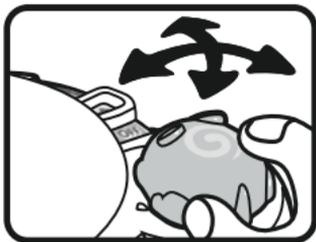

5. If there is no input to the unit after approximately 10 seconds, you will hear a phrase depending on the mode. After another 10 seconds, if there is still no input, you will hear a sung song. If there is still no input to the unit, you will hear the phrase 'Good-bye!' then the unit will automatically power-down.

## MELODY LIST

1. Twinkle, Twinkle, Little Star
2. Mulberry Bush
3. Brahms' Lullaby
4. Pease Porridge Hot
5. Bingo
6. Pop! Goes the Weasel
7. Row, Row, Row Your Boat
8. Skip to My Lou
9. This Old Man
10. Home Sweet Home

## SUNG SONG LYRICS: (Tune of “Yankee Doodle”)

My first laptop is so fun.

It's made just for me.

Learning all about my home.

Come along and see.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech**® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

## **IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## FCC Information:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

