



**LITTLE SMART**

**Muttzart's**

*Symphony Sounds™*

**USER'S MANUAL**



© VTECH  
Printed in China  
91-01372-000 (美)


*Dear Parent:*

*At VTECH® we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. Whether it's introducing numbers and letters, identifying colors and shapes, or stimulating senses with lights and music, all VTECH® infant and toddler learning products encourage your child's natural growth and discovery skills. When it comes to providing electronic learning products that enlighten, entertain and develop minds, at VTECH® we see the potential in every child.*

# INTRODUCTION

Thank you for purchasing the **VTECH® LITTLE SMART Muttzart's Symphony Sounds™** learning toy! This product is one of a family of high-quality **LITTLE SMART®** electronic learning products. We at **VTECH®** are committed to providing the best possible products to entertain and educate your child. Should you have any questions or concerns, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada.

The **LITTLE SMART Muttzart's Symphony Sounds™** learning toy is a soft and cuddly plush toy designed for infants birth and up. This adorable puppy has three interactive sensors that trigger lights, classical music and sound effects. With **LITTLE SMART Muttzart's Symphony Sounds™** you're never too young to learn the classics!

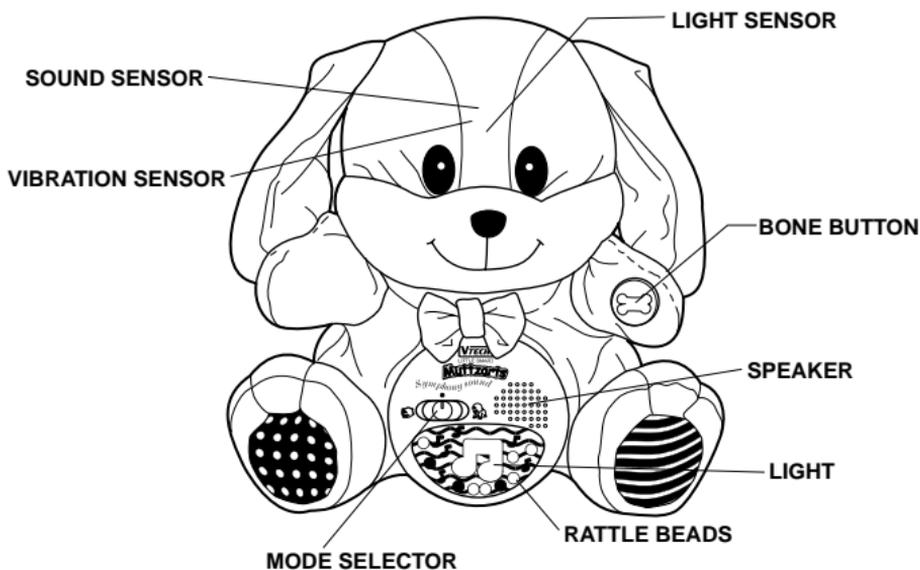


# INCLUDED IN THIS PACKAGE

- One VTECH® LITTLE SMART Mutzart's Symphony Sounds™ learning toy.
- One instruction manual.

**WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.**

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover inside the back of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new "AA" (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

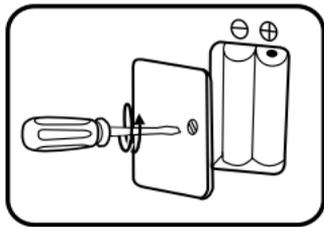

## **BATTERY NOTICE**

- Install batteries correctly observing the polarity ( +, - ) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not use batteries of different types.
- Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.

## **WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.**


**NOTE:** If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.


If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, and a service representative will be happy to help you.

# CRIB ATTACHMENT

1. Detach the collar from under the puppy's chin.

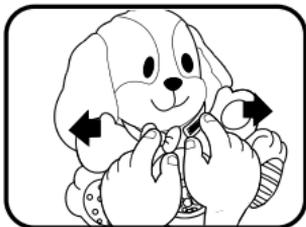


2. Reverse the collar and attach it to the crib bar.

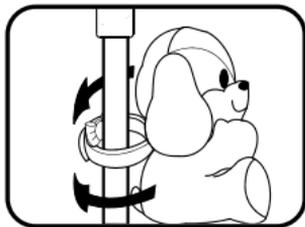


# TO BEGIN PLAY


1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **PLAYTIME MODE** (  ) or the **QUIET TIME MODE** (  ) position. You will hear a short tune and see the light flash.

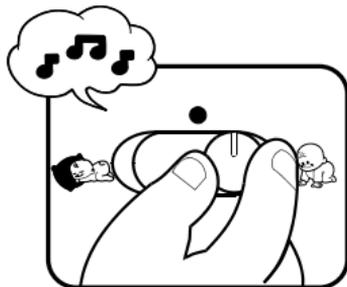

2. To adjust the volume, slide the **VOLUME CONTROL SWITCH** located in the back of the unit near the battery compartment to (  ) for **LOW VOLUME** and (  ) for **HIGH VOLUME**.

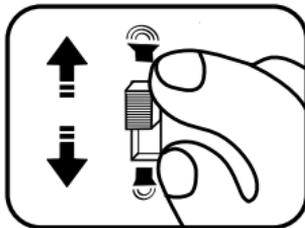

3. To turn the unit **OFF**, slide the **ON/OFF/ MODE SELECTOR SWITCH** to the **OFF** ( ● ) position.

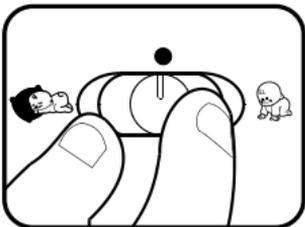


**Note:** To preserve battery life, the **LITTLE SMART Muttzart's Symphony Sounds™** learning toy will automatically power down after a few minutes without input. The unit can be turned on again by pressing the bone button.

## ACTIVITIES

### A. Playtime Mode

1. Slide the **ON/OFF/ MODE SELECTOR SWITCH** to the **PLAYTIME MODE** (  ) position. You will hear "Hi baby!" followed by a short tune and see the light flash.

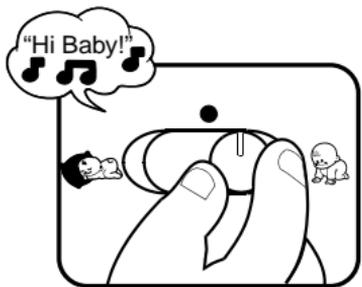

2. Press the **BONE BUTTON** once to hear “Hi baby!” followed by a giggle sound effect. Press a second time to hear a random, upbeat classical music tune. The light will flash with the voice and music.




3. Press the **BONE BUTTON** while a melody is playing to change the melody. The light will flash with the music.



4. Cover Muttzart's forehead for 2-3 seconds to hear “Peek-a-boo”, a giggle sound effect or a yawn sound effect. The light will flash with the voice and sound effects.



5. Cover Muttzart's forehead while a melody is playing to hear the voice or sound effect play on top of the melody. The light will flash with music under normal lighting.

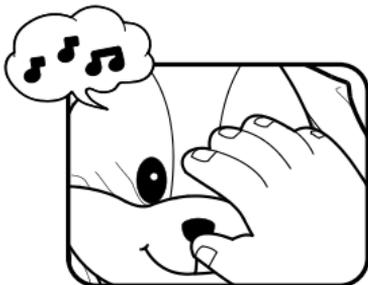


6. Gently move Muttzart to hear a cute barking sound effect. The amount of barking is based on the amount of movement.



7. Gently move Muttzart while a melody is playing to hear the barking play on top of the melody. The light will flash with music.




8. Muttzart is equipped with an unique sound detection feature. This feature will activate a random phrase, sound effect or melody after 1-2 seconds of sound.

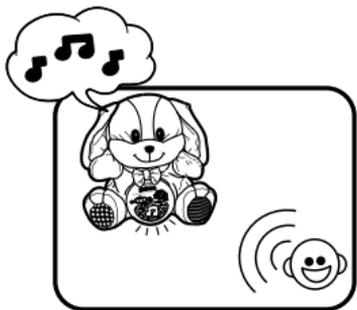

## B. Quiet Time Mode

1. Slide the **ON/OFF/MODE SELECTOR SWITCH** to the **QUIET TIME MODE** (  ) position. You will hear a short tune and see the light flash.

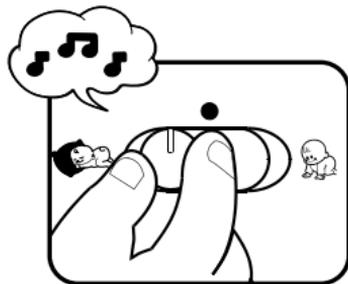

2. Press the **BONE BUTTON** to hear four soft classical melodies played at a lower volume. The light will remain on while the music plays. Press the **BONE BUTTON** again to hear another melody.




3. Cover Muttzart's forehead for 2-3 seconds to hear "Good night" or a yawn sound effect. The light will remain on with the sound.



4. Cover Muttzart's forehead under normal lighting while a melody is playing to hear the voice or sound effect play on top of the melody. The light will remain on while the music plays.



5. Muttzart is equipped with a unique sound detection feature. This feature will activate four soothing melodies after 3-4 seconds of sound.

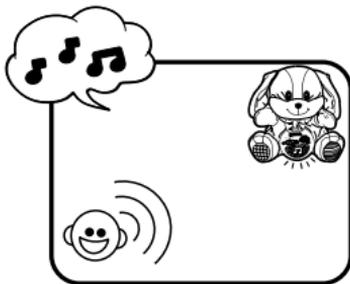

### **PLAY TIME MELODIES:**

1. William Tell Overture
2. Ode To Joy
3. Trumpet Voluntary
4. Blue Danube Waltz

### **QUIET TIME MELODIES:**

1. Für Elise
2. New World Symphony
3. Canon in D
4. Scene (from Swan Lake)

## **CARE AND MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## **IMPORTANT NOTE**

Creating and developing the infant/toddler products is accompanied by a responsibility that we at **VTECH**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **Note:**

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient the receiving antenna
- relocate this product with respect to the receiver
- move this product away from the receiver