



Instruction Manual

A-Meow-Zing Phone



DREAMWORKS

DreamWorks Gabbys Dollhouse
© DreamWorks Animation LLC.
All rights reserved.

INTRODUCTION

Thank you for purchasing the **VTech® Gabby's Dollhouse A-Meow-Zing Phone**.

Give Gabby and her friends a call with a phone that's just like the one Gabby uses in the show. This cat-shaped phone makes it feel like you're really talking to **Gabby**—she'll even respond! Play meow-mazing games focused on music, logic, maths and more with **Gabby, Pandy Paws, Cakey Cat** and **DJ 'Daniel James' Catnip**.



INCLUDED IN THIS PACKAGE

- One VTech® Gabby's Dollhouse **A-Meow-Zing Phone**
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

 
ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks:

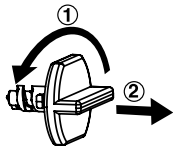

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

INSTRUCTIONS



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



 
ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

Note: This toy phone has reduced volume to adhere to safety regulations for close-to-the-ear toys.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.

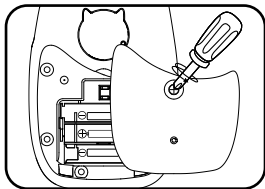

3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. ON/OFF BUTTON



To turn the unit on, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit off.

2. MEOW MAIL BUTTON



Press the **Meow Mail Button** to hear messages from Gabby about her friends and see them on the screen. The light will flash with the sounds.

3. GAME BUTTONS

Press the **Game Buttons** to play one of the four games.



4. NUMBER BUTTONS

Press the **Number Buttons** to learn numbers or to answer number-related questions.



5. CHAT WITH FRIENDS BUTTON



Press the **Chat With Friends Button** to chat with Gabby and Pandi Paws and hear them respond.

6. OK BUTTON



Press the **OK Button** to confirm your choice.

7. LEFT/RIGHT BUTTONS



Press the **Left/Right Buttons** to make a selection in games or menus.

8. PHONE CALL BUTTON



 
Press the **Phone Call Button** to pretend to make a call and leave a message.

9. CANCEL CALL BUTTON

Press the **Cancel Call Button** at any time to end the call.

10. MICROPHONE

The **Microphone** is used for the voice activation feature. Be sure to keep the Microphone about 10cm from your mouth for best results.

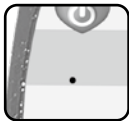


11. LIGHT UP EAR

The **Light Up Ear** will flash with the sounds during the games and features.



12. AUTOMATIC SHUT-OFF

To preserve battery life, the **A-Meow-Zing Phone** will automatically turn off after several minutes of inactivity. The unit can be turned on again by pressing the **On/Off Button**. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries .

NOTE:

If the unit powers down while playing, we suggest changing the batteries.

NOTE:

This toy phone has reduced volume to adhere to safety regulations for close-to-the-ear toys.

GAMES & FEATURES:

The **VTech® Gabby's Dollhouse A-Meow-Zing Phone** has 6 games and features to play.

1. DJ's Music

It's music time! Blow into the **Microphone** to pass the mic to DJ 'Daniel James' Catnip. Press the **Number Buttons** to hear music. Press the **Left/Right Buttons** or **OK Button** to add fun sounds to the music.



2. Cake Pattern Fun

Help Cakey Cat decorate the cake by finding the correct shape to complete the pattern. Press the **Left/Right Buttons** to choose then press the **OK Button** to confirm. Celebrate completing all three levels by blowing into the **Microphone** to blow out the candle.



3. Hopscotch Memory

Pandy Paws is playing hopscotch! Remember the order and press the **Number Buttons** to repeat it.



4. Magic Potion Counting

Help MerCat find the correct number of shapes to make the magic potion. Press the **Left/Right Buttons** to choose then press the **OK Button** to confirm. Celebrate completing all three levels by blowing into the **Microphone** for a magical surprise.



5. Meow Mail

Press the **Meow Mail Button** to hear messages from Gabby about her friends and see them on the screen.



6. Chat with Friends

Press the **Chat With Friends Button** to chat with Gabby and Pandy Paws. Speak into the **Microphone** and hear them respond.



7. Settings

Press this button to turn the background music on or off, adjust the screen contrast or choose a ringtone out of the three options.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name:	VTech®
Model:	5619
Product Name:	A-Meow-Zing Phone
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
CAN ICES-003(B)/NMB-003(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



TM & © 2023 VTech Holdings Limited.
All rights reserved.
IM-561903-001
Version: 0