

vtech®

Parent's Guide

SWITCH & GO™



VELOCIRAPTOR HELICOPTER



91-009642-017 (US) (CA)

INTRODUCTION

Thank you for purchasing the **Switch & Go™ Velociraptor Helicopter**. Engage your imagination with the helicopter that transforms into a fierce velociraptor. Use the action button and sound effects to bring the Velociraptor Helicopter to life in your very own dinosaur universe.

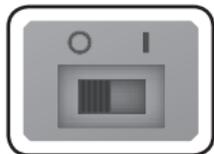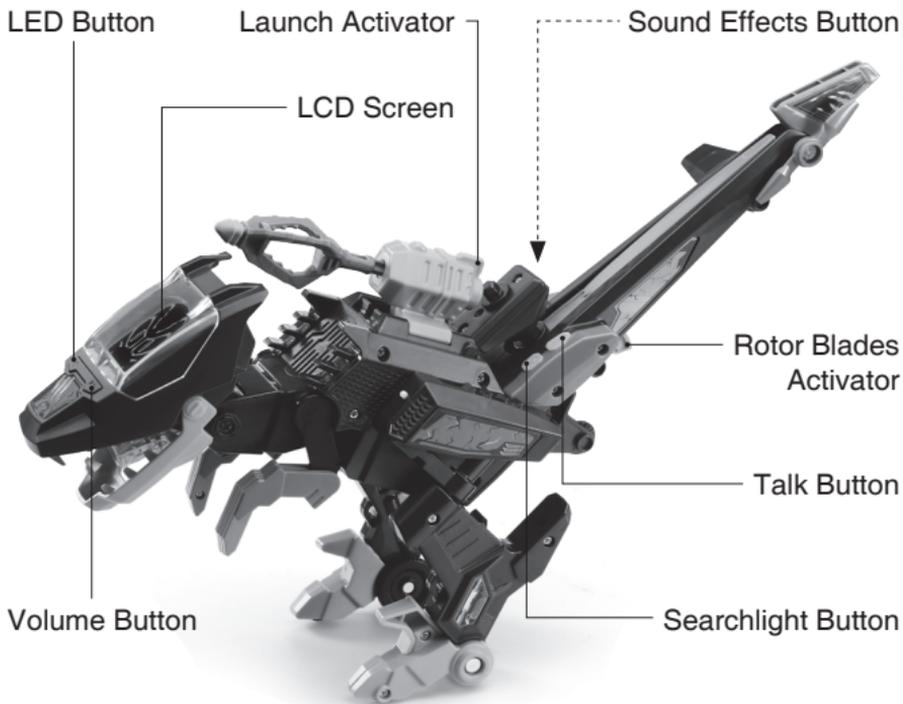

On/Off Switch

INCLUDED IN THIS PACKAGE

- Switch & Go™ Velociraptor Helicopter
- Parent's guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this parent's guide as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.


NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit and use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

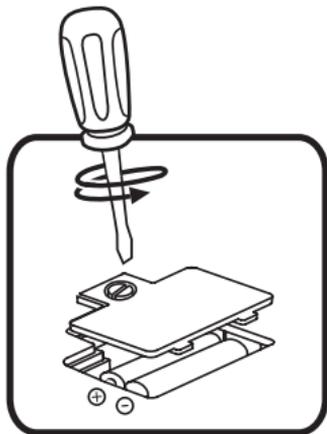

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

MISE EN GARDE

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Utiliser des piles alcalines neuves pour des performances maximales.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et - .
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -) .
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de nonutilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

PRODUCT FEATURES


1. On/Off Switch

Slide the **On/Off Switch** to the **On** position **I** to turn the unit **On**. Slide the **On/Off Switch** to the **Off** position **O** or hold the **Talk Button** **!** for a few seconds to turn the unit **Off**.




2. LED Button

Press the **LED Button** to make the LED light flash.

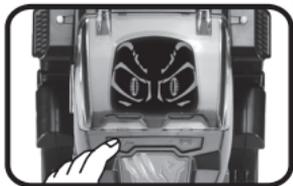

3. Volume Button

Press the **Volume Button** to adjust the volume.

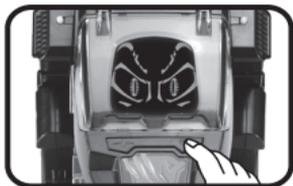


4. Talk Button

Press the **Talk Button** to hear the dino or pilot talk.



5. Sound Effects Button

Press the **Sound Effects Button** to hear cool sound effects.

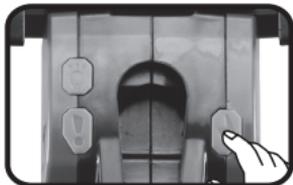


6. Searchlight Button

Press the **Searchlight Button** to turn on the searchlight.



7. Launch Activator

Press the **Launch Activator** to launch the rocket.

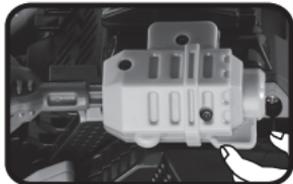

8. Propeller Activator

Press the **Propeller Activator** to spin the propeller.



9. Motion Sensor

Move the helicopter through the air to activate the **Motion Sensor** and hear fun flying sounds!

10. TURNING THE UNIT OFF/ AUTOMATIC SHUT-OFF

To preserve battery life, the **Velociraptor Helicopter** will automatically shut off after several seconds without input. The unit can be turned on again by pressing the **Talk Button** or **Sound Effects Button**.

NOTE


If the unit powers down or if the light fades out during play, please install a new set of batteries.

NOTE


The dot on the body of the Dino detects if the unit is in Dino mode or Vehicle mode. Do not press this dot as this may damage the button and cause incorrect responses to be triggered.




TRANSFORMATION

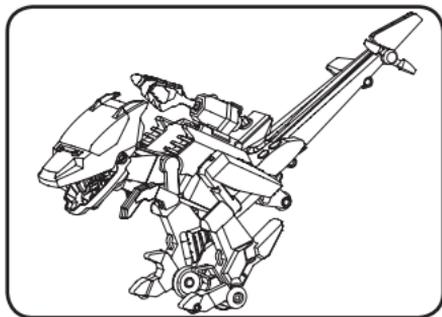


1. Begin in Dino mode.

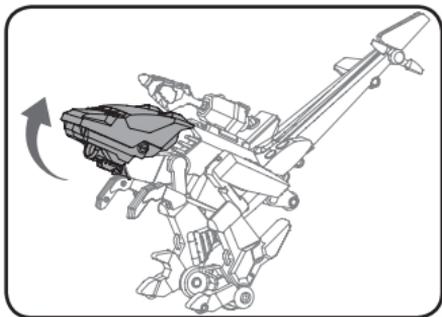


2. Flip the head up.

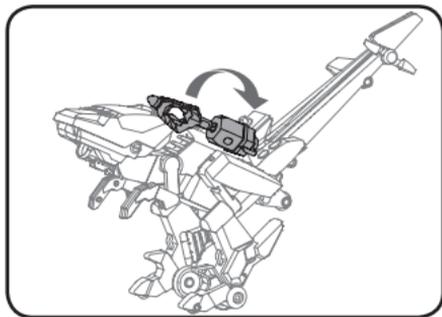


3. Flip the launcher to the side.

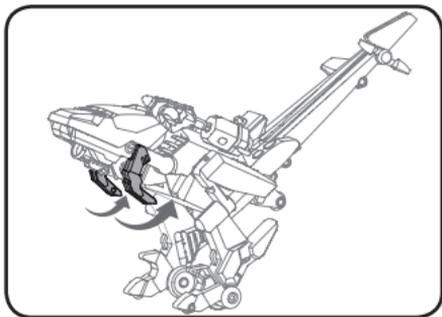


4. Tuck in the arms.

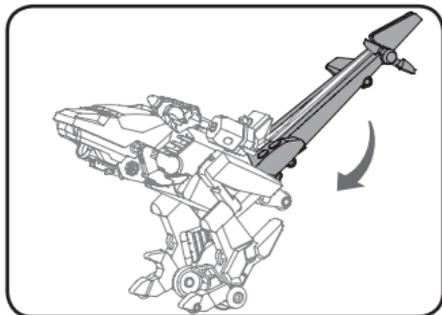


5. Swing the tail down.

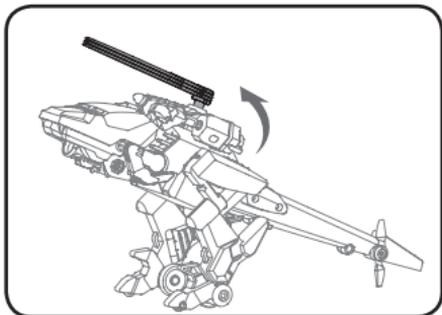


6. Flip the rotor blades to the front of the helicopter.

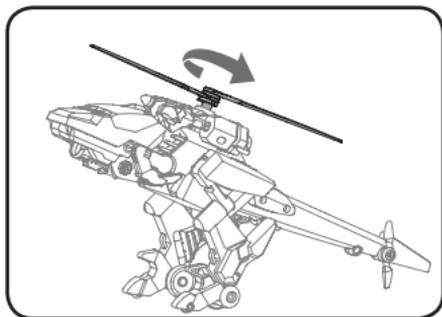


7. Fan out the rotor blades.

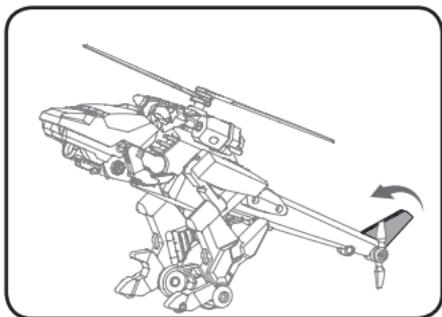


8. Flip the rear wing at the end of the tail forward.

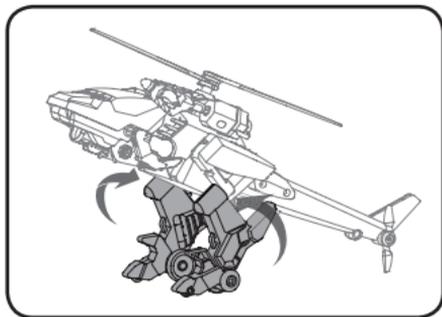


9. Swivel the legs up.

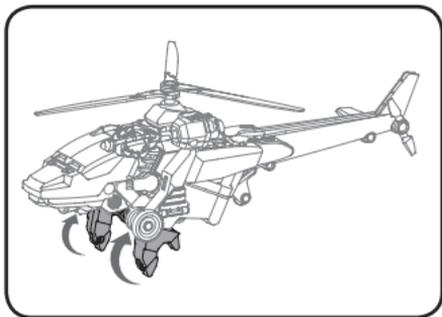

10. Rotate the feet up.

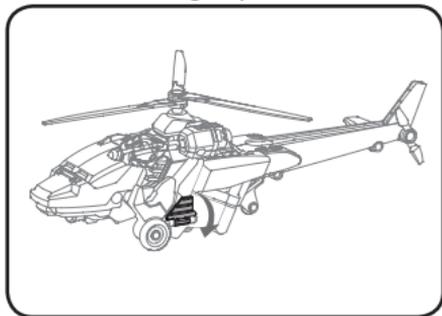

11. Snap the wings down.

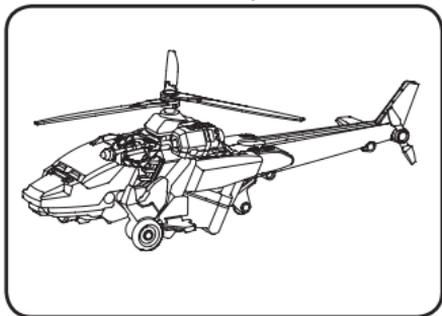

12. You are now in Vehicle mode.

Note

To switch the vehicle back into a dino, follow the above steps in reverse order.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 1414
Product Name: Switch & Go™ Velociraptor Helicopter
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**CLASS 1
LED PRODUCT**

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty



TM & © 2013 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-009642-017  