

vtech[®]

Parent's Guide

Spin & Go Helicopter[™]



INTRODUCTION

Thank you for purchasing the **Spin & Go Helicopter™**.

Press the propeller to propel the interactive helicopter across the floor. Two colorful buttons introduce beginning letters, numbers, colors and animals and play sing-along songs. Push the helicopter and twist the friendly cat pilot to strengthen motor skills, and take off on a fun-filled adventure!



INCLUDED IN THIS PACKAGE

- One Spin & Go Helicopter™
- One parent's guide


WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide, as it contains important information.

ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Unlock the packaging locks:

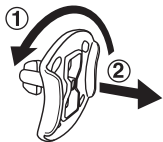


- ① Rotate the packaging lock counterclockwise 90 degrees.
- ② Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.

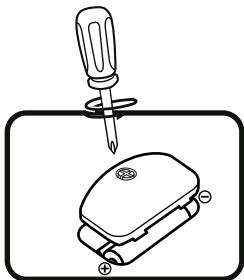




3. Install one new AA (LR6/AM-3) battery following the diagram inside the battery box. (The use of a new, alkaline battery is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. On/Off/Volume Control Switch

To turn the unit **ON**, slide the **On/Off/Volume Control Switch** to the **Low Volume** () or the **High Volume** () position. You will hear a phrase and a song. To turn the unit **OFF**, slide the **On/Off/Volume Control Switch** to the **OFF** () position.



2. Automatic Shut Off

To preserve battery life, the **Spin & Go Helicopter™** will automatically power down after approximately 45 seconds without input. The unit can be turned on again by pressing any button.

NOTE: If the unit repeatedly powers down while playing, we recommend changing the battery.

ACTIVITIES

1. Spinning Propeller

Press the **Spinning Propeller** to see the helicopter move forward. You will hear a variety of playful phrases, helicopter sounds and music.



2. Number Button

Press the **Number Button** to learn about numbers from one to three, hear the button color and animal introduced, and hear songs and short tunes.



3. Letter Button

Press the **Letter Button** to learn about beginning letters, hear the button color and animal introduced, and hear fun phrases, songs and short tunes.



4. Wheel Sensor

Push the helicopter to hear a variety of playful phrases, helicopter sounds and music. When a melody or song is playing, push the helicopter to hear sounds play over the music.



SONG LYRICS

Song 1

Soaring above the mountain tops,
Flying through the sky,
The sun is shining, there's lots to see,
When flying way up high.

Song 2

Taking off up into the air,
We can fly anywhere,
Look out the window, what do you see?
Adventure for you and me!

Song 3

Let's go! Let's fly!
My propellers are turning.
Let's soar! Sky high!
My propellers are spinning.

MELODY LIST

1. MacNamara's Band
2. Bicycle Built for Two
3. Bear Went Over the Mountain
4. Old Grey Mare
5. Flying Trapeze
6. Muffin Man
7. This Old Man
8. Polly Put the Kettle On
9. There Is a Tavern in the Town
10. Arkansas Traveller

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the battery when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the battery.
3. Let the unit stand for a few minutes, then replace the battery.
4. Turn the unit back **ON**. The unit will now be ready to play again.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

Trade Name: VTech®
Model: 5139
Product Name: Spin & Go Helicopter™
Responsible Party: VTech Electronics North America, LLC
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty

