


vtech[®]

User's Manual

Sit-to-Stand Ultimate Alphabet Train™

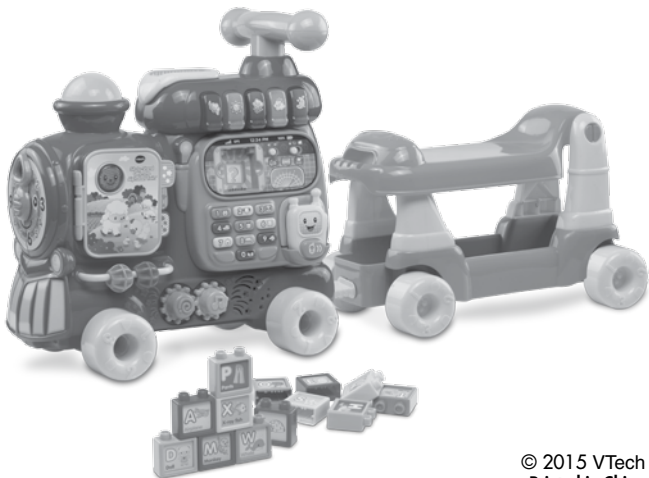

© 2015 VTech
Printed in China
91-003052-005 US

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,


Your friends at VTech®

To learn more about VTech® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Sit-to-Stand Ultimate Alphabet Train™** learning toy!

The **VTech® Sit-to-Stand Ultimate Alphabet Train™** will take your child on a journey through letters, numbers, music and more! Entertaining sound effects, dancing lights and fun melodies reward your child's curiosity while taking baby on the ride of a lifetime!

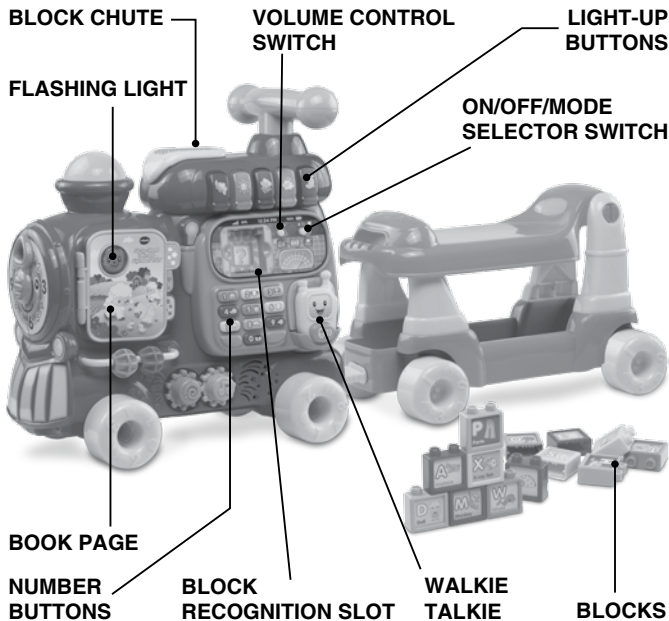


INCLUDED IN THIS PACKAGE

- One user's manual




One engine

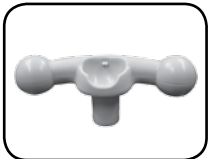

One engine handle



One walkie talkie and
walkie talkie holder

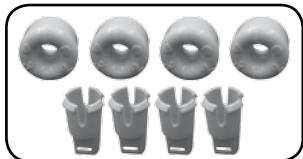

Four engine wheels and
four axel covers




One carriage
front support




One soft hinge



One carriage bottom

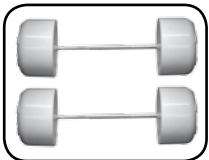


Four carriage wheels
with axel trees

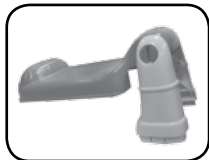

One carriage seat
with back support



13 double sided
letter blocks

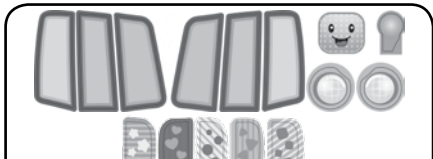


Two sheets of labels

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep user's manual as it contains important information.


Please adhere the labels to the engine securely as indicted below:

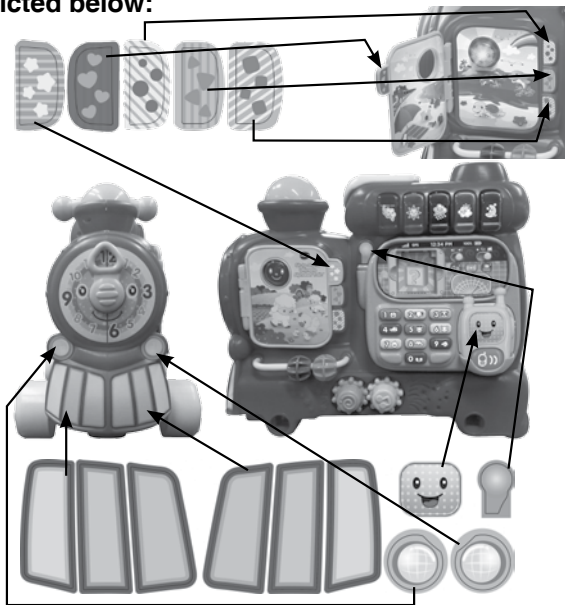

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover below the walkie talkie on the side of the engine. Use a screwdriver to loosen the screw.
3. Install 3 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum Performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

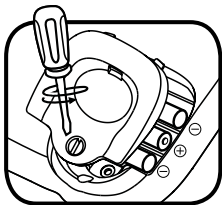


BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

ASSEMBLY INSTRUCTIONS

With the VTech® Sit-to-Stand Ultimate Alphabet Train™ safety comes first. To ensure your child's safety, adult assembly is required.


1. To assemble the engine wheels, insert the axels into the sockets on the body of the engine until you hear them click into place. Insert the wheels into the axels until you hear them click into place. Once you have installed the wheels, they cannot be removed.

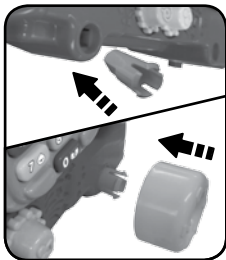


2. Insert the walkie talkie holder into the the slot below the battery cover until you hear it click into place. Once you have installed the walkie talkie holder, it cannot be removed.




3. Position the handle so that the curved part of the handle faces the back of the engine. Insert the handle into the hole on the top of the engine. Push down on the handle until you hear it click into place. Once you have installed the handle, it cannot be removed.

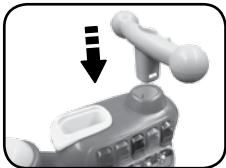


4. Insert the carriage front support piece into the front of the carriage until you hear it click into place. Next, insert the back support with the seat into the back of the carriage until you hear it click into place. Once you have assembled the carriage, it cannot be taken apart.

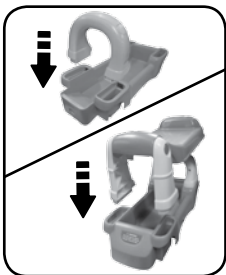


5. Position the soft hinge so that the large hole is facing up. Insert the hinge into the hole at the front of the carriage until you hear it click into place. Once you have attached the hinge to the carriage, it cannot be removed.

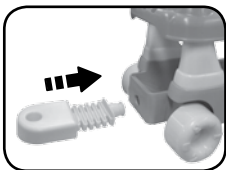


6. Insert the carriage wheels with axels into the bottom of the carriage until you hear them click into place. Once you have installed the carriage wheels, they cannot be removed.

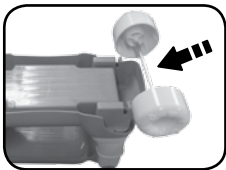

7. To attach the carriage to the engine, insert the soft hinge into the slot on the back of the engine. You will hear the soft hinge click into position, which lets you know the carriage is attached correctly.

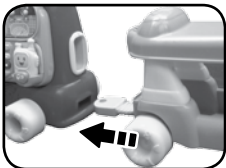

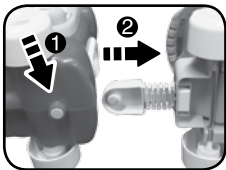


8. To detach the carriage from the engine, press and hold the blue button under the bottom of the engine, pull the hinge out of the slot.




 
PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **LEARNING MODE** () or the **TRAVEL MODE** () position. To turn the unit off, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** () position.



2. VOLUME CONTROL SWITCH

Slide the **VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position.



3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Sit-to-Stand Ultimate Alphabet Train™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button, opening the book, inserting a block into the slot or inserting the walkie talkie.

ACTIVITIES

1. Slide the **on/off/mode selector switch** to choose a mode of play. You will hear a song, a playful sound and a phrase in both modes. The lights will flash with the sounds.




2. Place the blocks into the **block recognition slot** to learn letters and objects in both modes. The lights will flash with the sounds.



3. Press the **number buttons** to learn numbers in the learning mode and learn animals in the travel mode. Insert the walkie talkie into the slot to hear fun phrases to encourage imaginative play. The lights will flash with the sounds.



4. Drop the blocks into the **block chute** to hear the blocks counted in the learning mode and hear playful sounds in the travel mode. The lights will flash with the sounds.

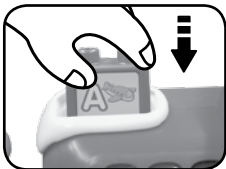

Note: The block chute will not work in direct sunlight.


5. Open and close the **book** to hear fun phrases and sounds in the learning mode and melodies in the travel mode. The lights will flash with the sounds.




6. Press the **sun button** to hear songs and music in the learning mode and short tunes and animal sounds in the travel mode. The lights will flash with the sounds.



7. Press the **light-up buttons** to learn about colors in the learning mode and weather in the travel mode. The lights will flash with the sounds.

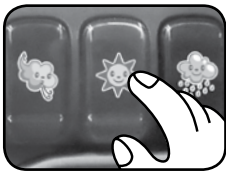

8. Push the train to activate the motion sensor. You will hear fun train sounds and melodies. The light will flash with the sounds.

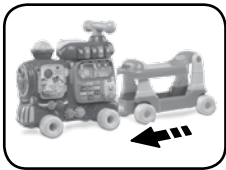

MELODY LIST

1. A, B, C Tumble Down D
2. I've Been Working on the Railroad
3. Alphabet Song
4. Good Morning Merry Sunshine
5. Mulberry Bush
6. Oh Susanna
7. Farmer in the Dell
8. Sailing Sailing
9. Froggy Went a Courtin'
10. Air for the G String

SUNG SONG LYRICS

SONG 1

Welcome aboard!

I'm happy you are here!

Load your blocks and we'll have fun,
Chugging through the big wide world!

SONG 2

Chug, chug, chugging,
Rain or shine.

I hope you enjoy your ride.
Toot! Toot!

SONG 3

Yeehaw, we're at the farm,
There's so much that we can see!

SONG 4

We're at the beach, just you and me,
There's so much that we can see!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WARNING:

Adult assembly required.

ATTENTION !

Ce jouet doit être assemblé
par un adulte.



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "Vtech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by Vtech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any Vtech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the Vtech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If Vtech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase data and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, Vtech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of Vtech.