

**User's Manual** 

# Sleepy Lullabies Bear Projector™



© 2016 VTech Printed in China 91-003141-000-006

#### Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech®** created the **Infant Learning®** series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech®'s Infant Learning®** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**<sup>®</sup>, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**<sup>®</sup> with the important job of helping your child learn and grow!

sincerely,


Your friends at **VTech**®

To learn more about **VTech**® toys, visit vtechkids.com

### INTRODUCTION

Thank you for purchasing the VTech<sup>®</sup> Sleepy Lullabies Bear Projector™ learning toy!

Soothe baby into a peaceful sleep with the **Sleepy Lullabies Bear Projector**<sup>™</sup>. Baby will relax with a soothing image that projects onto the ceiling while soft melodies, nature sounds and white noise play. The chunky button on the bear's tummy rotates the melodies and sounds.

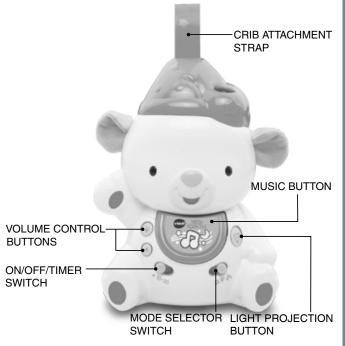

### **INCLUDED IN THIS PACKAGE**

- One VTech<sup>®</sup> Sleepy Lullabies Bear Projector™
- One attachment strap
- One user's manual
- WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.
- ATTENTION: Pour la sécurité de votre enfant, débarrassezvous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.
- NOTE: Please keep this user's manual as it contains important information.

Unlock the packaging locks:



- Rotate the packaging locks 90 degrees counter-clockwise.
- 2 Pull out the packaging locks.

### **GETTING STARTED**

### **BATTERY INSTALLATION**

- 1. Make sure the unit is turned OFF.
- 2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.



- Install 3 new 'AA' (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
- 4. Replace the battery cover and tighten the screw to secure the battery cover.

#### **BATTERY NOTICE**

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# With the VTech<sup>®</sup> Sleepy Lullabies Bear Projector<sup>™</sup>, safety comes first.

To ensure your child's safety, the assembly of this product is an adult activity, not a child's activity. Please ensure that the crib attachment strap is securely locked into position to avoid injury. Follow the instructions below carefully and make sure the final assembly is correct. Attach only to cribs with sturdy rails and spindles. Do not attach to playpens with mesh walls. Please make sure the crib attachment strap is out of reach from children when placed in the crib. Please ensure the crib light is positioned in the upright position with the projection light facing directly upwards. Please remove the crib attachment strap from the unit if it is going to be used outside the crib.

### **ASSEMBLY INSTRUCTIONS**

- Place the unit in the crib bringing the strap over the top rail. Slip the top of the strap under the slot on the back of the strap and secure. You can adjust the hanging height by choosing the appropriate hole on the top of the strap.
- 2. Pull slightly on the unit to make sure the strap has been securely fastened. The unit should be snug against the crib rail. Please check the unit frequently to ensure it is still secure.

# **PRODUCT FEATURES**

### 1. ON/OFF/TIMER SWITCH

To turn the unit **ON**, slide the **ON/ OFF/TIMER SWITCH** to the 10 minute or 30 minute position. To turn the unit **OFF**, slide the **ON/OFF/TIMER SWITCH** to the **OFF** position.



#### 2. MODE SELECTOR SWITCH Slide the MODE SELECTOR SWITCH to the music mode, nature sounds mode or white noise mode position.



### 3. VOLUME CONTROL BUTTONS

To adjust the volume, press the **VOLUME** ( $\P$ ) and **VOLUME** ( $\P$ ) buttons.



#### 4. LIGHT PROJECTION BUTTON

Press the **LIGHT PROJECTION BUTTON** to turn the projection light on or off. To preserve battery life, the projection light will automatically turn off after 10 minutes.



### 5. SOUND SENSOR

The VTech<sup>®</sup> Sleepy Lullabies Bear Projector<sup>™</sup> is equipped with a special sound sensor. Once the selected time setting has ended, the unit will automatically power-down. The sensor will reactivate the program when it detects baby's cry for approximately 4 seconds without interruption. The unit will reactivate and play lullabies, nature sounds or white noise depending on the selected mode.

### 6. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech<sup>®</sup> Sleepy Lullabies Bear Projector**<sup>™</sup> will automatically power-down after the selected time has ended. The unit can be turned on again by pressing any button.

### ACTIVITIES

- 1. Slide the **on/off/timer switch** to turn the unit on. You will hear a soothing phrase followed by music or sounds related to the selected mode.
- Press the music button to change to the next melody, song or white noise sound.

## **MELODY LIST:**

- 1. Sweet and Low
- 2. Toyland
- 3. To a Wild Rose
- 4. Spring Song
- 5. Sailing, Sailing
- 6. Moonlight Sonata
- 7. Minuet in G
- 8. Air for the G String
- 9. Bicycle Built for Two
- 10. Eine Kleine Nachtmusik
- 11. Cradle Song





- 13. Beautiful Dreamer
- 14. Fur Elise
- 15. Waltz of the Flowers
- 16. Sleeping Beauty Waltz
- 17. White Coral Bells
- 18. The Four Seasons (Winter)
- 19. The Four Seasons (Fall)
- 20. The Four Seasons (Spring)
- 21. The Four Seasons (Summer)
- 22. Shenandoah
- 23. Serenade
- 24. Minuet
- 25. Grandfather's Clock
- 26. Clair de lune
- 27. Piano Sonata C K545 1st Movement
- 28. All the Pretty Little Horses
- 29. Brahms Lullaby
- 30. Au claire de la lune

# SUNG SONG LYRICS

#### SONG 1

Good night, baby. Good night, baby. Good night, baby, It's time to go to bed. Merrily, we roll along, roll along, roll along. Merrily, we roll along, it's off to sleep we go.

#### SONG 2

Twinkle, twinkle little star, How I wonder what you are. Up above the world so high, Like a diamond in the sky. Twinkle, twinkle little star, How I wonder what you are.

### **CARE & MAINTENANCE**

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

### TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- 5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

#### **IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.OPERATION IS SUBJECTTO THE FOLLOWING TWO CONDITIONS:(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION. *CAN ICES-3 (B)/NMB-3(B)* 

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### PRODUCT WARRANTY

# vtech

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service.

against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our web site at www.vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.