

vtech[®]

User's Manual

Grow-Along Music Center™



© 2014 VTech
Printed In China
91-002934-008 (US)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at VTech®

To learn more about the **Infant Learning**® series and other VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Grow-Along Music Center™** learning toy.

Show off your singing skills with the **Grow-Along Music Center™** by **VTech®**. Your child can sing along to the music and change the sound of their voice with the fun voice effect selector. They can also play the piano keys and learn about instruments, colors and animals.

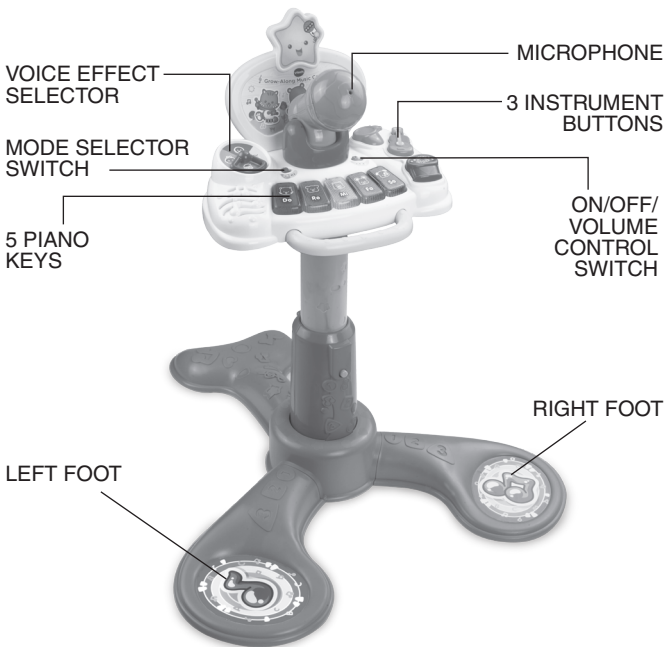

INCLUDED IN THIS PACKAGE

 
- User's manual
- 3 screws



- 1 VTech® Grow-Along Music Center™
- 1 height adjustable support post
- 1 left foot
- 1 support base
- 1 right foot
- 1 handle

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

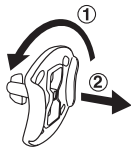


- ① Rotate the packing locks 90 degrees counter-clockwise
- ② Pull out the packing locks

NOTE: Please keep this instruction manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the Activity Panel. Use a coin or a screwdriver to loosen the screw.
3. Install 3 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

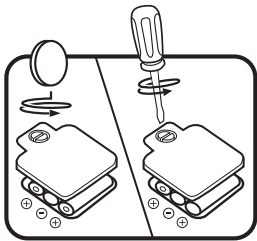


BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.


ASSEMBLY INSTRUCTIONS

With the VTech® Grow-Along Music Center™, safety comes first. To ensure your child's safety, adult assembly is required.

 
1. Insert the left foot and the right foot into the slots on the bottom of the support base. You will hear the feet click into place when inserted correctly.

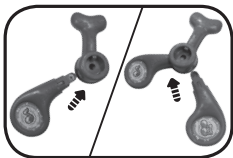

 2. Insert the height adjustable support post into the recessed slot on the top of the support base.

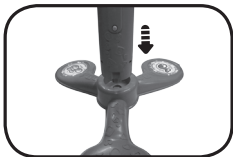

 
3. Turn the support base over and insert the three screws into the underside of the base. Use a screwdriver to secure the screws.

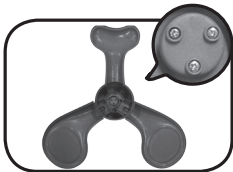

 4. Insert the handle into the two holes on the front of the activity panel until you hear the handle click into place.


 



5. Insert the electronic panel into the top of the height adjustable support post. The electronic panel will lock into position when inserted correctly.
6. Press the buttons on both side of the height adjustable support post to adjust the height.

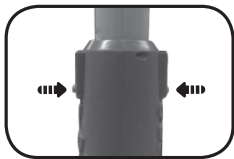

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** () position.



2. MODE SELECTOR SWITCH

Slide the **MODE SELECTOR SWITCH** to the **LEARNING MODE** (), or **MUSIC MODE** () position.



3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Grow-Along Music Center™** will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a welcoming phrase, playful sounds, short tunes and a sung song, depending on the selected mode. The lights will flash with the sound.
2. Press the **5 light-up piano keys** to learn about colors and animals and hear fun sing-along songs in the Learning Mode. In the Music Mode, you will hear individual piano notes and short tunes. The lights will flash with the sounds.
3. Press the **3 instrument buttons** to learn about instruments and instrument sounds in the Learning Mode and hear a variety of short tunes and melodies in the Music Mode. The lights will flash with the sounds.
4. Turn the **voice effect selector** to change the style of your voice when singing into the microphone. Choose from regular voice, robot voice, high pitched voice and low pitched voice. The lights will flash with the sounds.



5. Sing into the **microphone** to hear your voice amplified. When you are using the microphone you will hear fun sounds to encourage you to keep using the microphone. The lights will flash with the sounds.



MELODY LIST:

1. The Entertainer
2. Daisy Bell
3. Clementine
4. Chicken Reel
5. Animal Fair
6. Toyland
7. Yellow Rose of Texas
8. Farmer in the Dell
9. Diddle Diddle Dumpling
10. Jack and Jill
11. Little Bo Peep
12. Pat-a-cake
13. Sailing, Sailing
14. Skip to My Lou
15. Three Blind Mice

SUNG SONG LYRICS

SONG 1

Sing and play,
Dance and sway!
You can sing and you can play,
With your microphone every day!

SONG 2

Let's sing a scale,
Do, Re, Mi, Fa, So.

SONG 3

There was a farmer had a dog,
And Bingo was his name-o.
B-I-N-G-O
B-I-N-G-O
B-I-N-G-O
And Bingo was his name-o.

SONG 4

Three little kittens,
They lost their mittens,
And they began to cry.
Three little kittens,
They found their mittens,
And they began to cry.

SONG 5

Old MacDonald had a farm, E-I-E-I-O.
On his farm he had a pig, E-I-E-I-O.
With an oink-oink here and an oink-oink there,
Old MacDonald had a farm E-I-E-I-O.

SONG 6

Hickory, dickory, dock!
The mouse ran up the clock;
The clock struck one,
The mouse ran down,
Hickory, dickory, dock!
The clock struck one,
The mouse ran down,
Hickory, dickory, dock!

SONG 7

The bear went over the mountain,
The bear went over the mountain,
The bear went over the mountain,
To see what he could see.
To see what he could see,
To see what he could see.
The bear went over the mountain,
The bear went over the mountain,
The bear went over the mountain,
To see what he could see.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

