 


**vtech**<sup>®</sup>

User's Manual

**Go! Go! Smart Wheels**<sup>®</sup>  
Playtime with miles of learning!<sup>™</sup>

**Treasure Mountain Train Adventure**<sup>™</sup>

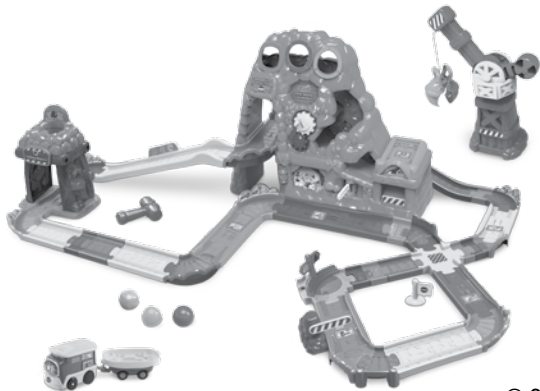

© 2016 VTech  
All rights reserved  
**Printed in China**  
91-003240-011 <sup>®</sup>

Dear Parent,

Welcome to the world of **Go! Go! Smart Wheels**®! We're excited you've decided to ride along with us and explore all that **Go! Go! Smart Wheels**® has to offer. These toys have been designed to give your child a thrilling learning experience with hours and hours of fun as well.

**Go! Go! Smart Wheels**® features vehicles that interact with your child by lighting up, singing and talking, while teaching your child letters and vehicle names (each sold separately). There are other surprises in store, too! With our innovative **SmartPoint**® technology, available on **Go! Go! Smart Wheels**® playsets (each sold separately), your child will smile as they hear **SmartPoint**® vehicles respond to each unique **SmartPoint**® location with singing, sound effects and fun phrases.

Our **Go! Go! Smart Wheels**® playsets also feature buttons, gears and other mechanical features to encourage the development of your child's fine motor skills. Many of the playsets also have tracks that can be arranged in endless ways, stimulating your child's creativity. In addition, all the **Go! Go! Smart Wheels**® playsets connect to other playsets in the collection, so there's no end to what your child can do!

With **Go! Go! Smart Wheels**®, it's playtime with miles of learning!™


Sincerely,  
Your friends at **VTech**®

To learn more about **VTech**® toys, visit [vtechkids.com](http://vtechkids.com)

# INTRODUCTION

 Thank you for purchasing the **VTech® Go! Go! Smart Wheels® Treasure Mountain Train Adventure™!**


It's a gold rush at the **Go! Go! Smart Wheels® Treasure Mountain Train Adventure™!** Turn on the motorized freight train and watch as it chugs around the tracks through the tunnels and up hills on its own.

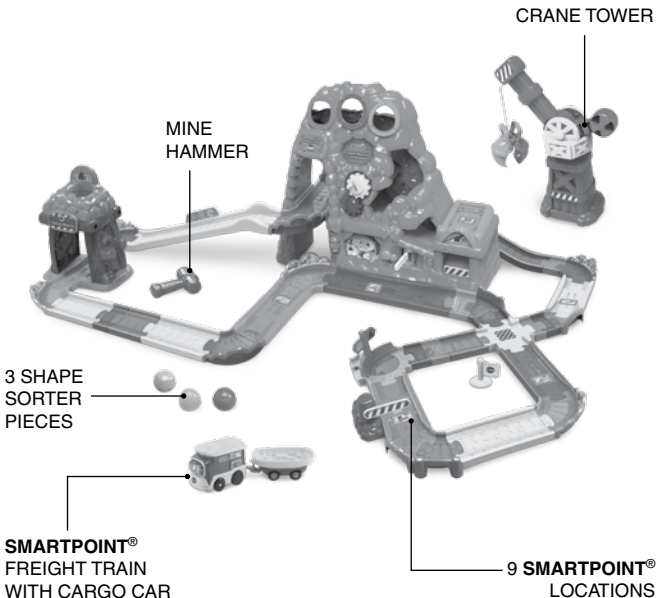

# INCLUDED IN THIS PACKAGE



 One **SmartPoint**® freight train with cargo car

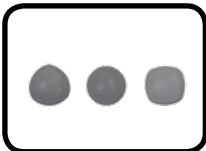

Three shape sorter pieces



One flag accessory



One mountain



One **SmartPoint**® mountain straight track



One gate



One **SmartPoint**® L snap track



One **SmartPoint**® straight track with gate



Two ramp snap tracks



One mine shaft



One **SmartPoint**® mine shaft base



One mine hammer

\*Snap tracks only compatible with other snap tracks.


INCLUDED IN THIS PACKAGE



One 90-degree  
snap track



 
One support

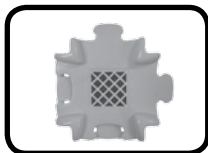

One cross  
track



 One cross  
track sign

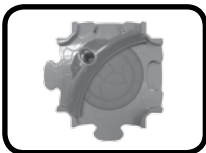

One cross track  
with switch



Eight 1/4  
straight tracks




Three 90-degree  
tracks, female



Three 90-degree  
tracks, male



 Three straight  
tracks

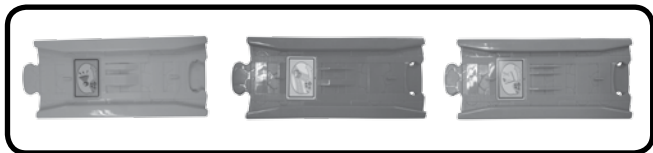

Three **SmartPoint**<sup>®</sup> straight tracks

INCLUDED IN THIS PACKAGE



Two 45-degree tracks, male



Two 45-degree tracks, female



Two 1/2 straight tracks



 
One crane top




One crane base



User's manual

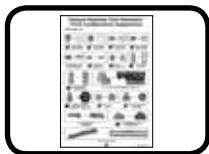

One track configuration sheet

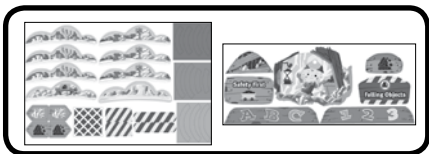 

Two label sheets


**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy and should be discarded for your child's safety.

**ATTENTION :** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep this user's manual as it contains important information.


**Adult assembly required. For your child's safety, do not let your child play with the toy until it is fully assembled.**
 
## Unlock the packaging locks:

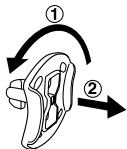

① Rotate the packaging lock counter-clockwise 90 degrees.

 
② Pull out the packaging lock.

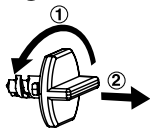

① Turn the packaging lock counter-clockwise several times.

② Pull out and discard the packaging lock.

 
**WARNING:** For your child's safety, only use the motorized freight train on Go! Go! Smart Wheels® train tracks. Do not roll the train on your clothing, body or hair while the motorized train is turned on. If something gets caught in the train's wheels while the motor is on, lift the train up so it is no longer touching your child or slide the mode selector switch to the off position to turn off the motor.

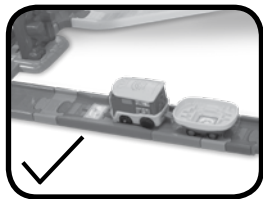

# GETTING STARTED

## BATTERY INSTALLATION – FREIGHT TRAIN

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the rear cabinet of the train. Use a screwdriver to loosen the screw.
3. Install three new “AAA” (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover by laying it flat against the battery slot and tightening the screw to secure it.








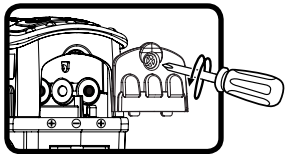


## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.



        Please adhere the labels to the playset as indicated below:

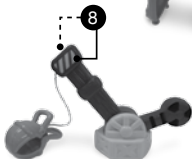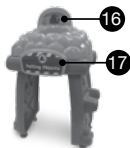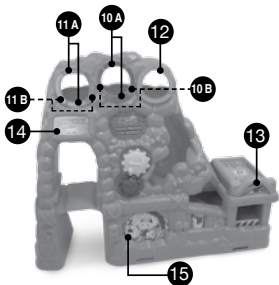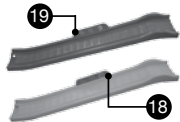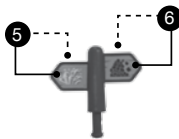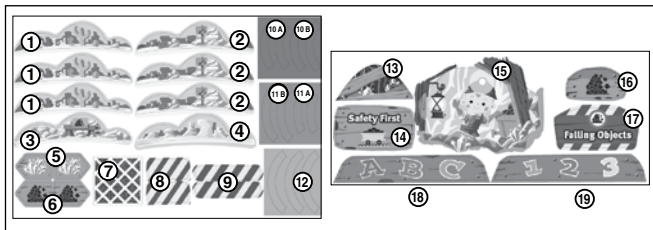


# ASSEMBLY INSTRUCTIONS

With the VTech® Go! Go! Smart Wheels® Treasure Mountain Train Adventure™, safety comes first. To ensure your child's safety, adult assembly is required.



1. Pinch the joint of the cargo car and insert it into the slot on freight train.



 2. Insert the **CRANE BASE** into the slot on the **CRANE TOP** as shown below. You will hear a "click" sound to indicate they are attached securely.

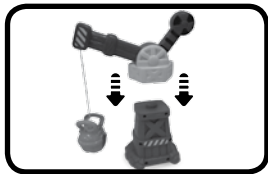

  3. Insert the **GATE** into the slot on the pillar.

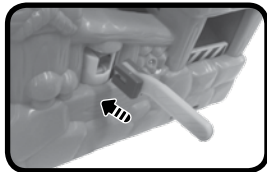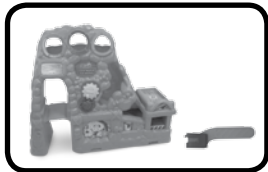


4. Tilt the **SMARTPOINT® MOUNTAIN** and insert the **MOUNTAIN STRAIGHT TRACK** into the slot on the **SMARTPOINT® MOUNTIAN** as shown below. You will hear a “click” sound to indicate that the track is securely attached.





5. Insert the **L SNAP TRACK** into the slot on the **SMARTPOINT® MOUNTAIN** tunnel as shown below.



 6. Attach the **RAMP SNAP TRACK** to the **L SNAP TRACK** as shown below. You will hear a “click” sound to indicate that they are attached securely.

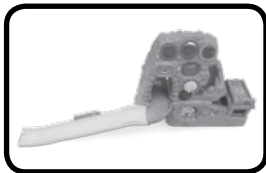

  
7. Insert the **SUPPORT** into the slot on the **90-DEGREE SNAP TRACK**. Then, attach the **90-DEGREE SNAP TRACK** to the **L SNAP TRACK** as shown below. You will hear a “click” sound to indicate that they are attached securely.

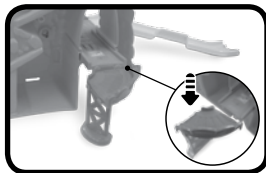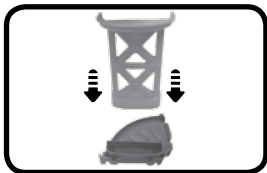


8. Attach the other **RAMP SNAP TRACK** to the **90-DEGREE SNAP TRACK**. You will hear a “click” sound to indicate that they are attached securely.



 
9. Insert the **MINE SHAFT BASE** into the bottom of the **MINE SHAFT** as shown below. You will hear a “click” sound to indicate the pieces are securely attached.

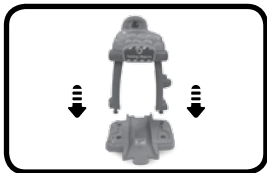

 10. Insert the **CROSS TRACK SIGN** into the slot on the **CROSS TRACK SWITCH** as shown below. You will hear a “click” sound to indicate the signpost is securely attached.

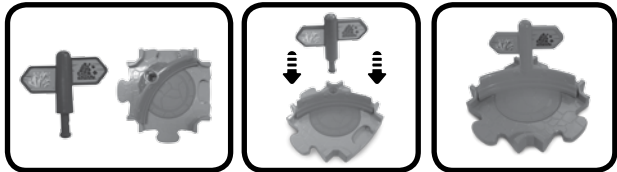


 11. After the above steps, connect these pieces to the included track pieces. You can configure them into different arrangements.

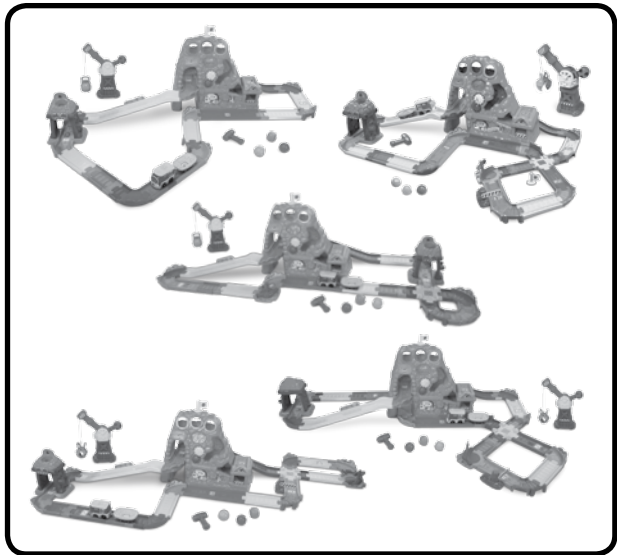

## EXPAND & EXPLORE

 
To expand the **Treasure Mountain Train Adventure™** and inspire creativity, connect to the **Go! Go! Smart Wheels® Train Station Playset** (as shown below). You can also connect to other **Go! Go! Smart Wheels®** and **Go! Go! Smart Animals®** playsets (each sold separately).

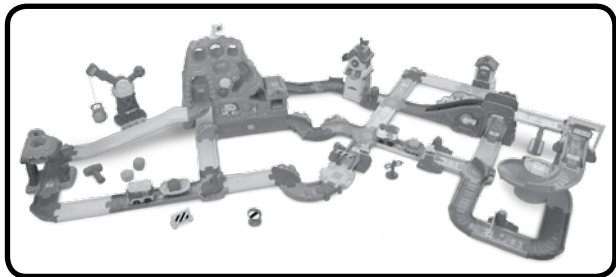

## PRODUCT FEATURES – TRAIN

### 1. OFF/MOTOR SELECTOR SWITCH

 To turn the train **ON**, slide the **OFF/ MOTOR SELECTOR SWITCH** to the **MOTOR MODE ( MOTOR )** or **MANUAL PLAY MODE ( ⏻ )** position. To turn the train **OFF**, slide the **OFF/MOTOR SELECTOR SWITCH** to the **OFF ( ● )** position.

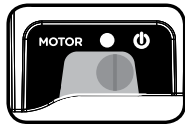


### 2. AUTOMATIC SHUT-OFF

 
To preserve battery life, the included train will automatically power-down after approximately 50 seconds without input while the motor is off. The unit only can be turned on again by pressing the light-up button, pushing the train quickly or triggering a **SmartPoint®** location.

**Note:** This product is in try-me mode in the packaging. After opening the package, turn the vehicle **OFF** and **ON** again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

## ACTIVITIES – FREIGHT TRAIN

1. Slide the **OFF/MOTOR SELECTOR SWITCH** to turn the train **ON**. You will hear a song, phrases and train sounds. The train will move forward automatically when it's in **MOTOR MODE**. (Note: The train's front wheel needs to be on a firm surface in order to trigger the motor.) The light will flash with the sounds.
2. In **MOTOR MODE**, the motor will stop automatically two seconds after you remove the train from the tracks. The motor will restart once the train is put back down.
3. In **MANUAL MODE**, push the train to hear fun sounds and melodies. While a melody is playing, push the train again to add fun sounds on top of the melody. The light will flash with the sounds.
4. Press the light-up button to hear train sounds, phrases and songs. Press and hold the light-up button to stop the motor in **MOTOR MODE**. The motor will restart after the button is released. The light will flash with the sounds.
5. While in **MANUAL MODE**, push the train over **SmartPoint®** locations included in the playset to hear fun sounds and phrases. The light will flash with the sounds.
6. While in **MOTOR MODE**, let the train run through **SmartPoint®** locations included on the playset to hear fun sounds and phrases. The light will flash with sounds.


\*In **MOTOR MODE**, it is best to use on **Go! Go! Smart Wheels®** train (  ) tracks .

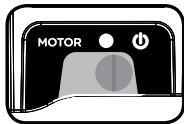

7. While the motor is **OFF**, if there is no input for about 8 seconds, you will hear a sound and phrase. After another 8 seconds of no input, a song will play. If there is no input for an additional 8 seconds, the unit will play a short tune and then go into sleep mode. While the motor is running, you will hear train sounds, then the train will enter sleep mode after 5 minutes of no input. The unit only can be activated by pressing the light-up button, pushing the train quickly or triggering a **SmartPoint®** location.
8. The train in **MANUAL MODE** even interacts with other **Go! Go! Smart Wheels®** and **Go! Go! Smart Animals®** tracks (sold separately).

## ACTIVITIES – TREASURE MOUNTAIN TRAIN ADVENTURE™

 1. Push the train or let the train run through any of the seven **Treasure Mountain Train Adventure™ SmartPoint®** locations to trigger fun sounds, phrases and short tunes.
2. Insert the **SHAPE SORTER PIECES** into the mountain's corresponding shape sorter slots and watch as they tumble down to the mountain base.
3. Run the train across the **MOUNTAIN STRAIGHT TRACK**. Once the train pushes through the **GATE**, it will release the **SHAPE SORTER PIECES** from the mountain and onto the **CARGO CAR**.

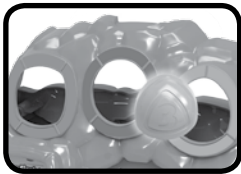





4. Put any **SmartPoint®** vehicle or animal (each sold separately) on the **SmartPoint® CARGO CAR** to get a lift.



 5. Place a **SHAPE SORTER PIECE** on top of the **MINE SHAFT** and tap it through with the **MINE HAMMER** for put-and-take fun!

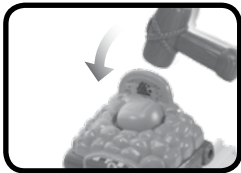

 6. Pick up the **SHAPE SORTER PIECES** with the **CRANE** and rotate the **CRANE** 360 degrees for role-play fun.

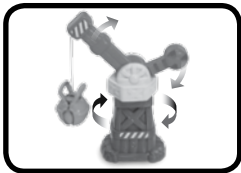

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at [www.vtechkids.com](http://www.vtechkids.com) and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

**IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [www.vtechkids.com](http://www.vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIREED OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our web site at [www.vtechkids.com](http://www.vtechkids.com), filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

**THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.**

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

